

ARCADE1UP 195570000465

Arcade1Up Bandai Namco Entertainment Legacy Edition Arcade Machine User Manual

Brand: **ARCADE1UP** | Model: **195570000465**

INTRODUCTION

The Arcade1Up Bandai Namco Entertainment Legacy Edition Arcade Machine brings classic arcade gaming into your home. This 4-foot machine features a 17-inch color LCD screen, a light-up marquee, and real-feel arcade controls, offering an authentic retro gaming experience. It includes 12 iconic Bandai Namco Entertainment titles, providing unlimited fun for all ages.

KEY FEATURES

- 12 games in 1
- 17" Color LCD screen
- Light-up Marquee
- Real-feel arcade controls
- Coin less operation

SETUP AND ASSEMBLY

The Arcade1Up Bandai Namco Entertainment Legacy Edition Arcade Machine requires assembly. The process typically takes about 1 to 1.5 hours for one person. While tools are not included, an electric drill with a Phillips head bit is highly recommended for easier assembly. All parts and hardware packages are clearly numbered, and pre-drilled holes ensure straightforward construction. The machine includes a custom riser for increased height, and anti-tip over straps are provided for stability, which should be secured to a wall stud for safety.

ASSEMBLED DIMENSIONS



Figure 1: Assembled dimensions of the Arcade1Up Pac-Man machine, highlighting its height with the riser, width, and depth.

OPERATING INSTRUCTIONS

Operating the Arcade1Up machine is intuitive. The control panel features an ON/OFF switch and volume controls. Games are selected from an on-screen menu using the classic joystick. The machine operates coin-free, though it features a decorative coin door graphic for an authentic arcade feel. Players can select between one or two-player modes, and the real-feel arcade controls provide a responsive gaming experience.



Figure 2: Detailed view of the control panel, showing the joystick and buttons for gameplay.

Game Selection: Use the joystick to navigate the game selection menu. Press the 'A' button to select a game. To return to the main menu, hold the 'Start Game' button for 5 seconds. To reset a game, hold the 'Start Game' button for 5 seconds.

Volume Control: Adjust the game volume using the '+VOL-' buttons located on the control panel.

MAINTENANCE

Regular maintenance involves keeping the unit clean and free from dust. Use a soft, dry cloth for cleaning surfaces. Avoid using abrasive cleaners or solvents. Ensure the machine is unplugged before cleaning. No specific internal maintenance is required.

TROUBLESHOOTING

For common issues such as no sound or display problems, first ensure the power cable is securely connected and the ON/OFF switch is in the 'ON' position. Check the volume settings on the control panel. If issues persist, refer to the manufacturer's support resources. For any technical difficulties, contacting Arcade1Up customer support is recommended.

SPECIFICATIONS

Attribute	Value
ASIN	B0921F5TYL
Release Date	March 22, 2021
Product Dimensions	48 x 24 x 13 inches
Item Weight	79.5 pounds
Item Model Number	195570000465
Manufacturer	Arcade 1Up
Type of Item	Video Game

WARRANTY AND SUPPORT

For product support, technical assistance, or warranty information, please contact Arcade1Up customer service. Details can typically be found on the manufacturer's official website or through the retailer where the product was purchased.

MEDIA INTEGRATION NOTES

No official product videos from the seller were available for embedding in this manual.