

[Manuals.plus](#) /

› [ROBUD](#) /

› ROBUD Wooden Kitchen Playset WCF01 Instruction Manual

## ROBUD WCF01

# ROBUD Wooden Kitchen Playset Instruction Manual

Model: **WCF01**

Brand: ROBUD

## 1. IMPORTANT SAFETY INFORMATION

---

**WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.**

Please read all instructions carefully before assembly and use. Keep this manual for future reference. Ensure all packaging materials are removed before giving the toy to a child.

## 2. PRODUCT OVERVIEW

---

The ROBUD Wooden Kitchen Playset is designed to enhance creativity, fine motor skills, and imaginative play for young children. This sturdy wooden playset provides a realistic and engaging environment for pretend cooking.



Image 2.1: Front view of the ROBUD Wooden Kitchen Playset, showcasing the stove, oven, and hanging utensils.

## 2.1. Components and Accessories

The playset includes various components designed for interactive play:

- Main kitchen unit with stove and oven
- Pots and pans
- Wooden cooking utensils
- Salt and pepper shakers



## All Accessories



Image 2.2: Detailed view of all included accessories, such as saucepan, universal lid, bilateral pot, pepper shaker, salt shaker, spoon, spatula, and slotted spatula, with their respective dimensions.

### 3. SETUP AND ASSEMBLY

The ROBUD Wooden Kitchen Playset requires assembly. While generally straightforward, it is recommended that an adult performs the assembly to ensure all parts are correctly and securely fastened.

1. Unpack all components and verify against the parts list provided in the packaging (not included in this manual).
2. Follow the step-by-step assembly diagrams and instructions included with your product packaging.
3. Ensure all screws and fasteners are tightened securely. Do not overtighten.
4. Place the assembled kitchen playset on a flat, stable surface.

If any parts are missing or damaged, please refer to the 'Support' section for assistance.

## 4. OPERATING INSTRUCTIONS AND FEATURES

---

This playset is designed for imaginative role-playing. Children can interact with various features to simulate cooking activities.

### 4.1. Stove Knobs


The stove features interactive knobs that can be turned. These knobs produce a clicking sound, adding realism to the pretend play experience.



Image 4.1: A hand demonstrating the turning of a red stove knob, which produces a clicking sound.

### 4.2. Oven Door

The playset includes a mini oven with a functional door. Children can open and close the oven door to place pretend food inside.

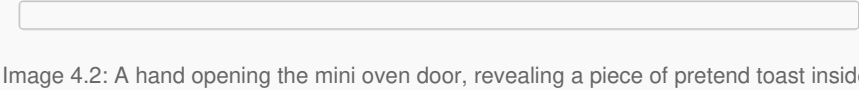

### 4.3. Utensils and Condiments

The playset comes with various wooden utensils and condiment shakers for enhanced role-play. These can be used with the included pots and pans.



Image 4.3: A wooden spatula placed inside a white pan on the playset stove.

## 5. MAINTENANCE

To ensure the longevity and safety of your ROBUD Wooden Kitchen Playset, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a damp cloth and mild soap if necessary. Avoid harsh chemicals or abrasive cleaners. Dry thoroughly immediately after cleaning.
- **Storage:** Store the playset in a dry environment, away from direct sunlight or extreme temperatures, to prevent warping or fading of the wood.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Retighten as needed. Inspect for any signs of wear, damage, or loose parts.
- **Wood Care:** As a wooden toy, minor variations in grain and color are natural. Avoid prolonged exposure to moisture.

## 6. TROUBLESHOOTING

Below are common issues and their potential solutions:

| Issue                                      | Possible Cause / Solution                                                                                                                                                                                                                    |
|--------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Playset tips over when oven door is opened | The oven door's magnetic latch may be strong. Ensure the playset is placed on a stable, level surface. Supervise young children during play. Consider adding non-slip pads to the bottom of the playset if tipping persists.                 |
| Utensils or condiment shakers fall easily  | The hanging hooks or shelf may not provide a tight fit for all accessories. For hanging utensils, ensure they are placed securely. For shakers, consider placing them in a basket or designated area if they frequently fall from the shelf. |
| Knobs do not click                         | Check if the knobs are securely attached. If the clicking mechanism is damaged, contact customer support.                                                                                                                                    |

## 7. SPECIFICATIONS

| Feature            | Detail                                     |
|--------------------|--------------------------------------------|
| Model Number       | WCF01                                      |
| Product Dimensions | 11.8 x 7.5 x 16.5 inches (30 x 19 x 42 cm) |
| Item Weight        | 5.3 pounds (2.4 kg)                        |

| Feature         | Detail         |
|-----------------|----------------|
| Recommended Age | 3 years and up |
| Material        | Wood           |
| Manufacturer    | ROBUD          |



## Kitchen Set Dimensions



Image 7.1: Diagram showing the overall dimensions of the ROBUD Wooden Kitchen Playset.

## 8. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact ROBUD customer service

directly. Refer to the contact information provided on your product packaging or the official ROBUD website. Please have your model number (WCF01) and purchase date available when contacting support.

© 2023 ROBUD. All rights reserved.

**ASK A QUESTION ABOUT THIS MANUAL**

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question