

[Manuals.plus](#) /

› [TFCFL](#) /

› TFCFL Modern Ceiling Chandelier Fan User Manual

TFCFL High-36 Inch (B0922LCH78)

TFCFL Modern Ceiling Chandelier Fan

MODEL: HIGH-36 INCH (ASIN: B0922LCH78)

Introduction

Thank you for choosing the TFCFL Modern Ceiling Chandelier Fan. This innovative product combines the functionality of a ceiling fan with the elegant aesthetics of a crystal chandelier. Its unique design features retractable blades that automatically extend when the fan is in operation and retract discreetly when turned off, allowing the fixture to appear as a beautiful crystal chandelier. This manual provides essential information for safe installation, operation, and maintenance of your new ceiling fan.

Safety Information

Please read all instructions carefully before beginning installation and retain this manual for future reference. Improper installation or use can lead to electric shock, fire, or personal injury.

- **Electrical Safety:** Ensure the power supply is disconnected at the circuit breaker before installation or maintenance. All wiring must be in accordance with national and local electrical codes. If you are unsure, consult a qualified electrician.
- **Mounting:** The mounting structure must be capable of supporting the weight of the fan (approximately 24.2 pounds). Do not mount to plasterboard or drywall alone.
- **Blade Clearance:** Ensure there is adequate clearance between the fan blades and any obstacles, including walls and furniture, when the blades are extended.
- **Cleaning:** Always turn off the fan and disconnect power before cleaning. Use a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Children and Pets:** Keep children and pets away from the fan during operation and installation.

Package Contents

Carefully unpack all components and check against the list below. If any parts are missing or damaged, contact customer service immediately.

- Ceiling Fan Motor Housing with Retractable Blades
- Crystal Chandelier Light Kit
- Remote Control
- Down Rods (4 inches and 9.8 inches)
- Mounting Bracket

- Canopy
- Hardware Pack (screws, wire nuts, etc.)
- User Manual



Image: Overview of all components included in the product package, including the fan unit, light kit, remote, and installation hardware.

Setup and Installation

Professional installation is recommended for this product. Ensure all power is disconnected before proceeding.

1. **Prepare Mounting Location:** Turn off power at the circuit breaker. Securely attach the mounting bracket to a ceiling joist or a fan-rated electrical box capable of supporting the fan's weight.
2. **Assemble Down Rod:** Choose the desired down rod (4 inches or 9.8 inches) and attach it to the fan motor housing. Feed the electrical wires through the down rod.
3. **Hang Fan Assembly:** Carefully lift the fan assembly and hang it on the mounting bracket using the provided hook or ball-and-socket mechanism.
4. **Wire Connections:** Connect the fan's electrical wires to the household wiring according to the wiring diagram in the full manual. Use wire nuts to secure connections. Ensure proper grounding.
5. **Attach Canopy:** Slide the canopy up to the ceiling and secure it to the mounting bracket with the provided screws, covering the wiring connections.
6. **Install Light Kit:** Connect the light kit's wires to the fan's light kit wires. Secure the crystal chandelier light kit to the bottom of the fan motor housing.
7. **Install Crystal Balls:** Attach the individual crystal balls to the designated hanging pins on the light kit.

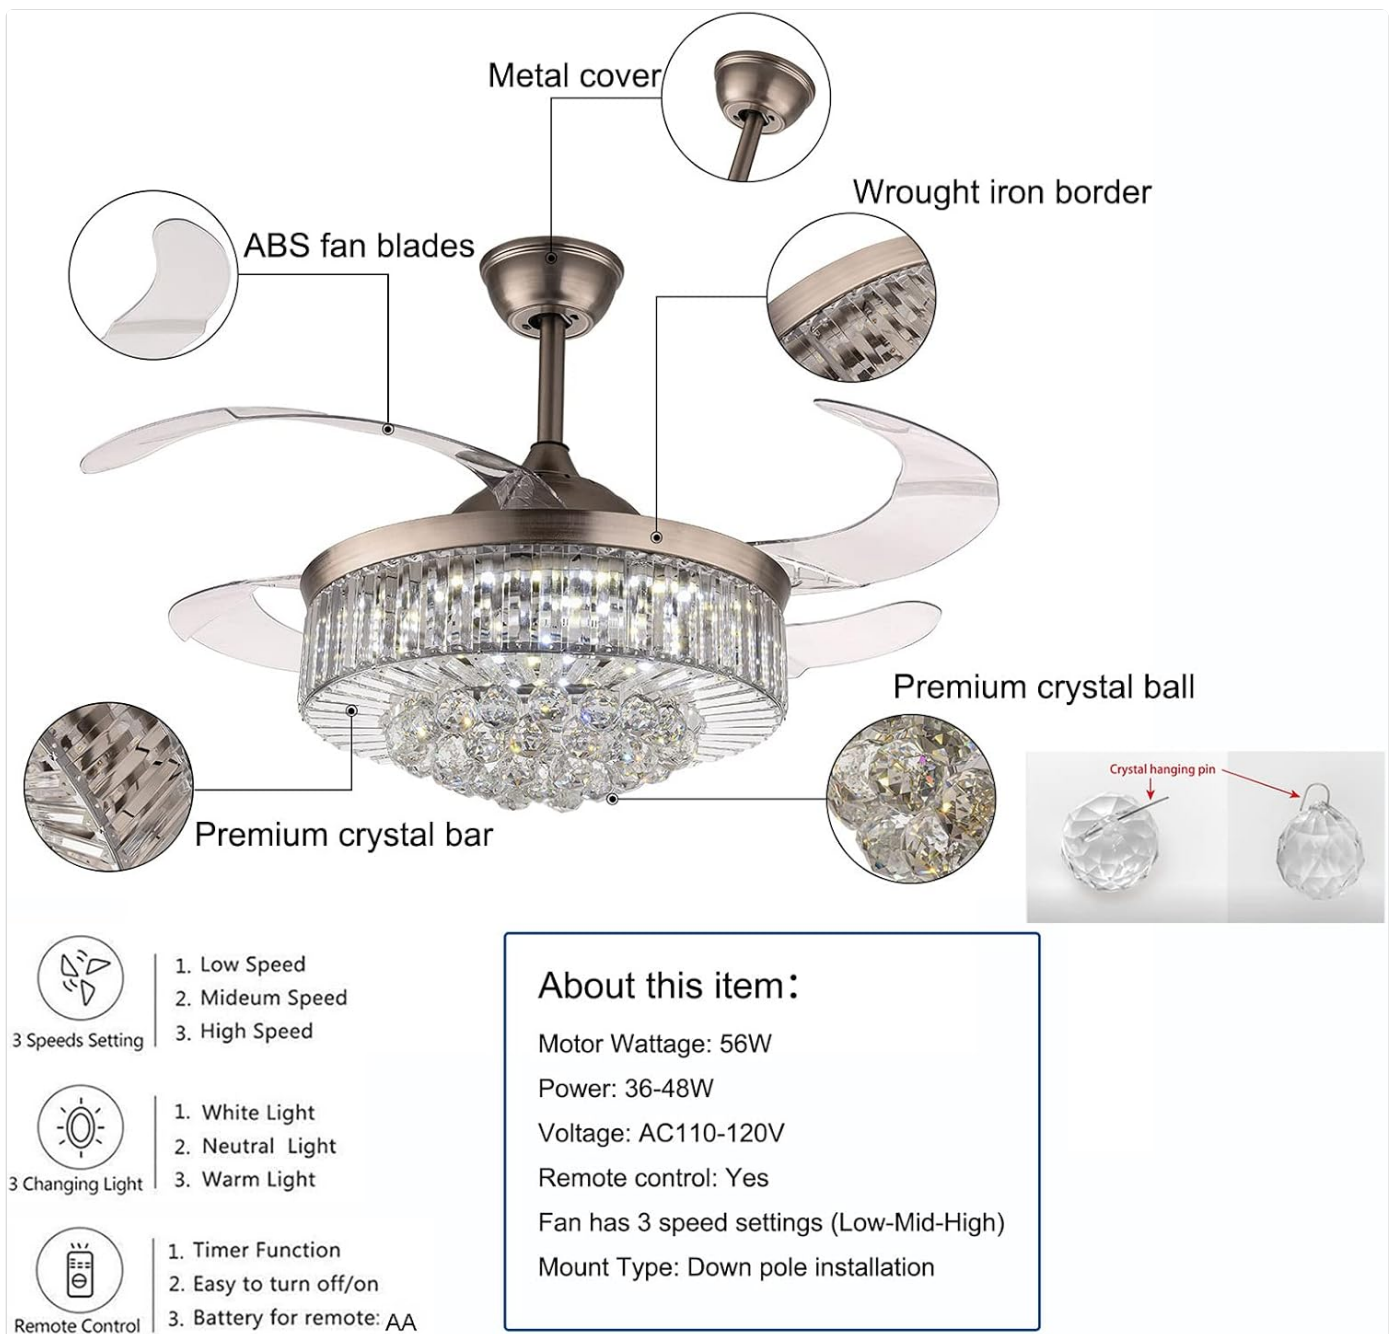


Image: Exploded view diagram illustrating the main components of the fan and light assembly, including the motor, blades, and crystal elements.



Image: Detailed close-up of the premium crystal bar and crystal balls that form the chandelier light fixture.

Operating Instructions

The TFCFL Ceiling Chandelier Fan is operated using the included remote control. Ensure batteries are installed in the remote (not included).



Image: The TFCFL ceiling fan in operation with blades extended, alongside its remote control, demonstrating air movement.

- **Power On/Off:** Press the 'ON/OFF' button on the remote to turn the fan and light on or off.
- **Fan Speed Control:** Use the 'LOW', 'MED', and 'HIGH' buttons to adjust the fan speed. The blades will automatically extend when the fan is turned on and retract when turned off.
- **Light Control:**
 - **Brightness Change:** The LED light offers 3 color changes: Warm Light, Neutral Light, and White Light. Press the 'LIGHT' button repeatedly to cycle through these color temperatures.
 - **Light On/Off:** Use the dedicated light button on the remote to turn the light on or off independently of the fan.
- **Timer Function:** The remote control may include timer settings (e.g., 1H, 2H, 4H, 8H) to automatically turn off the fan after a set period.



Warm light


Neutral light

White light

Image: Visual representation of the three available light color temperatures: Warm light, Neutral light, and White light, demonstrating the dimmable feature.

Fan work

3 color temperature

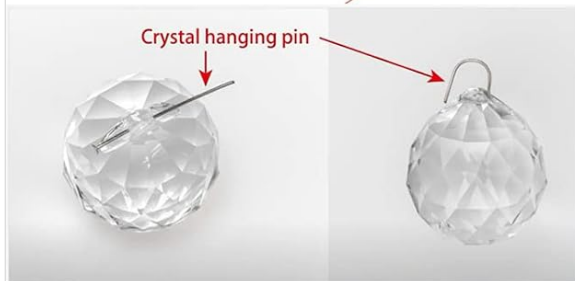

Fan off



Image: Comparison showing the fan with its blades extended during operation and with its blades retracted when turned off, illustrating the invisible blade design.

Maintenance

Regular maintenance will help prolong the life and appearance of your ceiling fan.

- **Cleaning:** To clean the fan, wipe the surfaces with a soft, damp cloth. For the crystal components, use a mild glass cleaner if necessary, applied to the cloth, not directly to the crystals. Do not use abrasive materials or harsh chemicals.
- **Blade Cleaning:** The ABS fan blades can be wiped clean with a soft, dry or slightly damp cloth.
- **Tighten Fasteners:** Periodically check all screws and fasteners on the fan and mounting hardware to ensure they are secure.

Troubleshooting

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not operate	No power; Loose wiring; Remote control battery dead	Check circuit breaker; Verify all wire connections are secure; Replace remote control batteries.
Light does not turn on	Loose wiring; LED driver issue	Check light kit wiring connections; Contact customer service if LED driver is suspected.
Remote control not working	Batteries dead or incorrectly inserted; Remote not paired	Replace batteries, ensuring correct polarity; Refer to full manual for remote pairing instructions if applicable.
Fan makes excessive noise	Loose screws; Unbalanced blades	Check and tighten all screws on the fan housing and mounting bracket; Ensure blades are properly seated.

If the problem persists after attempting these solutions, please contact TFCFL customer service for further assistance.

Specifications

Feature	Detail
Brand	TFCFL
Model	High-36 Inch
Electric Fan Design	Ceiling Fan
Power Source	AC
Style	Modern
Room Type	Home Office, Living Room, Bedroom, Kitchen
Special Feature	Dimmable LED Light, Retractable Blades
Noise Level	30 Sones
Wattage	38 watts (Light), 56 watts (Motor)
Finish Type	Brushed
Number of Blades	4 (Retractable)
Voltage	110 Volts
Included Components	Remote Control
Indoor/Outdoor Usage	Indoor
Control Method	Remote
Blade Material	Acrylic
Shade Material	Acrylonitrile Butadiene Styrene, Stainless Steel, Crystal, Metal, Acrylic
Assembled Diameter	36 inches (extended), 19 inches (retracted)
Item Weight	24.2 pounds

Feature	Detail
Light Bulb Type	LED
Color Temperature	3000 Kelvin (Warm), Neutral, White

Warranty and Support

TFCFL provides a free replacement or return service within 30 days of purchase. For any issues encountered during installation or use, please contact TFCFL customer service. Please refer to your purchase documentation for specific warranty terms and contact information.

© 2023 TFCFL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question