



Manuals.plus /

› Proscenic /

› Proscenic T22 5L Air Fryer Instruction Manual

## Proscenic T22

# Proscenic T22 5L Air Fryer Instruction Manual

Model: T22

## 1. INTRODUCTION

---

Welcome to your new Proscenic T22 5L Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods with less oil. Please read this manual thoroughly before first use to ensure safe and efficient operation. Keep this manual for future reference.

## 2. IMPORTANT SAFETY INFORMATION

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- Ensure the basket is properly inserted before operating.
- Do not block any ventilation openings.

## 3. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Proscenic T22 Air Fryer.



Figure 3.1: The Proscenic T22 5L Air Fryer features a compact design with a large capacity basket.

# ASH 2.0 テクノロジー

360°高速空気循環技術により、食材の旨味を閉じ込める



7倍の空気循環スピード

調理効率30%アップ

運転音を20%低減

Figure 3.2: The removable basket allows for easy loading and unloading of food.

## 4. INITIAL SETUP

Before using your air fryer for the first time, follow these steps:

1. Unpack all components and remove any packaging materials.
2. Wipe the main unit with a damp cloth.
3. Wash the basket and crisper plate with warm, soapy water, then rinse and dry thoroughly.
4. Place the air fryer on a stable, heat-resistant surface, ensuring adequate ventilation around the unit.
5. Plug the power cord into a grounded electrical outlet.

Video 4.1: This video illustrates the initial preparation of food, placing it into the air fryer, and setting the cooking parameters using the touch panel.

## **5. OPERATING INSTRUCTIONS**

---

### **5.1 Basic Operation**

The Proscenic T22 features an intuitive touch panel for easy control.

#### **Power On/Off**

Press the power button on the touch panel to turn the appliance on or off.

#### **Setting Temperature and Time**

Use the dedicated temperature and timer controls on the touch panel to set your desired cooking parameters. The temperature can be adjusted between 75°C and 205°C, and the timer from 1 to 60 minutes.

# アプリ & 音声制御

調理中にもキッチンから離れる。  
専門アプリまたは音声コマンドで調理時間の確認や設定変更などが可能。

Figure 5.1: The intuitive touch panel allows for easy adjustment of temperature and time.

## 5.2 Smart Features (APP Control & Voice Control)

Enhance your cooking experience with smart connectivity.

### App Connection

Download the dedicated Proscenic app to your smartphone. Follow the in-app instructions to connect your air fryer via Wi-Fi. Once connected, you can monitor cooking status, adjust settings, and access recipes remotely.

### Voice Control

The Proscenic T22 is compatible with Amazon Alexa and Google Assistant. Link your air fryer to your smart home

system to control it using voice commands.

7500萬超  
国内転載閲覧数

230+メディア  
から提携され

毎日新聞 朝日新聞 DIGITAL 読経 THE SANKEI NEWS  
読経新聞 オンライン PR TIMES if  
現代ビジネス AllAbout red dot

Figure 5.2: Control your air fryer remotely using the Proscenic app or voice commands with Amazon Alexa and Google Assistant.

### 5.3 Pre-set Menus & Recipes

The appliance features 11 pre-set menus for common dishes, accessible directly from the touch panel. Additionally, the Proscenic app provides access to over 100 electronic recipes, allowing for a wider variety of culinary options.

ヘルシーな料理が楽しめる

油での調理 vs ノンフライヤー

	油での調理	T22 ノンフライヤー	ダウン
ポテト	471kcal	176kcal	▼295kcal
唐揚げ	320kcal	200kcal	▼120kcal
手羽先	531kcal	270kcal	▼261kcal
ステーキ	300kcal	215kcal	▼85kcal
とんかつ	540kcal	360kcal	▼180kcal
コロッケ	519kcal	355kcal	▼164kcal
じゃが芋	370kcal	166kcal	▼204kcal

油を使用せずに食材が揚げられる  
電気フライヤーよりもカロリーや油分が  
**-85%**  
抑えられる

Figure 5.3: The air fryer offers 11 automatic cooking programs and access to over 100 recipes via the companion app.

### 5.4 Shake Reminder Function

For optimal crispiness and even cooking, the air fryer will notify you via the unit and the connected app when it's

time to shake or flip the food in the basket. This ensures all sides of your food are cooked perfectly.

## 安全認証取得済 高品質&高信頼性



Figure 5.4: Receive notifications on the unit and your smartphone when it's time to shake the food for even cooking.

## 6. COOKING TIPS

### 6.1 ASH2.0 Technology

The T22 Air Fryer incorporates advanced ASH2.0 technology, featuring 360° 3D HF circulation. This technology accelerates heat and air convection, resulting in a 30% improvement in cooking efficiency and uniform heating of ingredients. It significantly reduces fat content by up to 85% compared to traditional frying methods, offering a healthier alternative.

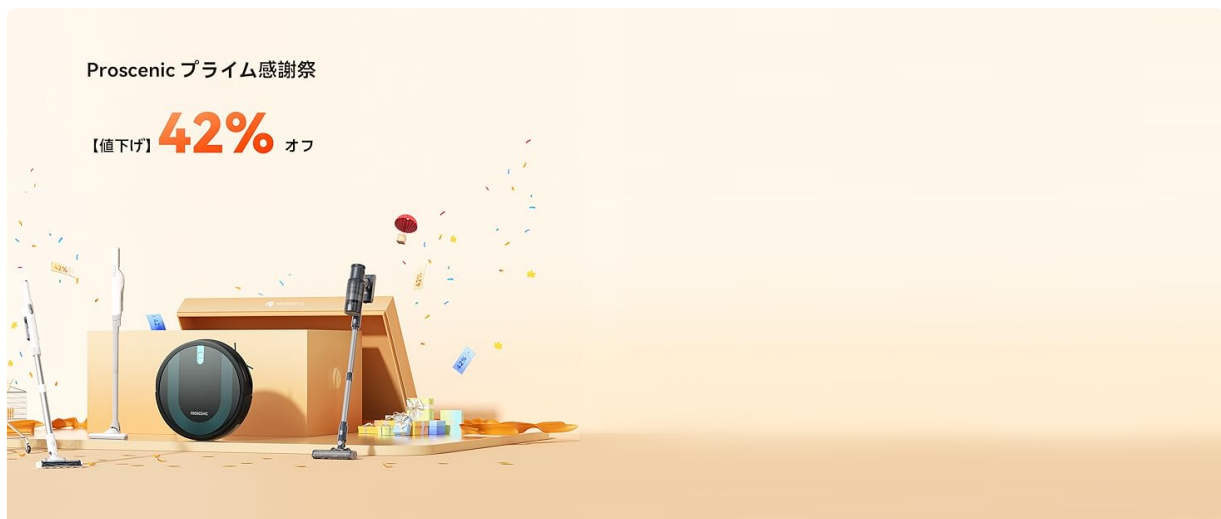


Figure 6.1: Diagram illustrating the 360° 3D HF circulation technology for efficient and healthy cooking.

### 6.2 Preheating and Keep Warm Functions

The Proscenic T22 allows you to set preheating, cooking, and keep warm functions simultaneously. This streamlines the cooking process and ensures your food is ready when you are.

## 7. MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and optimal performance of your air fryer.

### 7.1 Basket and Crisper Plate

The non-stick basket and crisper plate are designed for easy cleaning. They are dishwasher-safe, making post-cooking cleanup simple. For stubborn residue, soak them in warm, soapy water before washing.



Figure 7.1: The removable basket and crisper plate are designed for easy cleaning, including dishwasher compatibility.

### 7.2 Exterior Cleaning

Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.

## 8. TROUBLESHOOTING

---

If you encounter any issues with your Proscenic T22 Air Fryer, please refer to the following common problems and solutions:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet.
- **Food not cooking evenly:** Ensure the basket is not overloaded. Use the shake reminder function to toss food during cooking.
- **White smoke from appliance:** This may occur if cooking fatty foods or if there is residual grease from previous use. Clean the basket and crisper plate thoroughly.
- **App connection issues:** Ensure your air fryer is within Wi-Fi range and your router is functioning correctly. Refer to the app's troubleshooting guide for specific connection steps.

For further assistance, please contact customer support.

## 9. SPECIFICATIONS

---

Feature	Specification
Model Number	T22
Capacity	5 Liters
Wattage	1500 W
Voltage	100 Volts
Control Method	App, Touch, Voice
Controller Type	Amazon Alexa
Non-stick Coating	Yes
Dishwasher Safe Parts	Yes
Color	Black

## 10. WARRANTY AND SUPPORT

Your Proscenic T22 Air Fryer comes with a comprehensive warranty and dedicated customer support.

### 10.1 Warranty Information

The product includes a 1-year manufacturer's warranty. You can extend this warranty by an additional 12 months by registering your product on the official Proscenic website. This extended warranty is available for members only.

## 世界大規模認証機関承認済

国際安全性 & 国際標準化



Figure 10.1: Details on the 12-month standard warranty and an additional 12-month extended warranty for registered users.

### 10.2 Customer Support

For any inquiries or support needs, please use the following contact methods:

- **Via Amazon:** Navigate to "Account Services" > "Order History" > Select your "Order" > Click on the "Seller" > Choose "Ask a question".
- **Phone Support:** 050-5533-2720