

[Manuals.plus](#) /

> [Qmax](#) /

> Qmax Mini 999 High Definition Receiver User Manual

Qmax Mini 999

Qmax Mini 999 High Definition Receiver User Manual

Model: Mini 999 | Brand: Qmax

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Qmax Mini 999 High Definition Receiver. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your viewing experience. Keep this manual for future reference.



This image displays the front panel of the Qmax Mini 999 High Definition Receiver, showing its compact design and basic controls.

PRODUCT FEATURES

- Full HD 1080p Resolution: Enjoy high-definition video output.
- USB Recording and Playback: Record your favorite programs and play media files via the USB port.
- 5000 Channel Memory Capacity: Store a vast number of television and radio channels.
- 32-bit Color On-Screen Display (OSD) Support: User-friendly interface with rich color depth.
- DiSEqC 1.0/1.1/1.2 and USALS Support: Compatible with various satellite dish configurations.
- Multi-language OSD: Supports multiple languages for the on-screen display.
- Multi-language Audio and Subtitle Reception: Access audio and subtitle tracks in different languages.
- Electronic Program Guide (EPG): View program schedules for up to 7 days.
- VBI and OSD Teletext Output: Access teletext information.
- NIT Search Support: Network Information Table search for efficient channel scanning.
- Automatic Satellite and Transponder Search: Simplifies channel setup.
- Software Upgrade via PC, USB, or RS-232 Port: Keep your receiver updated with the latest software.
- Connectivity Feature Supported: Enables various connection options.
- Built-in Games: Provides entertainment options.
- Easy Installation Menu: Streamlined setup process.

- USB PVR Function Support: Personal Video Recorder functionality via USB.

SPECIFICATIONS

Feature	Detail
Manufacturer	Qmax
Item Weight	11 Grams
ASIN	B0923442WJ
Brand Name	Qmax
Connectivity Technology	Wireless Connectivity
Control Type	Mechanical knob and buttons
Special Features	USB PVR Function, Electronic Program Guide, Multi-language OSD, DiSEqC Support
Compatible Devices	Computer
Connector Type	USB
Audio Output Mode	Stereo
Color	Black
Number of Channels	4
Control Method	Touch

SETUP GUIDE

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all accessories, including the remote control, power adapter, and cables, are present.
2. **Connect to TV:** Use an HDMI cable to connect the receiver's HDMI OUT port to an available HDMI IN port on your television. Note the HDMI input number on your TV.
3. **Connect to Satellite Dish:** Connect the coaxial cable from your satellite dish's LNB to the LNB IN port on the back of the receiver.
4. **Power Connection:** Connect the power adapter to the receiver's DC IN port, then plug the adapter into a wall outlet.
5. **Initial Power On:** Turn on your TV and select the correct HDMI input. Power on the receiver. The initial setup wizard should appear on your screen.
6. **Setup Wizard:** Follow the on-screen instructions to select your preferred language, region, and perform a satellite scan to find available channels. Refer to the 'Operating Instructions' section for more details on channel scanning.

OPERATING INSTRUCTIONS

Remote Control Functions

Familiarize yourself with the remote control buttons for easy navigation and control.

- **Power Button:** Turns the receiver on or off (standby mode).
- **Channel Up/Down:** Changes channels sequentially.
- **Volume Up/Down:** Adjusts the audio volume.
- **Numeric Buttons (0-9):** Directly enter channel numbers.
- **Menu Button:** Accesses the main menu for settings and features.
- **OK Button:** Confirms selections or displays channel information.
- **Navigation Buttons (Up/Down/Left/Right):** Navigate through menus and options.
- **Exit Button:** Exits current menu or screen.
- **EPG Button:** Opens the Electronic Program Guide.
- **PVR/Record Button:** Initiates recording (requires a connected USB storage device).
- **Play/Pause/Stop Buttons:** Controls media playback.

Channel Management

To scan for channels or manage existing ones:

1. Press the **Menu** button on your remote.
2. Navigate to 'Installation' or 'Channel Search'.
3. Select 'Satellite Scan' or 'Automatic Search'.
4. Choose your satellite and transponder settings if prompted.
5. Start the scan. Once complete, channels will be saved.

Using PVR Function

To record programs, connect a USB storage device (e.g., USB flash drive or external hard drive) to the receiver's USB port.

- **Instant Record:** While watching a program, press the **Record** button on the remote. Press it again to stop recording.
- **Scheduled Record:** Use the EPG to select a program, then choose the record option to schedule a future recording.
- **Playback:** Access recorded content through the 'Media' or 'PVR' menu.

MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the receiver's exterior. Do not use liquid cleaners or abrasive materials.
- **Ventilation:** Ensure the receiver has adequate ventilation. Do not block any ventilation openings.
- **Software Updates:** Periodically check the manufacturer's website for software updates. Updates can improve performance and add new features. Follow the instructions provided with the update file for installation via USB or RS-232.
- **Storage:** If storing the receiver for an extended period, disconnect it from power and store it in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Power cable disconnected; Power outlet faulty; Receiver in standby.	Check power connections; Try a different outlet; Press the power button on the remote or receiver.

Problem	Possible Cause	Solution
No Signal	Satellite cable loose/damaged; Dish misalignment; Incorrect satellite settings.	Check LNB IN cable connection; Ensure dish is properly aligned; Verify satellite settings in the menu.
No Picture/Sound on TV	Incorrect TV input; HDMI cable loose/faulty; TV volume muted.	Select correct HDMI input on TV; Check HDMI cable connections; Unmute TV or increase volume.
Remote Control Not Working	Batteries depleted/incorrectly inserted; Obstruction between remote and receiver; Remote sensor blocked.	Replace batteries; Ensure clear line of sight; Clean receiver's remote sensor.
Cannot Record to USB	USB device not connected; USB device not formatted correctly; Insufficient storage space.	Connect USB device; Format USB device to FAT32 or NTFS (refer to receiver settings); Free up space on USB device.

WARRANTY AND SUPPORT

Warranty information for the Qmax Mini 999 High Definition Receiver is typically provided with the product packaging or purchase documentation. Please refer to these materials for details regarding warranty coverage, terms, and conditions. For technical support, service, or further inquiries, please contact the retailer where you purchased the product or the official Qmax customer service channels. Contact information can usually be found on the product packaging or the manufacturer's official website.