

Rohs ROHS-ASDK2

ROHS RGB Extended Gaming Mouse Pad User Manual

Model: ROHS-ASDK2

1. INTRODUCTION

Thank you for purchasing the ROHS RGB Extended Gaming Mouse Pad. This manual provides detailed instructions on how to set up, operate, and maintain your new mouse pad to ensure optimal performance and longevity. This extended mouse pad is designed for gamers, offering a large surface area, vibrant RGB lighting, and a durable, waterproof design.



Image 1.1: The ROHS RGB Extended Gaming Mouse Pad, illustrating its full size and the illuminated RGB edges. A portion of the pad is shown rolled up, highlighting its flexible material.



Image 1.2: The extended mouse pad positioned on a desk with a gaming keyboard, showcasing its ample surface area designed to comfortably fit both a keyboard and mouse.

2. FEATURES

- **Extended Size:** Dimensions of 800x300x4mm provide ample space for both keyboard and mouse.
- **RGB Lighting:** Features 12 distinct lighting modes for customizable aesthetics.
- **Waterproof Surface:** Designed to resist spills and facilitate easy cleaning.
- **Stitched Edges:** Enhances durability and prevents fraying over time.
- **Braided Cable:** Durable USB cable for reliable power connection.
- **Anti-Slip Rubber Base:** Ensures the mouse pad remains firmly in place during use.
- **Ultra Smooth Surface:** Optimized for precise mouse control and movement.

Ultra Smooth Surface

Offer swift mouse control and movement and great gaming experience



Image 2.1: Depiction of the mouse pad's ultra-smooth surface, designed for optimal mouse tracking and movement. The vibrant RGB lighting along the edges is also visible.

3. SETUP

- 1. Unpack the Mouse Pad:** Carefully remove the mouse pad from its packaging. Allow it to unroll and flatten completely on a clean, flat surface.
- 2. Position the Mouse Pad:** Place the mouse pad on your desk or desired gaming surface. Ensure the anti-slip rubber base is in full contact with the surface to prevent movement.
- 3. Connect Power:** Locate the braided USB cable attached to the mouse pad's control module. Insert the USB-A connector into an available USB port on your computer, laptop, or a compatible USB power adapter.
- 4. Power On:** Once connected, the RGB lighting on the mouse pad should illuminate automatically, indicating it is powered on.

Switch Color Freely with One Control Button



Image 3.1: Detailed view of the control button and the USB connection port on the mouse pad, illustrating where the braided cable connects for power.

4. OPERATING INSTRUCTIONS

The ROHS RGB Extended Gaming Mouse Pad features a single control button to manage its lighting effects.

- **Changing Lighting Modes:** Press the control button (located on the small module connected to the USB cable) to cycle through the 12 available RGB lighting modes. Each press will switch to the next mode.
- **Power On/Off:** Press and hold the control button for approximately 3 seconds to turn the RGB lighting on or off. The mouse pad itself does not have a separate power switch for the pad's functionality, only for the lighting.
- **Memory Function:** The mouse pad will remember your last selected lighting mode when powered off and on again.

12 RGB Backlight



Image 4.1: Visual representation of the 12 distinct RGB backlight modes available on the mouse pad, demonstrating the variety of color options.

5. MAINTENANCE

Proper maintenance will extend the life and appearance of your mouse pad.

- **Cleaning the Surface:** Due to its waterproof design, spills can be easily wiped away. Use a damp cloth with mild soap and water to clean the surface. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Ensure the mouse pad is completely dry before reconnecting power, especially around the control module and USB port.
- **Storage:** When not in use for extended periods, you can gently roll up the mouse pad for storage. Avoid sharp folds or creases.
- **Avoid Extreme Temperatures:** Do not expose the mouse pad to extreme heat or cold, as this may damage the material or electronics.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
RGB lighting does not turn on.	<ul style="list-style-type: none">USB cable not properly connected.USB port is faulty or lacks power.Lighting is turned off (held button).	<ul style="list-style-type: none">Ensure the USB cable is securely plugged into a working USB port.Try a different USB port or a different power source (e.g., a wall adapter).Press and hold the control button for 3 seconds to turn the lighting on.
Lighting modes do not change.	<ul style="list-style-type: none">Control button malfunction.	<ul style="list-style-type: none">Ensure you are pressing the button firmly.Disconnect and reconnect the USB cable to reset the device.
Mouse tracking is inconsistent.	<ul style="list-style-type: none">Mouse pad surface is dirty.Mouse sensor issue.	<ul style="list-style-type: none">Clean the mouse pad surface as per maintenance instructions.Test your mouse on a different surface to rule out mouse issues.

7. SPECIFICATIONS

Attribute	Detail
Brand	Rohs
Model Number	ROHS-ASDK2
Dimensions (L x W x H)	800 x 300 x 4 mm
Item Weight	284 g (0.63 Pounds)
Material	Rubber
Color	Tan
Special Features	Waterproof, Non-slip, Durable
Lighting Modes	12 RGB modes

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Rohs website. Keep your proof of purchase for any warranty claims.

Manufacturer: Rohs

Date First Available: 8 April 2021

