

Home XJ-14409

Home Stand Mixer XJ-14409 User Manual

Model: XJ-14409 | Brand: Home

1. INTRODUCTION

Thank you for purchasing the Home Stand Mixer XJ-14409. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your appliance. Please read this manual thoroughly before using the mixer and keep it for future reference.

Important Safety Instructions

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from beaters during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Always operate the mixer on a dry, stable, and level surface.
- Ensure the mixer head is securely locked down before operation.

2. PRODUCT OVERVIEW

The Home Stand Mixer XJ-14409 is designed for efficient mixing, beating, and kneading. It features a powerful motor and a durable stainless steel bowl.

Components and Features

- **Motor Unit:** Houses the 300W motor and control panel.
- **Mixing Head:** Tilts back for easy attachment and bowl access.
- **Attachment Port:** For connecting the whisk or dough hook.
- **Stainless Steel Bowl:** 3.5-liter capacity, designed for rotation during operation.
- **Whisk Attachment:** Ideal for whipping cream, egg whites, and light batters.
- **Dough Hook Attachment:** Perfect for kneading bread dough and other heavy mixtures.
- **Speed Control Dial:** Offers 6 variable speeds.
- **Attachment Ejection Button:** For easy removal of attachments.



Figure 1: Home Stand Mixer XJ-14409. This image shows the vibrant red stand mixer, model XJ-14409, with its stainless steel mixing bowl and a dough hook attachment. The mixer head is tilted back, providing a clear view of the attachment mechanism.

3. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the mixer on a clean, dry, stable, and level surface. Ensure there is enough space around the mixer for operation and ventilation.
3. **Cleaning Before First Use:** Before first use, clean the stainless steel bowl and attachments (whisk, dough hook) with warm soapy water. Rinse thoroughly and dry completely. Wipe the motor unit with a damp cloth.
4. **Attaching the Bowl:** Place the stainless steel bowl onto the base of the mixer. Twist gently clockwise until it locks securely into place.
5. **Attaching Accessories:**
 - Ensure the mixer is unplugged and the speed control is set to "OFF".
 - Press the head-release button (if applicable) and tilt the mixing head back.
 - Insert the desired attachment (whisk or dough hook) into the attachment port. Push upwards and twist until it clicks into place.
 - Lower the mixing head until it locks securely.

6. **Power Connection:** Plug the power cord into a 220V, 50Hz electrical outlet.

4. OPERATING INSTRUCTIONS

1. **Adding Ingredients:** With the mixer head tilted back, add your ingredients to the stainless steel bowl. Do not overfill the bowl.
2. **Lowering the Head:** Gently lower the mixing head until it clicks and locks into its operating position.
3. **Selecting Speed:** Turn the speed control dial to the desired speed setting (1-6). Start with a lower speed to prevent splashing, then gradually increase as needed.
 - **Speed 1-2:** For kneading dough, mixing heavy batters.
 - **Speed 3-4:** For mixing medium batters, creaming butter and sugar.
 - **Speed 5-6:** For whipping egg whites, cream, and light mixtures.
4. **Mixing:** Allow the mixer to operate until ingredients are thoroughly combined. The bowl rotates automatically during operation to ensure even mixing.
5. **Stopping Operation:** Turn the speed control dial back to the "OFF" position.
6. **Removing Attachments and Bowl:**
 - Unplug the mixer from the power outlet.
 - Press the head-release button and tilt the mixing head back.
 - Press the attachment ejection button to release the attachment. Carefully remove it.
 - Twist the stainless steel bowl counter-clockwise to unlock and remove it from the base.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Home Stand Mixer.

Cleaning

- **Always unplug the mixer before cleaning.**
- **Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Stainless Steel Bowl and Attachments:** The stainless steel bowl, whisk, and dough hook are dishwasher safe, or can be washed by hand in warm, soapy water. Rinse thoroughly and dry immediately to prevent water spots.
- **Stubborn Residue:** For stubborn residue, soak the bowl and attachments in warm soapy water for a few minutes before cleaning.
- **Storage:** Store the mixer and its accessories in a clean, dry place.

Maintenance

- Regularly check the power cord for any signs of damage. If damaged, do not use the appliance and contact customer support.
- Ensure all attachments are securely fitted before operation to prevent wear and tear.
- Do not attempt to repair the mixer yourself. Refer all servicing to qualified personnel.

6. TROUBLESHOOTING

If you encounter any issues with your Home Stand Mixer, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in. Power outlet not working. Mixer head not locked down.	Ensure the power cord is securely plugged into a working outlet. Test the outlet with another appliance. Ensure the mixing head is fully lowered and locked into place.
Attachments are difficult to insert or remove.	Incorrect alignment. Residue build-up.	Ensure the attachment is correctly aligned with the port before pushing and twisting. Clean the attachment port and attachment shaft thoroughly.
Mixer stops during operation.	Overload protection activated. Loose power connection.	Turn off the mixer, unplug it, and let it cool down for 15-20 minutes. Reduce the load if mixing heavy ingredients. Check power cord connection.
Unusual noise during operation.	Attachment not properly secured. Foreign object in bowl.	Ensure the attachment is securely locked into place. Turn off and unplug the mixer, then check the bowl for any foreign objects.

7. SPECIFICATIONS

Feature	Detail
Model Number	XJ-14409
Brand	Home
Power	300 Watts
Voltage	220 Volts
Frequency	50 Hz
Number of Speeds	6
Bowl Capacity	3.5 Liters
Bowl Material	Stainless Steel
Control Type	Button Control
Special Features	Removable Bowl, Bowl Rotation during operation, Attachment Ejection Button
Dimensions (L x W x H)	31 x 28 x 20.4 cm

Feature	Detail
Weight	2.44 kg

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact the manufacturer directly. Keep your purchase receipt as proof of purchase for warranty claims.




Manufacturer: Home


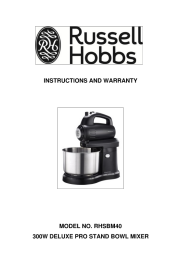

For service or inquiries, please visit the official Home website or contact their customer service hotline.



© 2024 Home. All rights reserved.

Related Documents - XJ-14409

	<p>HOME HP-XJ-H03 Turntable Hi-Fi System with Speakers User Manual</p> <p>User manual for the HOME HP-XJ-H03 Turntable Hi-Fi System with Speakers. Includes setup, operation, safety, troubleshooting, and specifications for this Bluetooth-enabled turntable with built-in speakers.</p>
	<p>HOME XJ-H02 Turntable User Manual with Bluetooth</p> <p>Comprehensive user manual for the HOME XJ-H02 Turntable, detailing setup, operation, Bluetooth connectivity, AUX-IN, care, troubleshooting, and specifications. Learn how to enjoy your vinyl records and stream music wirelessly.</p>
	<p>Manual de Usuario HOME XJ-H03 Tocariscos - Configuración, Operación y Solución de Problemas</p> <p>Manual de usuario completo para el tocadiscos HOME XJ-H03 con 4 altavoces integrados y recepción Bluetooth. Incluye instrucciones de configuración, guía de operación, cuidado, solución de problemas y especificaciones.</p>

 <p>LIFE</p> <p>Sous Chef Desire Red 1200W Kitchen Machine with 5L Non-Stick Bowl, 22mm</p> <p>Desire Red 1200W Kitchen Machine with 5L Non-Stick Bowl, 22mm</p>	<p>LIFE Sous Chef Desire Red Kitchen Machine User Manual</p> <p>User manual for the LIFE Sous Chef Desire Red kitchen machine. Includes safety instructions, operating guide, component details, and recipe suggestions for this 1200W appliance with a 5L stainless steel bowl.</p>
 <p>Russell Hobbs</p> <p>INSTRUCTIONS AND WARRANTY</p> <p>RHSBM40 300W DELUXE PRO STAND BOWL MIXER</p>	<p>Russell Hobbs RHSBM40 300W Deluxe Pro Stand Bowl Mixer: Instructions and Warranty</p> <p>Comprehensive instructions, safety guidelines, operating tips, cleaning advice, and warranty information for the Russell Hobbs RHSBM40 300W Deluxe Pro Stand Bowl Mixer. Learn how to use and maintain your kitchen appliance effectively.</p>
 <p>DATA PROJECTOR</p> <p>XJ-A Series XJ-A142/XJ-A147* XJ-A242/XJ-A247* XJ-A252/XJ-A257* XJ-M Series XJ-M141/XJ-M146* XJ-M151/XJ-M156* XJ-M241/XJ-M246* XJ-M251/XJ-M256*</p> <p>User's Guide</p> <p>CASIO</p>	<p>Casio XJ-A Series & XJ-M Series Data Projector User Guide</p> <p>This user guide provides comprehensive information on setting up, operating, and troubleshooting Casio XJ-A and XJ-M series data projectors. It details features such as the hybrid light source, multiple input options, File Viewer for media playback, USB Display functionality, and advanced settings.</p>