

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WestinTrends](#) /

› [WestinTrends 3-Piece Outdoor Patio Armless Sofa Conversation Bistro Set Instruction Manual](#)

**WestinTrends WWT00887-0**

# WestinTrends 3-Piece Outdoor Patio Armless Sofa Conversation Bistro Set Instruction Manual

Model: WWT00887-0

## PRODUCT OVERVIEW

This manual provides essential information for the assembly, operation, and maintenance of your WestinTrends 3-Piece Outdoor Patio Armless Sofa Conversation Bistro Set. Please read these instructions carefully before assembly and use to ensure proper function and longevity of your product. The set includes two armless sofas and one coffee table, designed for outdoor use.



Figure 1: Front view of the WestinTrends 3-Piece Outdoor Patio Armless Sofa Conversation Bistro Set, showing two armless sofas and a central coffee table.

## SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Do not exceed the weight capacity of the sofas or coffee table.
- Keep children and pets away during assembly.
- Place the furniture on a flat, stable surface to prevent tipping.
- Avoid placing hot items directly on the coffee table surface without protection.

## PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, contact

customer support.

- 2 x Armless Sofas
- 1 x Coffee Table
- Assembly Hardware (screws, washers, Allen wrench)
- Cushions for sofas

## SETUP AND ASSEMBLY

---

Assembly typically requires two adults. Lay out all components on a soft, clean surface to prevent scratches.

### Tools Required:

- Included Allen Wrench
- *(Optional)* Phillips Head Screwdriver

### Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Check against the package contents list.
2. **Assemble Sofa Frames:**
  - Attach the backrest to the seat frame using the provided screws and Allen wrench. Do not fully tighten yet.
  - Attach the side panels to the seat and backrest.
  - Once all connections are made, gradually tighten all screws until secure. Do not overtighten.
  - Repeat for the second armless sofa.
3. **Assemble Coffee Table:**
  - Attach the legs to the tabletop frame.
  - Secure any crossbars or support structures.
  - Place the glass top onto the coffee table frame, ensuring it is seated properly.
4. **Place Cushions:** Position the seat and back cushions onto the assembled sofas.
5. **Final Check:** Ensure all connections are tight and the furniture is stable before use.



Figure 2: Angled view of the assembled WestinTrends 3-Piece Outdoor Patio Set, highlighting the armless sofa design and coffee table.

## OPERATING INSTRUCTIONS

Your WestinTrends patio set is designed for comfortable outdoor lounging and conversation.

- **Seating:** The armless sofas provide flexible seating arrangements. Ensure cushions are properly placed for comfort.
- **Coffee Table:** Use the coffee table for beverages, books, or decorative items. The glass top is easy to clean.
- **Placement:** Position the set in your desired outdoor area, ensuring it is on a level surface. Consider placing it under an awning or umbrella for extended protection from direct sunlight and heavy rain.

## MAINTENANCE AND CARE

Proper care will extend the life and appearance of your patio set.

- **General Cleaning:** Wipe the frame and glass table with a dry, soft cloth regularly to remove dust and debris. For more stubborn dirt, use a damp cloth with mild soap and water, then rinse and dry thoroughly.
- **Cushion Care:** The cushions are designed for outdoor use but should be stored indoors or covered during heavy rain or prolonged periods of non-use to prevent mildew and fading. Spot clean cushions with mild soap and water. Allow to air dry completely.
- **Weather Protection:** While the set is made with all-weather and UV-resistant rattan wicker and a durable steel frame, covering the furniture during harsh weather conditions (heavy rain, snow, extreme sun) or off-season storage is recommended to preserve its condition.
- **Frame Inspection:** Periodically check all bolts and screws to ensure they remain tight. Retighten as necessary.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Furniture feels wobbly or unstable.	Loose connections or uneven surface.	Ensure all screws are tightened. Move the furniture to a flat, level surface.
Cushions appear faded or stained.	Prolonged exposure to sun or spills.	Store cushions indoors or cover when not in use. Spot clean stains promptly.
Wicker appears damaged or unraveling.	Physical damage or extreme weather exposure.	Contact customer support for repair options or replacement parts. Protect from sharp objects and harsh weather.

## SPECIFICATIONS

- **Model Number:** WWT00887-0
- **UPC:** 761062743341
- **Color:** Gray/Ivory
- **Material:** Durable steel frame, all-weather and UV-resistant rattan wicker
- **Product Dimensions (Overall):** Approximately 24.4 x 31.9 x 25.6 inches (L x W x H) *Note: This dimension seems to be for a single component, likely a sofa. The overall set dimensions will vary based on arrangement.*
- **Item Weight:** 69.7 pounds (total for the set)
- **Care Instructions:** Wipe with Dry Cloth

## WARRANTY AND SUPPORT

WestinTrends products are manufactured with quality and durability in mind. For specific warranty details, please refer to the warranty card included with your purchase or visit the official WestinTrends website. For customer support, missing parts, or any inquiries regarding your product, please contact WestinTrends customer service. You may also refer to the [WestinTrends Store on Amazon](#) for additional information. This product is eligible for 30-day easy returns through the retailer.