

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Casio](#) /

› [CASIO Genuine DW-5600E Bezel DW5600E Module 1545 3229 Only 74236776](#)

Casio DW-5600E

Instruction Manual

CASIO GENUINE DW-5600E BEZEL

Introduction

This manual provides essential information and instructions for the proper installation and care of your Genuine Casio DW-5600E Bezel. This bezel is a dedicated replacement part designed to restore the appearance and protection of your compatible G-SHOCK watch.

Please read these instructions carefully before proceeding with installation to ensure correct fitment and to avoid damage to your watch or the new bezel.

Product Overview

The Casio Genuine DW-5600E Bezel is an authentic replacement component for specific G-SHOCK models. It is manufactured to Casio's high standards, ensuring a precise fit and durable performance. This bezel is black with gray lettering for "PROTECTION" and "G-SHOCK".



Image: Front view of the genuine Casio DW-5600E Bezel, showcasing its black color and gray "PROTECTION" and "G-SHOCK" lettering.



Image: Top-down view of the Casio DW-5600E Bezel, highlighting its octagonal shape and precise cutouts for the watch module.

Compatibility

This genuine bezel is specifically designed for G-SHOCK DW-5600E models that utilize **Module 1545** or **Module 3229**. To confirm compatibility, please check the module number printed on the back cover of your watch. The bezel can be used if either 1545 or 3229 is listed.

モジュール番号

型番



Image: The back of a G-SHOCK watch, with circles highlighting the module number (e.g., 3229) and model number (e.g., DW-5600E) for compatibility verification.

Setup and Installation

Replacing the bezel on your G-SHOCK DW-5600E is a straightforward process. You will need a small Phillips head screwdriver.

- 1. Prepare Your Workspace:** Ensure you have a clean, well-lit, and stable surface to work on. Place a soft cloth or mat down to prevent scratching your watch.
- 2. Remove the Old Bezel:**

- Locate the four screws on the sides of the watch case that secure the bezel.
- Carefully unscrew these four screws using your Phillips head screwdriver. Keep the screws in a safe place as they will be reused.
- Gently lift the old bezel away from the watch module. It may be slightly adhered due to dust or age.

3. **Clean the Watch Module:** Before installing the new bezel, take this opportunity to gently clean any dust or debris from the watch module and buttons using a soft brush or air blower.

4. **Position the New Bezel:**

- Align the new genuine bezel with the watch module, ensuring that the button cutouts on the bezel match the watch's buttons.
- Press the bezel down firmly but gently, making sure it sits flush against the watch case.

5. **Secure the New Bezel:**

- Reinsert the four screws into their respective holes.
- Tighten the screws evenly, but do not overtighten, as this can strip the threads or damage the bezel/case. Tighten until snug.

6. **Final Check:** Test all watch buttons to ensure they operate freely and are not obstructed by the new bezel. Confirm the bezel is securely attached and there are no gaps.



Image: An inside view of the Casio DW-5600E Bezel, showing the internal structure and mounting points for screws.

Maintenance

To keep your new bezel looking its best and to prolong its lifespan:

- Cleaning:** Wipe the bezel regularly with a soft, damp cloth to remove dirt and grime. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly.
- Avoid Chemicals:** Do not use harsh chemicals, solvents, or abrasive cleaners, as these can damage the resin material and the printed lettering.
- Storage:** When not in use, store your watch in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

If you encounter issues after installing your new bezel, consider the following:

- Bezel Does Not Fit Properly:** Double-check that your watch module number (1545 or 3229) matches the compatible models. Ensure the bezel is correctly oriented and all four screws are aligned with their respective holes before tightening.
- Buttons Are Stiff or Stuck:** This usually indicates that the bezel is not perfectly aligned or is overtightened. Loosen the screws slightly, adjust the bezel's position, and then retighten evenly. Ensure no debris is lodged around the buttons.
- Screws Do Not Tighten:** Ensure you are using the original screws and that they are not stripped. Do not force them. If the screw holes on the watch case are damaged, professional repair may be required.

Specifications

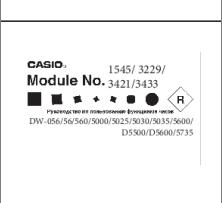
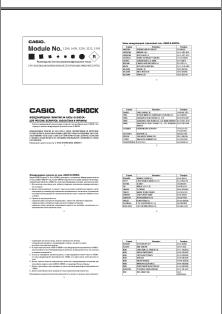
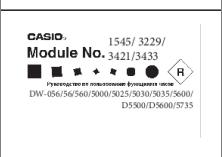
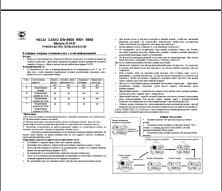
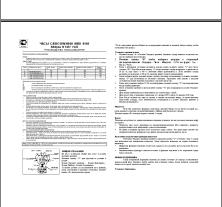
Feature	Detail
Brand	Casio
Model Name	DW-5600E
Compatible Modules	1545, 3229
Color	Black (with Gray Lettering)
Item Weight	0.352 ounces
Package Dimensions	3.94 x 3.15 x 0.39 inches
Manufacturer	CASIO

Warranty and Support

This product is a genuine Casio part. For information regarding returns or replacements, please refer to the retailer's policy. Typically, a 30-day return/replacement policy is offered for this item.

For further technical assistance or inquiries about your Casio G-SHOCK watch, please refer to the official Casio support channels or visit their website. Always ensure you are purchasing genuine Casio parts to maintain the integrity and performance of your watch.

Related Documents - DW-5600E

	<p><u>CASIO G-SHOCK Watch User Manual and International Warranty</u></p> <p>Comprehensive guide for CASIO G-SHOCK watches, covering operation, water resistance, care, and international warranty details. Includes model numbers DW-056 to D5735 and modules 1545, 3229, 3421, 3433.</p>
	<p><u>Casio G-SHOCK Watch Manual: Model Numbers 1545, 3229, 3421, 3433 & More</u></p> <p>Comprehensive user manual for Casio G-SHOCK watches, covering operation, features, water resistance, care, and technical specifications for models including DW-056, 5600, D5500, and others.</p>
	<p><u>Casio G-SHOCK Watch User Manual and International Warranty Information</u></p> <p>Comprehensive user manual for Casio G-SHOCK watches, covering module numbers 1289, 1659, 3230, 3232, 1595. Details features, operation modes (time, alarm, timer, stopwatch), care instructions, water resistance, and international warranty network.</p>
	<p><u>Casio G-Shock Watch User Manual: Modules 1545, 3229, 3421, 3433</u></p> <p>Comprehensive user manual for Casio G-Shock watches with modules 1545, 3229, 3421, 3433. Covers setup, features, water resistance, care, and technical specifications.</p>
	<p><u>Руководство пользователя Casio DW-9900/9901/9950 Модуль 2016</u></p> <p>Полное руководство пользователя для часов Casio DW-9900, DW-9901 и DW-9950 с модулем 2016. Инструкции по настройке времени, использованию режимов погружения, мирового времени, будильника, секундометра и таймера.</p>
	<p><u>Casio DW-8040/8050/8140 Руководство пользователя</u></p> <p>Подробное руководство пользователя для часов Casio моделей DW-8040, DW-8050 и DW-8140. Инструкции по установке времени и даты, использованию будильника, таймера, секундометра, а также советы по уходу и спецификации.</p>