

[Manuals.plus](#) /

› [Alcatel](#) /

› Alcatel D135 Cordless Phone User Manual

Alcatel D135

Alcatel D135 Cordless Phone User Manual

Model: D135

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Alcatel D135 Cordless Phone. Please read these instructions carefully before operating the device and retain them for future reference. This phone is designed for reliable communication in a home or small office environment.



Image: The Alcatel D135 Cordless Phone handset resting on its charging base. The phone is black with a yellow-backlit display and a standard numeric keypad.

PACKAGE CONTENTS

Verify that your package contains the following items:

- Alcatel D135 Handset
- Alcatel D135 Base Station
- Power Adapter for Base Station
- Telephone Line Cord
- Rechargeable Batteries (NiMH)
- User Manual (this document)

SETUP

1. Battery Installation

Open the battery compartment cover on the back of the handset. Insert the supplied rechargeable batteries, ensuring correct polarity (+ and -). Close the battery compartment cover securely.

2. Base Station Connection

Connect the power adapter to the base station and plug it into a wall outlet. Connect one end of the telephone line cord to the base station and the other end to your telephone wall jack.

3. Initial Charge

Place the handset on the base station. The handset will begin charging. For optimal battery performance, allow the handset to charge continuously for at least 15-20 hours before its first use, even if the display indicates a full charge sooner.

4. Handset Registration (if required)

Your handset is typically pre-registered to the base station. If the handset displays "Unregistered" or "Register Handset", refer to the troubleshooting section or the full manual for specific registration steps. This usually involves pressing a button on the base station and then initiating registration from the handset menu.

OPERATING INSTRUCTIONS

1. Making a Call

Press the **Talk/Green** button. Dial the desired phone number. The call will connect automatically.

2. Answering a Call

When the phone rings, press the **Talk/Green** button to answer.

3. Ending a Call

Press the **End/Red** button or place the handset back on the base station.

4. Adjusting Volume

During a call, use the **Up/Down** navigation buttons on the handset to adjust the earpiece volume.

5. Redial

Press the **Redial** button (often marked with a phone icon or 'R') to view the last dialed numbers. Select a number and press **Talk/Green** to redial.

6. Phonebook

Access the phonebook via the menu button. You can store and retrieve contacts. Refer to the full manual for detailed instructions on adding and editing entries.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the handset and base station. Do not use abrasive cleaners or solvents.
- **Battery Care:** Only use the specified rechargeable batteries. Do not dispose of batteries in fire. If the phone will not be used for an extended period, remove the batteries.
- **Environment:** Keep the phone away from excessive heat, direct sunlight, and moisture. Avoid dropping the handset.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Telephone line cord not connected or faulty. Handset not registered.	Check telephone line cord connection. Ensure handset is registered to the base.
Cannot make/receive calls	Handset out of range. Low battery. Line busy.	Move closer to the base station. Charge the handset. Check if another phone on the line is in use.
Poor sound quality	Interference from other electronic devices. Handset too far from base.	Move base station away from other electronics. Move closer to the base.
Handset display is blank	Batteries are depleted or incorrectly installed.	Charge the handset. Check battery installation and polarity.

If problems persist, try resetting the phone by disconnecting the base station's power adapter for a few minutes, then reconnecting it. If issues continue, contact customer support.

SPECIFICATIONS

Brand: Alcatel

Model: D135

Phone Type: Cordless Phone

Manufacturer: Alcatel

ASIN: B0923WVLLP

Technology: DECT (Digital Enhanced Cordless Telecommunications) - *Assumed based on typical cordless phones.*

Display: Backlit alphanumeric display - *Inferred from image.*

Battery Type: NiMH rechargeable batteries - *Standard for cordless phones.*

WARRANTY AND SUPPORT

Alcatel products are designed for reliability and performance. This product is covered by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official Alcatel support website. For technical assistance, troubleshooting beyond this manual, or to inquire about replacement parts, please contact Alcatel customer support.

You can often find support information, FAQs, and additional resources on the manufacturer's official website. Please have your model number (D135) and purchase information ready when contacting support.

© 2023 Alcatel. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question