

TRILINK 7c43317a-db91-46f7-a51f-6de6d11173e4

TRILINK 6-Inch Rechargeable Desk Fan User Manual

Model: 7c43317a-db91-46f7-a51f-6de6d11173e4

INTRODUCTION

Thank you for choosing the TRILINK 6-Inch Rechargeable Desk Fan. This portable, battery-operated fan is designed to provide personal cooling with convenience and quiet operation. Please read this manual thoroughly before use to ensure proper operation and maintenance.

USB-Rechargeable Desk Fan



Image: The TRILINK 6-Inch Rechargeable Desk Fan, showcasing its compact design and USB charging cable on a desk.

PRODUCT FEATURES

- **Compact and Portable:** 6-inch size and 14 oz weight make it easy to carry and store.
- **Rechargeable Battery:** Equipped with a 4000 mAh battery, providing up to 10 hours of operation on a full charge.
- **USB Charging:** Conveniently charges via any USB power source (e.g., power bank, laptop, wall adapter) using a Micro USB connector.
- **Powerful Airflow:** Features a brushless DC motor and 5 blades for strong, consistent air movement.
- **4-Speed Settings:** Adjustable fan speeds to suit your cooling preference.
- **Adjustable Tilt:** A 50-degree variable tilt head allows for personalized airflow direction.
- **Quiet Operation:** Designed for minimal noise, suitable for various environments like offices, bedrooms, and libraries.
- **Easy Maintenance:** Removable front cover simplifies cleaning.

SETUP

1. **Unpack:** Carefully remove the fan and all accessories from the packaging.
2. **Initial Charge:** Before first use, fully charge the fan. Connect the provided Micro USB cable to the charging port at the back of the fan's base and plug the other end into a USB power source. The indicator lights on the base will show charging status.
3. **Placement:** Place the fan on a stable, flat surface.



Image: Front view of the TRILINK Desk Fan, ready for use.

OPERATING INSTRUCTIONS

1. **Power On/Speed Adjustment:**
 - Short press the power button on the base to turn the fan on to Speed 1 (Low).
 - Each subsequent short press will cycle through the speeds: Speed 2 (Medium), Speed 3 (Medium-High), Speed 4 (High).
2. **Power Off:** Long press the power button to turn the fan off from any speed setting.
3. **Adjusting Airflow Direction:** The fan head can be manually tilted up to 50 degrees to direct airflow as desired.

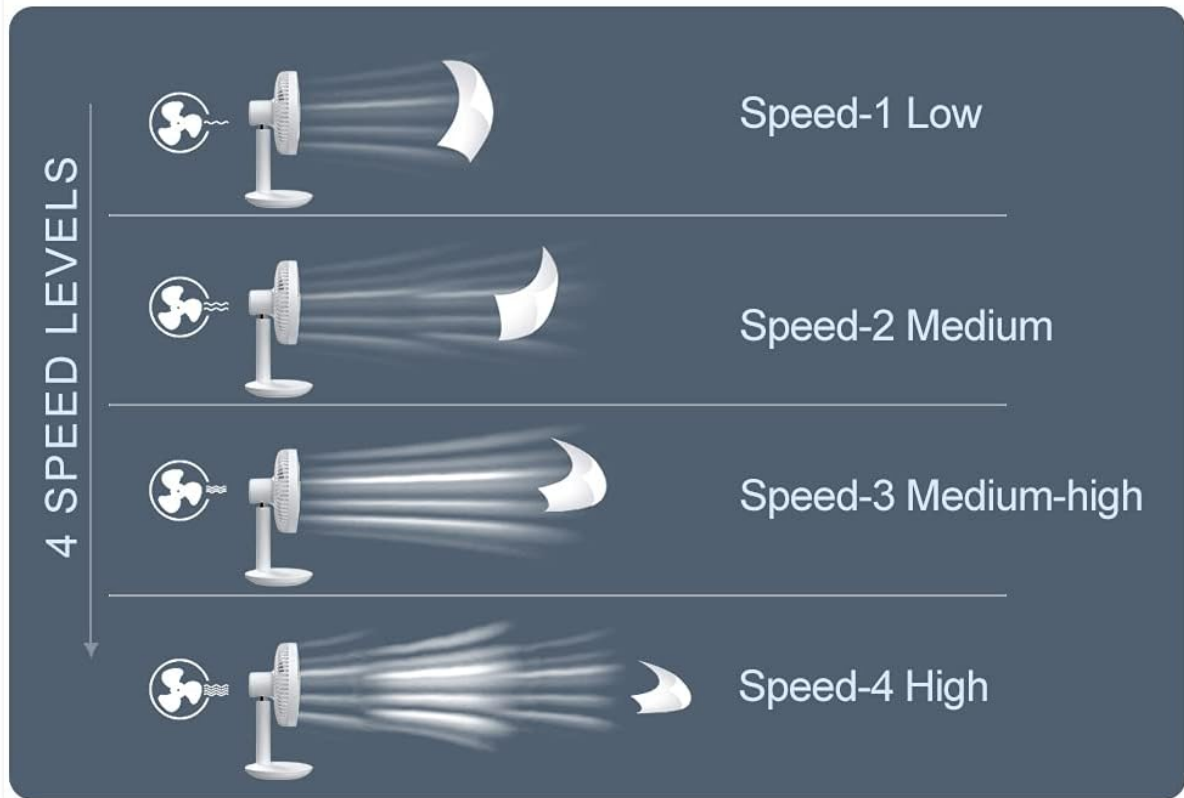
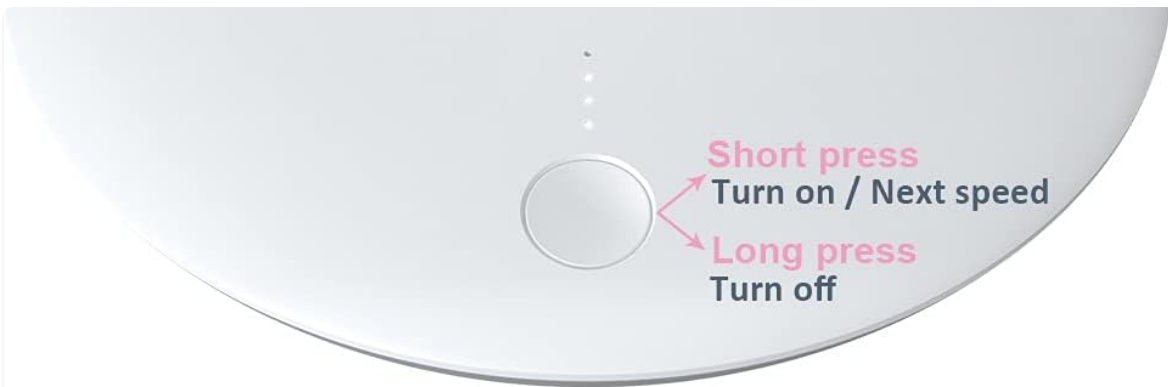


Image: Diagram illustrating the 4 speed levels and how to operate the fan using the power button.



Image: The fan head can be tilted to adjust the airflow direction.

Your browser does not support the video tag.

Video: Demonstration of the TRILINK Rechargeable Small Desk Fan, highlighting its portability, USB charging, and quiet operation.

MAINTENANCE

- **Cleaning the Fan:**

- Ensure the fan is turned off and unplugged before cleaning.
 - The front cover is removable for easy cleaning. Gently twist or unclip the front cover to detach it.
 - Wipe the fan blades and interior with a soft, damp cloth. Do not use abrasive cleaners or immerse the fan in water.
 - Ensure all parts are completely dry before reattaching the front cover and using the fan.
- **Storage:** Store the fan in a cool, dry place when not in use for extended periods.

Removable Front Cover Makes Cleaning Easier



Image: The removable front cover of the fan, demonstrating ease of cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the provided USB cable.
Fan runs but airflow is weak.	Fan speed is set too low.	Increase the fan speed by short pressing the power button.

Problem	Possible Cause	Solution
Fan is making unusual noise.	Obstruction in fan blades or dirty blades.	Turn off and unplug the fan. Remove the front cover and clean the blades. Ensure no foreign objects are present.
Fan does not charge.	Faulty USB cable or power source.	Try a different USB cable or power adapter. Ensure the cable is securely connected.

SPECIFICATIONS

- **Brand:** TRILINK
- **Model Name:** 7c43317a-db91-46f7-a51f-6de6d11173e4
- **Electric Fan Design:** Table Fan
- **Power Source:** Battery Powered (Rechargeable)
- **Battery Capacity:** 4000 mAh (approx. 10 hours run time)
- **Product Dimensions:** 5"D x 6"W x 10"H
- **Item Weight:** 14 Ounces
- **Special Features:** Lightweight, Portable, Quiet
- **Number of Speeds:** 4
- **Adjustable Tilt:** 50 degrees
- **Controller Type:** Button Control
- **Connector Type:** Micro USB
- **Wattage:** 5 watts
- **Voltage:** 5 Volts
- **Number of Blades:** 5
- **Blade Material:** Plastic
- **Indoor/Outdoor Usage:** Outdoor (also suitable for indoor use)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact TRILINK customer service directly. Keep your purchase receipt for warranty claims.