

## CANDY CSW485TE180

# Candy Smart Pro CSW485TE180 Washer Dryer

Instruction Manual

Model: CSW485TE180 | Brand: CANDY

### 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Candy Smart Pro CSW485TE180 Freestanding Washer Dryer. Please read these instructions carefully before using the appliance and keep them for future reference.

The Candy Smart Pro CSW485TE180 is a versatile appliance designed to handle both washing and drying tasks, featuring an 8kg wash capacity and a 5kg dry capacity, with a maximum spin speed of 1400 RPM. It also includes WIFI connectivity for enhanced control and smart features.



Figure 1.1: Front view of the Candy Smart Pro CSW485TE180 Washer Dryer, showcasing its white finish and control panel.

## 2. SAFETY INFORMATION

Always adhere to basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly earthed and connected to a suitable power supply.
- Do not allow children to play with the appliance.
- Never force the door open during operation.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not install the appliance in a damp environment or where it may be exposed to water.

- Refer to the installation section for proper ventilation requirements.

### 3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your washer dryer.

#### 3.1. Main Components

- **Control Panel:** Located at the top front, featuring a digital display and touch controls.
- **Detergent Dispenser Drawer:** For adding detergent and fabric softener.
- **Door/Porthole:** Front-loading access to the drum.
- **Drum:** Stainless steel interior for washing and drying.
- **Filter Access Panel:** Located at the bottom front for maintenance.



Figure 3.1: Angled view highlighting the control panel and detergent drawer.

### 3.2. Control Panel

The control panel features intuitive touch controls and a digital display for program selection, cycle status, and special functions. Refer to the detailed diagram in the included Instruction Manual for specific button functions.

## 4. INSTALLATION

Proper installation is crucial for the performance and longevity of your appliance.

### 4.1. Unpacking

Carefully remove all packaging materials. Ensure that all included components, such as the instruction manual and registration pack, are present. Remove any transit bolts from the rear of the machine before use. Failure to do so can cause severe damage.

### 4.2. Placement

The Candy Smart Pro CSW485TE180 is a freestanding appliance. Place it on a firm, level surface. Ensure there is adequate space around the machine for ventilation and ease of access. The product dimensions are 56 x 65 x 89 cm (Depth x Width x Height).



Figure 4.1: Example of the washer dryer installed in a suitable environment.

### 4.3. Water and Drain Connections

Connect the water inlet hose to a cold water tap. Ensure the drain hose is properly secured to a standpipe or sink, allowing for proper drainage without kinks or blockages.

### 4.4. Electrical Connection

Connect the power cord to a grounded electrical outlet. The appliance operates on 220 Volts. Do not use extension cords or adapters.

## 5. OPERATING INSTRUCTIONS

Follow these steps for effective washing and drying.

### 5.1. Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine. The maximum wash capacity is 8kg, and the maximum dry capacity is 5kg. For best drying results, ensure the load is appropriate for the drying capacity.



Figure 5.1: Close-up of the stainless steel drum, ready for loading.

### 5.2. Adding Detergent and Softener

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent to the main wash compartment and fabric softener to its designated compartment. The dispenser is dual-compartment for convenience.

### 5.3. Program Selection

Turn the program selector dial or use the touch controls to choose your desired wash or dry program. The machine offers 4 washing cycles and 3 drying cycles, including options like Quick Wash, Intensive, and Eco.

## 5.4. Special Features

- **Delay Timer:** Programme the start of the washing cycle with a maximum delay of 24 hours.
- **WIFI Connectivity (Smart Touch):** Connect your Android smartphone (with NFC) to the appliance for additional functions, tips, and troubleshooting guidance via the Candy Smart Touch app.
- **Smart Check-up:** The app provides a simplified management for longer efficiency, monitoring the health status of your appliance and helping identify solutions for errors or malfunctions.
- **Alexa Compatibility:** The appliance is compatible with Alexa for voice control of certain functions.

## 6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washer dryer.

### 6.1. Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.

### 6.2. Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer under running water to prevent residue buildup.

### 6.3. Cleaning the Lint Filter

For drying efficiency, regularly clean the lint filter located behind the access panel at the bottom front of the machine. Pull out the filter, remove accumulated lint, and rinse if necessary before reinserting.





Figure 6.1: Removing the lint filter for cleaning.



Figure 6.2: The lint filter after removal and cleaning.

#### 6.4. Drum Cleaning

Run a maintenance wash cycle periodically (e.g., a hot wash with no laundry and a descaling agent) to clean the drum and internal components.

### 7. TROUBLESHOOTING

Before contacting customer support, try these common troubleshooting steps.

Problem	Possible Cause	Solution
Appliance does not start	No power, door not closed properly, program not selected.	Check power supply, ensure door is latched, select a program and press start.
Excessive vibration/noise	Transit bolts not removed, appliance not level, uneven load.	Remove transit bolts, adjust leveling feet, redistribute laundry.
Water not draining	Drain hose kinked/blocked, pump filter blocked.	Check drain hose, clean pump filter (refer to full manual).
Clothes not drying properly	Lint filter blocked, overloaded, incorrect program.	Clean lint filter, reduce load size, select appropriate drying program.

For more detailed troubleshooting and error codes, utilize the **Smart Check-up** function via the Candy Smart Touch



app or consult the comprehensive manual provided with your appliance.

8. TECHNICAL SPECIFICATIONS

Key technical details of the Candy Smart Pro CSW485TE180 Washer Dryer.

Specification	Value
Model Number	CSW 485TE/1-80 (31010935)
Wash Capacity	8 Kilograms
Dry Capacity	5 Kilograms
Maximum Rotational Speed	1400 RPM
Energy Efficiency Class (Wash)	E
Annual Energy Consumption (Wash)	326 Kilowatt Hours
Noise Level (Spin)	79 dB
Product Dimensions (D x W x H)	56 x 65 x 89 cm
Item Weight	64 kg
Installation Type	Freestanding
Control Type	Touch
Special Features	Delay Timer, Eco, Intensive, Quick Wash, WIFI
Compatible Devices	Alexa



ENERG



CANDY

CSW 485TE/1-80



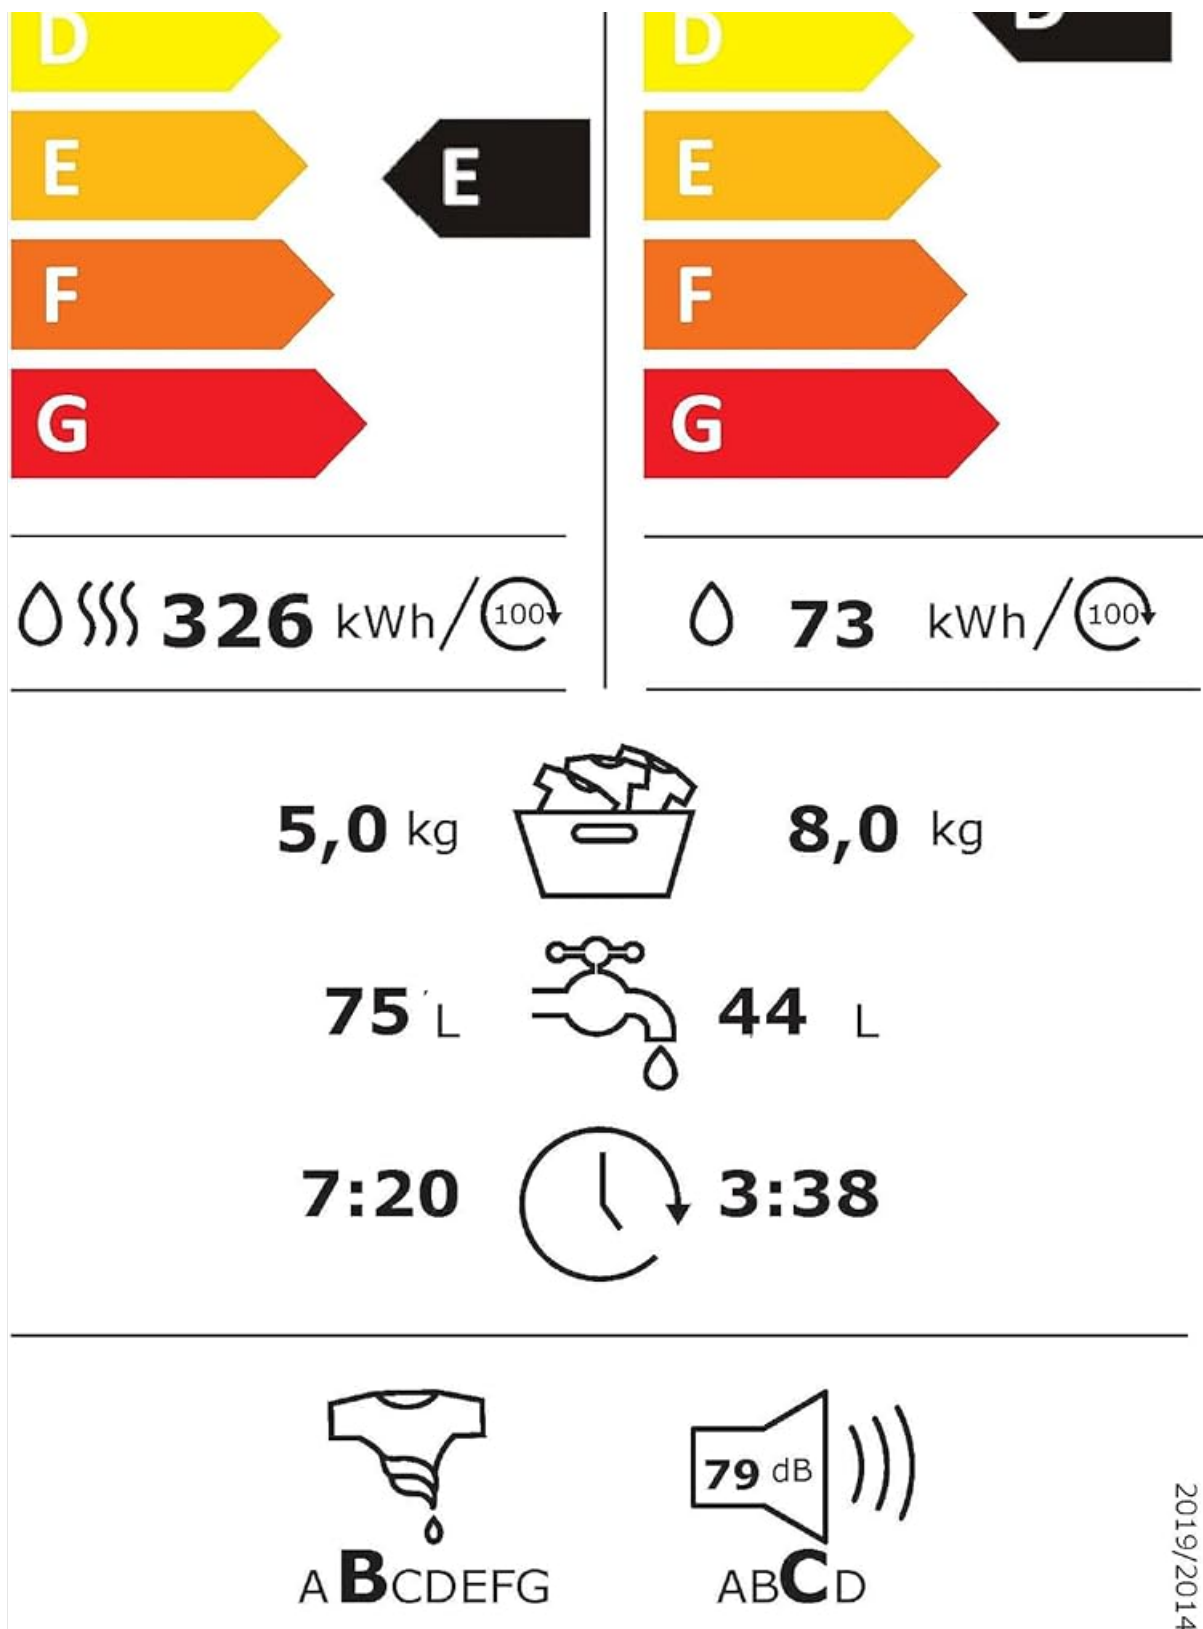 


Figure 8.1: Energy label providing detailed consumption and performance data. For more information, visit [energy-label.ec.europa.eu](http://energy-label.ec.europa.eu).

## 9. WARRANTY AND CUSTOMER SUPPORT

Your Candy Smart Pro CSW485TE180 Washer Dryer comes with a manufacturer's warranty.

### 9.1. Warranty Information

The minimum duration of the guarantee offered by the supplier is 12 months. Please retain your proof of purchase

 


for warranty claims. For full terms and conditions, refer to the warranty information included in your registration pack or visit the manufacturer's official website.


9.2. Customer Support

For technical assistance, spare parts, or to report a fault, please contact Candy customer support. You can find contact details on the Candy website or in your product documentation. When contacting support, please have your model number (CSW485TE180) and serial number ready.

Additional information regarding the appliance and its features can be found on the supplier's website: [corporate.haier-europe.com/en/](https://corporate.haier-europe.com/en/).

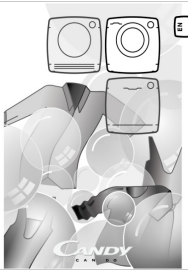
Related Documents - CSW485TE180

	<p><a href="#">Candy Washing Machine User Manual</a></p> <p>This user manual provides comprehensive instructions for operating, installing, maintaining, and troubleshooting your Candy washing machine. It covers safety guidelines, program selection, smart features, and technical specifications for models like CSW 2D.</p>
	<p><a href="#">Candy GVW 364TC Washer Dryer: Features and Specifications</a></p> <p>Discover the Candy GVW 364TC, a space-saving washer dryer with a 6kg wash capacity, 4kg drying capacity, and 1300 RPM spin speed. This guide details its features, programs, performances, and technical specifications.</p>
	<p><a href="#">Candy CIW 100T Washer Dryer: Operating Instructions and Guide</a></p> <p>Detailed operating instructions for the Candy CIW 100T washer dryer, covering control panel functions, wash programs, and drying cycles for optimal use. Learn how to operate your appliance efficiently.</p>

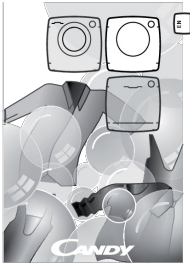 


### [Candy Tumble Dryer User Manual and Instructions](#)

 Comprehensive user manual for Candy tumble dryers, covering safety reminders, installation, operation, maintenance, program selection, troubleshooting, and Smart Touch technology. Includes technical specifications and energy efficiency information.

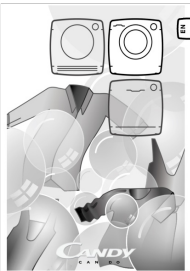

### [Candy CSW 2D - VST Washing Machine User Manual](#)

 This user manual provides detailed instructions for the Candy CSW 2D - VST washing machine. It covers safe operation, installation, program selection, maintenance, troubleshooting, and smart touch features for optimal laundry care.

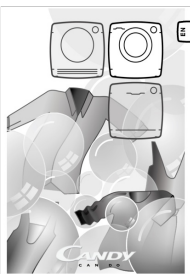

### [Candy Washer Dryer User Manual: Installation, Operation, and Maintenance](#)

Comprehensive user manual for Candy washer dryers, covering installation, safety guidelines, practical tips, maintenance, and troubleshooting. Learn how to use your Candy appliance efficiently and safely.