



Manuals.plus /

- › Seesii /
- › Seesii Mini Chainsaw User Manual

Seesii LW0403LOG

Seesii Mini Chainsaw User Manual

Model: LW0403LOG

INTRODUCTION

Thank you for choosing the Seesii Mini Chainsaw. This compact and powerful cordless tool is designed for efficient wood cutting, tree branch pruning, and general gardening tasks. Its lightweight and ergonomic design ensures comfortable one-handed operation, making it suitable for various users. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance and longevity of your chainsaw.



Image: The Seesii Mini Chainsaw with its various components, including the main unit, extension pole, batteries, charger, and additional accessories.

SAFETY INFORMATION

Operating any power tool requires adherence to strict safety guidelines to prevent injury. Please read and understand all safety warnings and instructions before using your Seesii Mini Chainsaw.

General Safety Rules:

- Always wear appropriate personal protective equipment (PPE), including safety glasses, gloves, and hearing protection.
- Keep the work area clean and well-lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.
- Avoid unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the tool.

- Maintain proper footing and balance at all times. Do not overreach.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts.
- Use the correct tool for your application. Do not force the tool.
- Disconnect the battery pack from the tool before making any adjustments, changing accessories, or storing power tools.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.

Chainsaw Specific Safety:

- Always hold the chainsaw firmly with both hands when operating.
- Be aware of kickback. Kickback may occur when the nose or tip of the guide bar touches an object, or when the wood closes in and pinches the saw chain in the cut.
- Do not operate the chainsaw with one hand unless specifically designed for it and you are trained to do so. This model is designed for one-handed use due to its lightweight nature, but caution is still paramount.
- Ensure the chain is properly tensioned and lubricated before each use.
- Never cut above shoulder height.
- Do not operate the chainsaw in wet conditions or rain.
- Always use the anti-splash baffle to minimize wood chip splattering.
- Utilize the upgraded safety lock mechanism to prevent accidental starts.

ALL-ROUND MULTI=PROTECTION



Image: Illustration of the chainsaw's safety features, including the anti-slip handle, anti-splash baffle, and upgraded safety lock.

PACKAGE CONTENTS

Upon opening your Seesii Mini Chainsaw package, please verify that all the following items are included:

- 1 x 6-inch Mini Cordless Chainsaw Host
- 2 x Replacement Chains (one may be pre-installed)
- 2 x Rechargeable Lithium Batteries (21V, 2000mAh)
- 1 x Screwdriver
- 1 x Guide Plate
- 1 x USA Power Adapter / Charger
- 1 x Chain Oil Bottle (empty)
- 1 x Pair of Gloves
- 2 x Chainsaw Sharpeners

- 1 x Nut Driver
- 1 x Suitcase (carrying case)
- 1 x User Manual (this document)

SETUP

1. Battery Charging:

Before first use, fully charge both lithium batteries.

1. Connect the USA Power Adapter/Charger to a standard electrical outlet.
2. Insert a battery into the charger. Ensure it clicks into place.
3. The indicator light on the charger will show the charging status (e.g., red for charging, green for fully charged).
4. Charging time is approximately 2-3 hours per battery.
5. Once fully charged, disconnect the battery from the charger.



LARGE CAPACITY BATTERY

2000mah

POWER SHARE

21V•5 pcs

LIION BATTERY
CE
2.0A11 Made in China

(2 batteries)
45-60 MINS
Working Time

2-3 HOURS
Charing Time

Over voltage protection

Over current protection

Over temperature protection

Charging & discharging protection

The graphic features two black and red 21V•5 pcs Li-ion batteries. One battery is upright, showing its side with 'POWER SHARE' and '21V•5 pcs' branding. The other is lying on its side, showing the bottom with 'LIION BATTERY', 'CE', and '2.0A11 Made in China'. To the left, a battery icon is circled with '2000mah' below it. At the bottom, a black banner contains a clock icon and '45-60 MINS Working Time' (with '(2 batteries)' above it) and a lightning bolt icon with '2-3 HOURS Charing Time'. Below this are four orange circles with icons: a lightning bolt with 'V' (Over voltage protection), a lightning bolt with 'A' (Over current protection), a thermometer (Over temperature protection), and a battery with a lightning bolt (Charging & discharging protection).

Image: Diagram illustrating the 21V 2000mAh lithium-ion battery, its capacity, working time (45-60 minutes), and charging time (2-3 hours), along with various protection features.

2. Chain and Guide Plate Installation:

If the chain and guide plate are not pre-installed, follow these steps:

1. Ensure the battery is removed from the chainsaw.
2. Using the provided screwdriver, loosen the screws on the side cover of the chainsaw and remove the cover.
3. Place the chain around the guide plate, ensuring the cutting teeth are facing the correct direction (refer to the arrow on the guide plate or chainsaw body).
4. Align the chain with the sprocket on the chainsaw body and fit the guide plate into its slot.
5. Replace the side cover and tighten the screws, but not completely.
6. Adjust the chain tension using the tensioning screw (usually located near the guide bar). The chain should be snug but still able to be pulled around the guide bar by hand. It should not sag from the bottom of the guide bar.
7. Once tension is correct, fully tighten the side cover screws.

3. Lubrication:

The chainsaw does not have an automatic oiling system. It is crucial to manually lubricate the chain and guide bar before each use and periodically during operation, especially during extended cutting sessions.

- Fill the provided chain oil bottle with appropriate chainsaw bar and chain oil (not included).
- Apply a small amount of oil along the guide bar groove and directly onto the chain.
- Run the chainsaw briefly to distribute the oil.

OPERATING INSTRUCTIONS

1. Starting the Chainsaw:

1. Ensure the battery is securely inserted into the chainsaw.
2. Press and hold the safety lock button (located on the handle).
3. While holding the safety lock, press the trigger switch to start the chainsaw. Release the safety lock button once the chainsaw is running.
4. To stop the chainsaw, release the trigger switch.

2. Ergonomic Design and One-Handed Use:

The Seesii Mini Chainsaw is ergonomically designed for comfortable one-handed operation, reducing fatigue during extended use. Its lightweight nature makes it easy to maneuver for various cutting tasks.

ONE-HAND OPERATED AND LIGHTWEIGHT DESIGN

Ergonomically designed, and even women and the elderly will not feel tired after using it for a long time, letting it be a great gift choice.



Image: A person demonstrating the one-handed operation of the Seesii Mini Chainsaw while pruning a tree branch, highlighting its ergonomic and lightweight design.

3. Cutting Techniques:

Always maintain a firm grip with one hand on the handle. Position yourself securely and ensure no obstacles are in your cutting path.

- **Pruning Branches:** For smaller branches, position the chainsaw firmly against the branch and apply steady, even pressure. Avoid twisting the saw.
- **Wood Cutting:** For larger pieces of wood (up to 6 inches in diameter), make sure the wood is stable. Begin the cut with the bottom of the guide bar, allowing the chain to pull itself into the wood. Do not force the saw.
- **Avoid Kickback:** Be mindful of the guide bar tip. Contact with the tip can cause sudden upward and backward movement of the chainsaw. Always cut with the bottom or top of the guide bar, avoiding the tip.
- **Anti-Splash Baffle:** The integrated baffle helps reduce wood chip splatter. Always ensure it is in place during operation.

6 INCH HIGHLY EFFICIENT CUTTING



One-hand Use



Cordless Design

6 INCH



4S



Strong

Image: A user demonstrating the efficient cutting capability of the 6-inch mini chainsaw on a log, highlighting its cordless design, one-hand use, and strong performance.



Image: Collage showing the versatile applications of the mini chainsaw, including pruning branches, bamboo sawing, general wood cutting, and home improvement tasks.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Seesii Mini Chainsaw.

1. Chain Sharpening:

- A sharp chain is essential for efficient and safe cutting. Dull chains can cause kickback and strain the motor.
- Use the provided chainsaw sharpeners to maintain the sharpness of the chain teeth. Follow the angle recommendations for your chain type.
- Alternatively, replace the chain with one of the provided replacement chains when it becomes dull or damaged.

2. Cleaning:

- After each use, remove the battery.
- Use a brush or compressed air to remove sawdust, wood chips, and debris from the guide bar, chain, and motor

housing.

- Periodically remove the side cover to clean out any accumulated debris from around the sprocket and motor area.

3. Storage:

- Ensure the chainsaw is clean and dry before storing.
- Remove the battery from the chainsaw for long-term storage. Store batteries in a cool, dry place away from direct sunlight.
- Store the chainsaw in its provided suitcase or a safe, dry location out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chainsaw does not start.	Battery not charged or improperly inserted. Safety lock not engaged.	Ensure battery is fully charged and securely inserted. Press and hold the safety lock button before pressing the trigger.
Chainsaw cuts slowly or poorly.	Dull chain. Incorrect chain tension. Lack of lubrication.	Sharpen or replace the chain. Adjust chain tension. Apply chain oil.
Chain comes off the guide bar.	Loose chain tension. Improper installation.	Re-tension the chain. Ensure chain and guide bar are correctly installed.
Motor gets hot quickly.	Overuse or dull chain.	Allow the chainsaw to cool down for 3-5 minutes. Sharpen or replace the chain. Avoid continuous heavy cutting.
Excessive vibration.	Damaged chain or guide bar. Loose components.	Inspect chain and guide bar for damage and replace if necessary. Check all screws and ensure they are tightened.

SPECIFICATIONS

- **Model:** LW0403LOG
- **Main Color:** Orange & Black
- **Material:** ABS + Metal
- **Power:** 550W
- **Battery:** 2 x Lithium Battery, 21V, 2000mAh (included)
- **Guide Plate Size:** 6 inches (185 x 34 x 3mm / 7.3 x 1.3 x 0.1in)
- **Host Size (assembled):** 370 x 110 x 100mm / 14.6 x 4.3 x 3.9in
- **Item Weight:** 1.09 kg / 2.4 lb
- **Working Time (per charge):** 45-60 minutes (with two batteries)
- **Charging Time:** 2-3 hours
- **Cutting Speed:** Can cut 6 inches of wood in 4 seconds
- **Motor Type:** Pure Copper Motor

POWERFUL MOTOR

Provide high speed & powerful cutting efficiency & more durable and safer

- PROVIDES MORE POWER ●
- LONG RUNTIMES ●
- EXTENDED MOTOR LIFE ●

Note: If you feel the chainsaw gets too hot, suggest you wait 3-5 mins to use it again.

Image: Diagram highlighting the powerful pure copper motor, emphasizing its high speed, cutting efficiency, durability, and extended motor life.

WARRANTY AND SUPPORT

Seesii provides excellent after-sales service for your mini chainsaw.

- **Customer Support:** We offer 24/7 friendly customer support to address any concerns or questions you may have.
- **Contact:** If you are not satisfied with your Seesii Mini Chainsaw or encounter any issues, please feel free to contact us. Our after-sales service experts aim to reply to your inquiries within 12 hours.
- **Warranty:** Please refer to your purchase documentation or contact customer support for specific warranty terms and conditions.

For further assistance, please visit the official Seesii Store: [Seesii Store on Amazon](#).

