

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Neretva](#) /
- › [Neretva Bread Maker 20-IN-1 Instruction Manual](#)

Neretva PE8866GR

Neretva Bread Maker 20-IN-1 Instruction Manual

Brand: Neretva | Model: PE8866GR

1. INTRODUCTION

The Neretva 20-IN-1 Bread Maker is designed to simplify your bread-making process with its versatile features and user-friendly interface. Equipped with dual heaters for 360° surrounding baking and a powerful 550W motor, it ensures evenly baked, fluffy bread. Its nonstick ceramic pan promotes healthier baking and easy cleanup. With 20 pre-programmed menus, adjustable crust colors, and loaf capacities, you can enjoy a wide variety of homemade breads, cakes, jams, and more.



Figure 1: Neretva 20-IN-1 Bread Maker, showcasing its compact design and elegant green finish.

2. WHAT'S INCLUDED

Upon unboxing your Neretva Bread Maker, please ensure all the following items are present:

- Bread Making Machine (1 unit)
- Nonstick Bread Pan (1 unit)
- Kneading Paddles (2 units)
- Paddle Removal Hook (1 unit)
- Measuring Cup (1 unit)
- Measuring Spoons (1 set)
- Heat Resistant Glove (1 unit)
- User Manual (1 unit)
- Recipe Book (1 unit)



Figure 2: All components included with the Neretva Bread Maker, neatly arranged.

3. SETUP

3.1 Initial Setup

1. Unpack all components and remove any packaging materials.
2. Wipe the exterior of the bread maker with a damp cloth.
3. Wash the nonstick bread pan, kneading paddles, measuring cup, and measuring spoons with warm, soapy water. Rinse thoroughly and dry completely.
4. Insert the kneading paddles onto the shafts at the bottom of the bread pan. Ensure they are securely in place.
5. Place the bread pan into the bread maker's baking chamber. Turn the pan clockwise until it locks securely into position.
6. Close the lid of the bread maker.
7. Plug the power cord into a grounded electrical outlet. The display will light up, indicating the machine is ready.

ONLY 2 STEP, GET HEALTHY BREAD



1 add ingredients



2 select menu



3 bread done

Figure 3: The simple 2-step process for making bread: adding ingredients and selecting the menu, leading to a finished loaf.

3.2 Control Panel Overview

Familiarize yourself with the control panel for easy operation:

- **LCD Display:** Shows program number, time remaining, crust color, and loaf size.
- **Menu/Timer Knob:** Rotate to select programs (1-20) and adjust delay timer. Press to confirm selection.
- **COLOR Button:** Press to select light, medium, or dark crust.

- **WEIGHT Button:** Press to select 1.65LB or 2LB loaf capacity.
- **START/PAUSE/STOP Button:** Press to start, pause, or stop a program. Hold for 3 seconds to unlock the button after a program starts.
- **Viewing Window:** Allows you to monitor the baking process without opening the lid.



Figure 4: Detailed layout of the control panel, highlighting the LCD display, menu knob, and function buttons.

4. OPERATING INSTRUCTIONS

4.1 Program Selection

The Neretva Bread Maker offers 20 pre-programmed menus. Refer to the table below for a list of available programs:

Program No.	Program Name
1	Basic bread

Program No.	Program Name
2	Quick bread
3	Sweet bread
4	French bread
5	Whole-wheat bread
6	Potato bread
7	Corn bread
8	Sugarless bread
9	Gluten free bread
10	Cake
11	Dessert
12	Knead
13	Toast dough
14	Pizza dough
15	Ferment
16	Jam
17	Yogurt
18	Dried meat floss
19	Bake
20	Homemade

4.2 Crust Color and Loaf Size

Customize your bread's crust color (light, medium, dark) and loaf size (1.65LB or 2LB) using the dedicated buttons on the control panel. The machine will automatically adjust baking times accordingly.

DUAL HEATERS, 360° BAKING



3 crust shards



Figure 5: Visual representation of the dual heating system and the three available crust color settings.

4.3 Delay Timer and Keep Warm Function

Utilize the 15-hour delay timer to have fresh bread ready exactly when you need it. After baking, the bread maker automatically enters a 1-hour keep warm cycle. It also features a 15-minute power interruption recovery function.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the automatic functions of the Neretva Bread Maker, including ingredient mixing and program selection.

5. MAINTENANCE

5.1 Cleaning

Proper cleaning ensures the longevity and hygiene of your bread maker:

- Always unplug the bread maker and allow it to cool completely before cleaning.
- The non-stick pan, kneading paddles, measuring cup, and measuring spoon are machine washable for easy cleaning.
- Wipe the interior and exterior of the bread maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Ensure no water enters the motor or heating elements.
- Dry all parts thoroughly before reassembling or storing.

6. TROUBLESHOOTING

If you encounter any issues, please refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Bread does not rise	Expired yeast, incorrect water temperature, too much salt/sugar.	Check yeast expiration date. Use lukewarm water (105-115°F). Ensure correct ingredient measurements.
Bread is too dense	Too much flour, not enough liquid, old yeast.	Measure ingredients precisely. Ensure fresh yeast. Adjust liquid slightly if needed.
Bread pan sticks	Residue buildup, pan not properly greased.	Clean pan thoroughly after each use. Lightly grease pan before adding ingredients if necessary.
Machine makes unusual noise	Kneading paddle loose, pan not seated correctly.	Ensure kneading paddles are securely attached. Twist bread pan clockwise until it locks firmly.
Crust is too dark/light	Incorrect crust setting.	Adjust the COLOR button setting (light, medium, dark) for your next loaf.

7. SPECIFICATIONS

Feature	Detail
Model Number	PE8866GR
Capacity	1.65LB / 2LB
Programs	20 Preset Menus
Heating Elements	Dual Heaters (360° Baking)
Power	550W
Pan Material	Nonstick Ceramic

Feature	Detail
Body Material	Stainless Steel
Delay Timer	Up to 15 Hours
Keep Warm Function	1 Hour Automatic
Power Interruption Recovery	15 Minutes
Noise Level	Less than 40 dB
Dimensions	11"D x 7.91"W x 9.25"H
Item Weight	8.37 pounds

8. WARRANTY & SUPPORT

Neretva is committed to providing high-quality products and excellent customer service. For any questions, concerns, or warranty inquiries regarding your bread machine, please do not hesitate to contact our dedicated Customer Service team.

Our highly trained Customer Service team will respond promptly within 24 hours to answer questions and resolve any problems you may have.

Please refer to your purchase documentation for specific warranty terms and contact details.