

Arçelik TM 6006 G

Arçelik TM 6006 G 2000W Toaster Grill Instruction Manual

Model: TM 6006 G

1. INTRODUCTION

Thank you for choosing the Arçelik TM 6006 G 2000W Toaster Grill. This appliance is designed for efficient and versatile grilling, perfect for sandwiches, meats, and other foods. Please read this instruction manual carefully before using the appliance for the first time to ensure safe operation and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions thoroughly before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.

- Do not use the appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface during operation.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Arçelik TM 6006 G Toaster Grill:

1. Main Unit Housing
2. Upper Grill Plate
3. Lower Grill Plate
4. Power On/Off Switch
5. Temperature Control Knob (with 3 heat settings)
6. Power Indicator Light
7. Preheating/Ready Indicator Light
8. Handle
9. Drip Tray (if applicable, not explicitly mentioned but common)



Figure 3.1: Control panel with power switch and temperature control. The power switch is on the left, and the rotary temperature control knob is on the right, featuring numerical settings.



Figure 3.2: Rear view of the appliance, highlighting the sturdy handle and the hinge design, along with the brand logo.



Figure 3.3: The two removable cast iron grill plates, featuring a ribbed design for effective grilling and easy cleaning.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove the toaster grill and all accessories from its packaging. Retain packaging for future storage or disposal.
2. **Clean Plates:** Before first use, wipe the grill plates with a damp cloth or sponge. For a more thorough cleaning, the removable plates can be washed with warm, soapy water, rinsed, and dried completely.
3. **Position Appliance:** Place the toaster grill on a stable, flat, heat-resistant surface, ensuring adequate ventilation around the unit. Keep it away from walls and other appliances.
4. **Initial Burn-off (Optional but Recommended):** For the first use, it is recommended to operate the grill empty for about 5-10 minutes on the highest heat setting. This helps to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal. Ensure the area is well-ventilated.
5. **Insert Drip Tray:** If your model includes a drip tray, ensure it is correctly inserted beneath the grill plates to collect excess fat and juices.

5. OPERATING INSTRUCTIONS

- 1. Prepare Food:** Prepare your food items (e.g., sandwiches, meat, vegetables) as desired. For best results and to prevent sticking, lightly brush the grill plates with a small amount of cooking oil or butter, especially if not using a non-stick spray.
- 2. Plug In and Power On:** Insert the power plug into a suitable wall outlet. Turn the power switch to the "ON" position. The Power Indicator Light will illuminate.
- 3. Set Temperature:** Turn the Temperature Control Knob to your desired heat setting (1, 2, or 3). The Preheating/Ready Indicator Light will illuminate, indicating the grill is heating up.
- 4. Preheat:** Allow the grill to preheat until the Preheating/Ready Indicator Light turns off or changes color (depending on model), indicating that the desired temperature has been reached. This usually takes 3-5 minutes.
- 5. Place Food:** Carefully open the grill using the handle and place your food onto the lower grill plate. Close the upper grill plate gently over the food.
- 6. Grill:** Grill for the recommended time or until your food is cooked to your preference. Cooking times will vary depending on the type and thickness of the food.
- 7. Remove Food:** Once cooking is complete, carefully open the grill and remove the food using a heat-resistant plastic or wooden utensil. Do not use metal utensils as they can damage the non-stick coating.
- 8. Power Off:** After use, turn the power switch to the "OFF" position and unplug the appliance from the wall outlet.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Arçelik TM 6006 G Toaster Grill.

- 1. Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- 2. Remove Grill Plates:** The cast iron grill plates are removable for easy cleaning. Carefully detach them from the main unit once cooled.
- 3. Clean Grill Plates:** Wash the grill plates in warm, soapy water using a soft sponge or cloth. Rinse thoroughly and dry completely before reattaching or storing. The plates may also be dishwasher safe (check product specific instructions if available, otherwise hand wash is recommended).
- 4. Clean Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the surface.
- 5. Clean Drip Tray:** Empty and wash the drip tray (if applicable) after each use.
- 6. Storage:** Store the cleaned and dried appliance in a cool, dry place.

Caution: Never immerse the main unit, cord, or plug in water or any other liquid.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power switch is off; No power from outlet.	Ensure the power cord is securely plugged into a working outlet. Turn the power switch to "ON". Check the household fuse/circuit breaker.

Problem	Possible Cause	Solution
Food sticks to the grill plates.	Plates not properly oiled; Food type requires more oil; Plates are not clean.	Lightly brush plates with cooking oil before preheating. Ensure plates are thoroughly cleaned after each use.
Grill is not heating sufficiently.	Temperature setting is too low; Appliance not fully preheated.	Increase the temperature setting using the control knob. Allow the grill to fully preheat until the indicator light signals readiness.
Smoke or unusual odor during first use.	Manufacturing residues burning off.	This is normal for the first few uses. Ensure good ventilation. If it persists, discontinue use and contact customer service.

8. TECHNICAL SPECIFICATIONS

Brand: Arçelik

Model Number: TM 6006 G

Power: 2000 W

Plate Material: Cast Iron

Heat Settings: 3 levels

Special Features: Removable Plates, Preheating Light, Grill Function

Dimensions (D x W x H): 41 cm x 38 cm x 21 cm

Fuel Type: Electric

Recommended Use: Indoor

9. WARRANTY AND CUSTOMER SUPPORT

For detailed warranty information, product registration, or to contact customer support, please visit the official Arçelik website or refer to the warranty card included with your purchase. You may also contact your local Arçelik dealer for assistance.

Please have your model number (TM 6006 G) and purchase date ready when contacting support.