

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VOX](#) /

› [VOX TV 65" LED 65ADW-C2B User Manual](#)

VOX 65ADW-C2B

VOX TV 65" LED 65ADW-C2B User Manual

Model: 65ADW-C2B



INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your VOX 65-inch 4K LED TV, model 65ADW-C2B. Please read this manual thoroughly before using your television to ensure proper and safe operation. Keep this manual for future reference.



Figure 1: Front view of the VOX 65-inch 4K LED TV. The screen displays a vibrant image of a peacock, and the VOX logo is centered at the bottom bezel.

1. SETUP

1.1 Unpacking

Carefully remove the television from its packaging. Ensure all accessories are present: remote control, batteries, power cord, and stand components. Retain the packaging for future transport or service needs.

1.2 Stand Installation

If you plan to use the included stand, follow these steps:

1. Place the TV screen-down on a soft, flat surface to prevent scratches.
2. Align the stand legs with the screw holes on the bottom of the TV.
3. Secure the stand legs using the provided screws. Do not overtighten.



Figure 2: Angled front view of the VOX 65-inch TV, showcasing the installed stand legs. The screen displays a peacock image.

1.3 Wall Mounting (Optional)

The TV supports VESA standard 200 x 200 mm for wall mounting. Use a compatible wall mount bracket (sold separately) and consult the bracket's instructions for installation. Ensure the wall can support the weight of the TV.



Figure 3: Rear view of the VOX 65-inch TV, highlighting the VESA mounting points and various input/output ports on the back panel.

1.4 Connecting Devices

Connect your external devices to the appropriate ports on the TV. Refer to Figure 3 for port locations.

- **HDMI (x3):** For high-definition audio and video devices like Blu-ray players, game consoles, or set-top boxes.
- **USB (x2):** For connecting USB storage devices to play media or for PVR functionality.
- **Antenna Input (x2):** For connecting terrestrial (DVB-T2), cable (DVB-C), or satellite (DVB-S2) antennas.
- **AV Input:** For older devices using composite video and stereo audio.
- **CI Slot:** For Common Interface modules (e.g., for encrypted channels).
- **SPDIF Optical Output:** For connecting to external audio systems with optical input.
- **Audio Output:** For connecting headphones or external speakers.
- **LAN:** For wired network connection to access Smart TV features and internet.

2. OPERATING INSTRUCTIONS

2.1 Power On/Off

Connect the power cord to the TV and a power outlet. Press the power button on the remote control or on the TV itself to turn the TV on or off.

2.2 Initial Setup (Android 9.0)

Upon first power-on, the TV will guide you through the initial setup process. This includes language selection, network connection (Wi-Fi or LAN), channel scanning, and Google account setup for Android TV features.

2.3 Smart TV Features

Your VOX TV is equipped with Android 9.0, offering a range of smart features:

- **Built-in Wi-Fi:** Connect wirelessly to your home network for internet access.
- **Miracast:** Wirelessly mirror content from compatible mobile devices to your TV screen.
- **HDR10 & HLG:** Support for High Dynamic Range content, providing enhanced contrast and color.
- **Dolby Digital Plus (DD+):** Enhanced audio experience.
- **Pre-installed Apps:** Access popular streaming services like Amazon Prime Video and Netflix, and browse the web using the built-in browser.

2.4 Input Selection

Press the "Source" or "Input" button on your remote control to switch between connected devices (HDMI, AV, TV tuner).

2.5 Channel Tuning

Access the TV menu to perform an automatic or manual channel scan for DVB-T2 (terrestrial), DVB-C (cable), or DVB-S2 (satellite) channels.

2.6 PVR (Personal Video Recorder)

Connect a USB storage device to record live TV programs. Refer to the on-screen menu for PVR setup and operation.

3. MAINTENANCE

3.1 Cleaning the Screen

Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. Do not spray liquid directly onto the screen.

3.2 Cleaning the TV Body

Use a soft, dry cloth to wipe the TV's frame and stand. Avoid using abrasive cleaners or solvents.

3.3 Storage

If storing the TV for an extended period, disconnect it from power, remove batteries from the remote, and cover it to protect from dust. Store in a cool, dry place.

4. TROUBLESHOOTING

Before contacting customer support, try the following solutions for common issues:

Problem	Possible Solution
No Power	Ensure the power cord is securely plugged into both the TV and the wall outlet. Check the power outlet with another device.
No Picture / Black Screen	Check the input source (HDMI, AV, etc.) is correctly selected. Ensure the connected device is powered on. Try a different HDMI cable.
No Sound	Check the volume level and ensure mute is not activated. Verify external audio systems are connected and configured correctly.

Problem	Possible Solution
Remote Control Not Working	Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot Connect to Wi-Fi	Ensure your router is on and working. Re-enter the Wi-Fi password. Try restarting both the TV and the router.

5. SPECIFICATIONS

Feature	Detail
Brand	VOX
Model	65ADW-C2B
Screen Size	65 inches
Display Type	DLED (Direct LED)
Resolution	4K (3840 x 2160 pixels)
Image Response	60 Hz
Operating System	Android 9.0
Tuner Type	DVB-T2 / C / S2
Speaker Power	2 x 8 W RMS
Connectivity	3 x HDMI, 2 x USB, 2 x Antenna Input, AV Input, CI Slot, Optical SPDIF Out, Audio Out, LAN, Built-in Wi-Fi, Bluetooth
Technologies	H.265 HEVC, PVR, Smart TV, Miracast, HDR10, HLG, Dolby Digital Plus (DD+)
VESA Standard	200 x 200 mm
Energy Class	G
Dimensions with Stand (WxDxH)	1464 x 258 x 906 mm
Dimensions without Stand (WxDxH)	1464 x 85 x 845 mm
Color	Black

Related Documents - 65ADW-C2B

	<p>VOX VX50 GTV / VX15 GT Guitar Amplifier Owner's Manual</p> <p>Detailed owner's manual for the VOX VX50 GTV and VX15 GT modeling guitar amplifiers, covering setup, features, amp models, effects, and specifications.</p>
	<p>VOX VT20X VT40X Modeling Guitar Amplifier Owner's Manual</p> <p>Comprehensive guide to the VOX VT20X and VT40X modeling guitar amplifiers, detailing features, setup, effects, and operation for musicians.</p>
	<p>Vox Wireless Home Terms and Conditions - Service Agreement</p> <p>Official terms and conditions for Vox Wireless Home Broadband services, outlining service descriptions, installation, equipment, support, and termination policies.</p>
	<p>VOX MINI SUPERBEETLE Guitar Amplifier Owner's Manual</p> <p>Comprehensive owner's manual for the VOX MINI SUPERBEETLE Guitar Amplifier, covering setup, features, specifications, and safety precautions. Learn how to use your VOX MINI SUPERBEETLE amplifier.</p>
	<p>VOX MINI GO Series Portable Modeling Guitar Amplifier Owner's Manual</p> <p>Comprehensive owner's manual for the VOX MINI GO 3, MINI GO 10, and MINI GO 50 portable modeling guitar amplifiers, detailing features, setup, functions, effects, and troubleshooting.</p>
	<p>VOX Bluetooth MIDI Connection Guide</p> <p>A comprehensive guide to connecting VOX Bluetooth MIDI devices to iOS, Android, Mac, and Windows operating systems, detailing setup steps, requirements, and troubleshooting tips.</p>