

[Manuals.plus](#) /

› [Brother](#) /

› Brother CP100X Computerized Sewing and Quilting Machine Instruction Manual

Brother CP100X

Brother CP100X Computerized Sewing and Quilting Machine

INSTRUCTION MANUAL

Introduction

The Brother CP100X is a feature-rich computerized sewing and quilting machine designed for ease of use and durability. It offers a wide range of functions for various sewing and quilting projects. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your machine to ensure optimal performance and longevity.



Image: The Brother CP100X sewing machine with its extension table attached.

Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the machine.
- Keep the machine away from water or wet surfaces.
- Unplug the machine from the electrical outlet when not in use, when servicing, or when changing accessories.
- Use this appliance only for its intended use as described in this manual.
- Never operate the machine if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
- Never drop or insert any object into any opening.
- This product is intended for sale only in the US at 120 volts. Any other use or sale may void the warranty.

Package Contents

Verify that all items listed below are included in your package:

- Brother CP100X Computerized Sewing and Quilting Machine
- Wide Table
- Protective Hard Case
- 10 Sewing Feet: Zigzag foot, Buttonhole foot, Zipper foot, Button sewing foot, Overcasting foot, Blind stitch foot, Monogramming foot, 1/4 Piecing foot, Walking foot, Quilting foot
- Quilting Guide
- 3 Bobbins
- 3-piece Needle Set
- Ball Point Needle
- Twin Needle
- Accessory Pouch
- Cleaning Brush
- Eyelet Punch
- L Driver
- Screwdriver
- Seam Ripper
- Spool Pin
- Operation Manual

Setup

1. Unpacking and Placement

1. Carefully remove the machine and all accessories from the packaging.
2. Place the machine on a stable, flat surface.
3. Ensure the machine is connected to a 120-volt AC power outlet.

2. Attaching the Wide Table

For larger projects like quilting or garments, attach the included wide table to expand your workspace.

1. Slide the accessory box off the machine to reveal the free arm.
2. Align the wide table with the free arm and gently slide it into place until it clicks securely.



Image: The Brother CP100X sewing machine with the wide table attached, providing an extended work surface.

3. Winding the Bobbin

1. Place a spool of thread on the spool pin.
2. Follow the threading guides for bobbin winding, typically indicated by dashed lines on the machine.
3. Place an empty bobbin onto the bobbin winder shaft and push it to the right.
4. Start the machine; it will automatically wind the bobbin. Stop when the bobbin is full.
5. Cut the thread and remove the wound bobbin.

4. Inserting the Bobbin (Quick-Set Bobbin System)

1. Open the bobbin cover plate.
2. Place the wound bobbin into the bobbin case with the thread running counter-clockwise.
3. Guide the thread through the slot and then under the metal guide.
4. Close the bobbin cover. The Quick-Set bobbin system automatically picks up the bobbin thread.

5. Threading the Upper Thread (1-Step Automatic Needle Threader)

1. Raise the presser foot lever.
2. Place a spool of thread on the spool pin.
3. Follow the numbered threading path indicated on the machine, ensuring the thread is securely seated in all guides.
4. Lower the presser foot.
5. Lower the needle to its lowest position, then raise it slightly.
6. Engage the 1-step automatic needle threader by pulling it down and hooking the thread. Release the lever slowly, and the thread will pass through the needle eye.

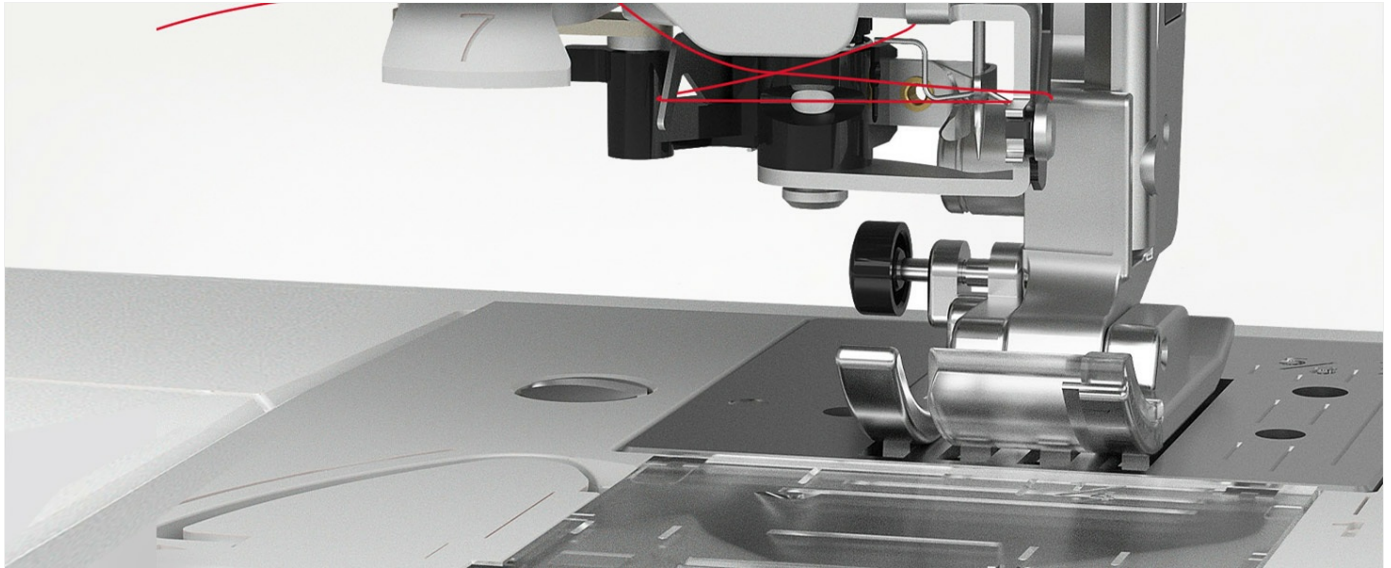


Image: Close-up view of the automatic needle threading system on the Brother CP100X.

Operating Instructions

1. Power On and Basic Controls

- Turn on the machine using the power switch. The LCD display will illuminate.
- Use the Start/Stop button to begin and end sewing without the foot pedal.
- The Reverse button allows for backstitching to secure seams.
- The Needle Up/Down button positions the needle as desired.
- Adjust sewing speed using the speed control slider.



Image: The control panel of the Brother CP100X, showing the Start/Stop button, reverse button, needle position, and speed control slider.

2. Stitch Selection

The CP100X offers 100 unique built-in stitches and 8 styles of auto-size one-step buttonholes.

1. Refer to the stitch chart located on the machine or in the manual.
2. Use the stitch selection buttons (e.g., +/-, direct selection) to choose your desired stitch. The selected stitch will appear on the LCD display.
3. The machine will automatically recommend the appropriate presser foot for the selected stitch.



Image: The stitch guide on the Brother CP100X, displaying various stitch patterns and their corresponding numbers.

3. Adjusting Stitch Settings

- **Stitch Length:** Use the dedicated buttons to increase or decrease the stitch length.
- **Stitch Width:** Adjust the stitch width for zigzag and decorative stitches.
- **Needle Position:** For some stitches, the needle position can be adjusted.

4. Using the Free Arm

Remove the accessory box to utilize the free arm for sewing cylindrical items like sleeves, pant hems, and cuffs.



Image: A pant leg being hemmed on the free arm of the Brother CP100X sewing machine.

Maintenance

1. Cleaning the Machine

Regular cleaning helps maintain optimal performance.

- Always unplug the machine before cleaning.
- Remove the needle plate and bobbin case.
- Use the included cleaning brush to remove lint and dust from the feed dogs and bobbin area.
- Wipe the exterior of the machine with a soft, dry cloth.

2. Needle Replacement

Replace the needle regularly (after 8-10 hours of sewing) or if it becomes bent or dull.

1. Turn off and unplug the machine.
2. Loosen the needle clamp screw.
3. Remove the old needle.
4. Insert a new needle with the flat side facing the back of the machine, pushing it up as far as it will go.
5. Tighten the needle clamp screw securely.

Troubleshooting

This section addresses common issues you might encounter. For more detailed troubleshooting, refer to the full operation manual.

Problem	Possible Cause	Solution
Skipped Stitches	Incorrect needle, bent needle, improper threading.	Replace needle with correct type/size, re-thread machine correctly.
Thread Breaking	Incorrect tension, poor quality thread, needle inserted incorrectly.	Adjust tension, use good quality thread, re-insert needle correctly.
Fabric Not Feeding	Presser foot not lowered, feed dogs lowered, lint in feed dogs.	Lower presser foot, raise feed dogs, clean feed dogs.
Bobbin Thread Jamming	Improper bobbin insertion, lint in bobbin case.	Re-insert bobbin correctly, clean bobbin case.

Specifications

Feature	Detail
Brand	Brother
Model Number	CP100X
Stitch Count	100 Unique Built-in Stitches
Buttonhole Styles	8 Auto-size One-step Buttonholes
Needle Threader	1-Step Automatic

Feature	Detail
Bobbin System	Quick-Set Drop-in Bobbin
Frame Construction	Durable Metal Frame
Needle Bar	Fixed Needle Bar
Included Accessories	Wide Table, 10 Sewing Feet, Hard Case, etc.
Power Source	Corded Electric (120V AC)
Item Weight	10.5 pounds
Product Dimensions	12"D x 20"W x 17"H

Warranty and Support

Brother International Corporation provides a limited warranty for this product. Please refer to the warranty card included with your machine or visit the official Brother support website for detailed warranty terms and conditions.

For technical assistance, replacement parts, or further inquiries, please contact Brother Customer Support or visit their official website. Ensure you have your model number (CP100X) and purchase information available when seeking support.

Important Note: This product is intended for sale and use only in the US at 120 volts. Use outside of this specified voltage or region may void the product warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question