



Manuals.plus /

› Braun /

› Braun Breakfast Toaster HT1010WH User Manual

Braun HT1010WH

Braun Breakfast Toaster HT1010WH Instruction Manual

MODEL: HT1010WH

Brand: Braun

1. Important Safety Instructions

Please read these safety instructions carefully before using the appliance and keep them for future reference. Incorrect use can lead to electric shock, fire, or injury.

- Do not touch hot surfaces. Always use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not insert oversized foods, metal foil packages, or utensils into the toaster as this may create a fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for other than intended use.

2. Product Overview

The Braun Breakfast Toaster HT1010WH is designed for efficient and convenient toasting. It features two wide slots, eight browning settings, and an integrated bun warmer for versatile use.



Image: Front view of the Braun Breakfast Toaster HT1010WH, showing two slots with bread inserted, the browning control dial, and the cancel button.

Key Features:

- **Dual Slots:** Accommodates two slices of bread simultaneously.
- **8 Browning Settings:** Allows precise control over toast crispness, from lightly golden to dark and crunchy.
- **Integrated Bun Warmer:** Conveniently warms pastries, croissants, or larger bread items.
- **Removable Crumb Tray:** Simplifies cleaning and maintenance.
- **Cancel Function:** Stops the toasting cycle at any time.
- **Power:** 900 Watts for quick heating.

3. Setup

1. **Unpack:** Carefully remove the toaster and all packaging materials.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials like curtains. Ensure there is adequate space around the toaster for ventilation.
3. **First Use:** Before toasting bread for the first time, operate the toaster without bread on the highest browning setting (8) for a few minutes. This will burn off any manufacturing residues and eliminate initial odors. A slight smoke or odor is normal during this process.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet (240V).

4. Operating Instructions

4.1 Toasting Bread

1. **Insert Bread:** Place one or two slices of bread into the toasting slots. Ensure the bread fits without forcing.
2. **Select Browning Level:** Turn the browning control dial to your desired setting, from 1 (lightest) to 8 (darkest). Experiment to find your preferred level.
3. **Start Toasting:** Press the carriage lever down until it locks into place. The toaster will begin toasting, and the indicator light (if present) will illuminate.
4. **Cancel Function:** To stop the toasting cycle at any time, press the cancel button (usually marked with a circle or 'STOP'). The bread will automatically pop up.
5. **Remove Toast:** Once the toasting cycle is complete, the toast will automatically pop up. Carefully remove the hot toast.



Image: A close-up view of the toaster's control panel, highlighting the browning level dial (settings 1-8) and the cancel button.



Image: A person placing a slice of bread into one of the toaster slots, demonstrating the ease of use.

4.2 Using the Bun Warmer

The integrated bun warmer allows you to gently heat pastries, rolls, or other baked goods that are too large for the toasting slots.

1. **Engage Warmer:** Push the bun warmer lever (if separate) or lift the integrated warming rack into position.
2. **Place Items:** Place the items to be warmed on the warming rack.
3. **Select Setting:** Use a low browning setting (e.g., 1 or 2) for warming.
4. **Start Cycle:** Press the carriage lever down.
5. **Monitor:** Keep an eye on the items to prevent burning. Press the cancel button when warmed to your preference.

5. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Empty Crumb Tray:** Pull out the removable crumb tray located at the bottom of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Ensure the tray is dry before reinserting.
3. **Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
4. **Interior Cleaning:** Never insert any objects into the toasting slots to clean them. If food becomes lodged, unplug the toaster and carefully turn it upside down to dislodge the food.
5. **Storage:** Store the toaster in a clean, dry place when not in use.

6. Troubleshooting

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the toaster is securely plugged in. Check your circuit breaker. Try a different outlet.
Bread is stuck in the toaster.	Oversized bread; mechanism jammed.	Unplug the toaster. Allow it to cool. Carefully remove the bread using non-metallic tongs.
Toast is too light or too dark.	Incorrect browning setting.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.
Uneven toasting.	Bread slices are too thick or unevenly cut.	Ensure bread slices are of uniform thickness and fit easily into the slots.

7. Specifications

Feature	Detail
Brand	Braun
Model Number	HT1010WH
Power	900 Watts
Number of Slots	2
Browning Settings	8
Material	Plastic
Color	White
Voltage	240 Volts
Dimensions (D x W x H)	20 cm x 35 cm x 30 cm
Special Features	Cancel function, Integrated bun warmer, Removable crumb tray

8. Warranty and Support

8.1 Warranty Information

This Braun Breakfast Toaster HT1010WH comes with a **1-year warranty from the authorized agent**. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects under normal household use.

8.2 Customer Support

For technical assistance, spare parts, or warranty service, please contact your local Braun authorized service center or the retailer from whom you purchased the product. You can often find contact information on the Braun official website or on your product packaging.

