

[Manuals.plus](#) /

› [FAMICOZY](#) /

› FAMICOZY HU-XI-201 Digital Alarm Clock User Manual

FAMICOZY HU-XI-201

FAMICOZY HU-XI-201 Digital Alarm Clock User Manual

Model: HU-XI-201

INTRODUCTION

Thank you for choosing the FAMICOZY HU-XI-201 Digital Alarm Clock. This compact and easy-to-use alarm clock features a large, clear red LED display, automatic brightness adjustment, and a crescendo alarm. This manual provides detailed instructions for setting up and operating your new alarm clock.



Figure 1: Front view of the FAMICOZY HU-XI-201 Digital Alarm Clock.

PACKAGE CONTENTS

- FAMICOZY HU-XI-201 Digital Alarm Clock
- AC Power Adapter (1.5m cord)

- User Manual (this document)

PRODUCT OVERVIEW



Figure 2: Top view showing control buttons.

The clock features intuitive buttons located on the top for easy access:

- **CLOCK Button:** Used to enter time setting mode.
- **ALARM Button:** Used to enter alarm setting mode.
- **SNZ/DIMMER Button:** Activates snooze during an alarm; adjusts display brightness.
- **HOUR Button:** Adjusts the hour during time/alarm setting.
- **MIN Button:** Adjusts the minute during time/alarm setting.



Figure 3: Rear view with power input and battery compartment.

The rear of the clock includes the DC power input and a battery compartment for backup power.

SETUP

1. Power Connection

1. Connect the provided AC power adapter to the DC input port on the back of the alarm clock.
2. Plug the adapter into a standard electrical outlet. The display will light up.

Outlet Powered
(Adapter included)



Sleek Design Easy to Read Neat Looking

Figure 4: Connecting the alarm clock to power.

2. Battery Backup (Optional)

For memory backup during power outages or when moving the clock, install 3 AAA batteries (not included) into the battery compartment on the back of the unit. In battery mode, the display will only light up for 10 seconds when a button is pressed, but the time and alarm functions will continue to operate.



Figure 5: Battery compartment for memory backup.

OPERATING INSTRUCTIONS

1. Setting the Time

1. Press and hold the **CLOCK** button for 3 seconds. The hour digits will flash.
2. Press the **HOUR** button to adjust the hour.
3. Press the **MIN** button to adjust the minute.
4. Press the **CLOCK** button again to confirm and exit time setting mode.
5. To switch between 12-hour and 24-hour format, press the **CLOCK** button once (short press) when not in setting mode.



Figure 6: 12-hour and 24-hour time display options.

2. Setting the Alarm

1. Press and hold the **ALARM** button for 3 seconds. The alarm hour digits will flash.

2. Press the **HOURL** button to adjust the alarm hour.
3. Press the **MIN** button to adjust the alarm minute.
4. Press the **ALARM** button again to confirm and exit alarm setting mode.
5. To activate or deactivate the alarm, short press the **ALARM** button. An alarm icon will appear on the display when the alarm is active.



Figure 7: The crescendo alarm starts softly and gradually increases in volume.

The alarm features a crescendo sound, starting quietly and gradually increasing in volume over two minutes to gently wake you. The maximum volume is approximately 80 decibels.

3. Snooze Function

When the alarm sounds, press the **SNZ/DIMMER** button to activate the snooze function. The alarm will pause for 5 minutes and then sound again.



Figure 8: Activating the snooze function.

To turn off the alarm completely, press any other button (CLOCK, ALARM, HOUR, MIN) while the alarm is sounding or snoozing.

4. Display Brightness Adjustment

The clock offers both automatic and manual brightness control.

Automatic Brightness

The display automatically adjusts its brightness based on the time of day:

- **07:00 - 17:59**: Brightest setting.
- **18:00 - 21:59**: Medium brightness.

- **22:00 - 06:59:** Dimmest setting to avoid disturbing sleep.

Auto Dim Auto Brighten



This function saves you a lot of energy and time to manually adjust the brightness

Figure 9: Automatic brightness adjustment schedule.

Manual Brightness Adjustment

You can manually override the automatic brightness settings. Short press the **SNZ/DIMMER** button repeatedly to cycle through 6 levels of brightness (Off, Dim, Low, Medium, High, Full).



6 Levels of Adjustable Brightness

choose your favorite one for auto dim-brighten function



Figure 10: Six levels of adjustable brightness.

MAINTENANCE

- Clean the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the clock away from direct sunlight, extreme temperatures, and high humidity.
- Ensure proper ventilation around the unit.
- If not using the clock for an extended period, remove the backup batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank.	No power or power outage.	Ensure the AC adapter is securely plugged in. Check the power outlet. If using battery backup, press any button to temporarily light up the display.
Alarm does not sound.	Alarm is not set or deactivated.	Verify the alarm time is set correctly and the alarm icon is visible on the display.
Time/Alarm cannot be set.	Not in setting mode.	Press and hold the CLOCK or ALARM button for 3 seconds to enter setting mode.

Problem	Possible Cause	Solution
Display is too bright/dim.	Brightness setting needs adjustment.	Short press the SNZ/DIMMER button to cycle through brightness levels.

SPECIFICATIONS

Feature	Detail
Brand	FAMICOZY
Model Number	HU-XI-201
Color	Black
Dimensions (L x W x H)	14.9 x 4.5 x 6.5 cm
Weight	200 grams
Material	Plastic
Display Type	Digital LED (Red)
Power Source	AC Cable (Adapter Included)
Battery Backup	3 x AAA batteries (not included)
Special Features	Adjustable Brightness, Automatic Dimmer, Crescendo Alarm, Snooze Function

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact FAMICOZY customer service through the retailer where the product was purchased. Please have your model number (HU-XI-201) available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09277XRZ6>

More documents and user manuals: <https://manuals.plus/>