

Manuals.plus /

- › Dell /
- › Dell Inspiron 14 5000 2-in-1 Laptop User Manual

## Dell Inspiron 14 5000 2 in 1 5406

# Dell Inspiron 14 5000 2-in-1 Business Laptop User Manual

Model: Inspiron 14 5000 2 in 1 5406

## INTRODUCTION

---

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Dell Inspiron 14 5000 2-in-1 Business Laptop. Designed for versatility, this device combines the power of a laptop with the flexibility of a tablet, featuring an 11th Gen Intel Core i7-1165G7 processor, 16GB DDR4 RAM, and a 512GB NVMe SSD.

Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your device.



## SETUP

---

### 1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in the "What's in the Box" section are present. Inspect the laptop for any physical damage.

- Laptop
- AC adapter
- Documentation

### 2. Connecting the Power Adapter

Connect the AC adapter to the power jack on the side of your laptop and then plug the power cable into a wall outlet. The battery will begin charging automatically.



Figure 2: Right side view of the laptop, highlighting the power jack, HDMI port, USB 3.2 Gen 1 Type-A port, and USB 3.2 Gen 1 Type-C

port.

### 3. Initial Power On and Windows Setup

Press the power button to turn on your laptop. Follow the on-screen instructions to complete the Windows 10 Pro setup process. This includes selecting your region, language, connecting to a Wi-Fi network, and creating a user account.

## OPERATING YOUR LAPTOP

---

### 1. Laptop Modes

Your Inspiron 14 5000 is a 2-in-1 device, offering multiple modes for various uses:

- **Laptop Mode:** Traditional laptop use with keyboard and touchpad.
- **Tent Mode:** Ideal for watching videos or presentations in confined spaces.
- **Stand Mode:** Perfect for touch-based applications and media consumption.
- **Tablet Mode:** Fully folded back for a tablet experience, utilizing the touchscreen.



Figure 3: The laptop in its standard laptop configuration.



Figure 4: The laptop fully folded back into tablet mode, emphasizing its touchscreen functionality.

## 2. Keyboard and Touchpad

The laptop features a backlit keyboard for comfortable typing in various lighting conditions and a precision touchpad for navigation. The fingerprint reader is integrated for secure login.



Figure 5: Close-up view of the backlit keyboard and large touchpad.

### 3. Connectivity Ports

Your laptop is equipped with various ports for connecting external devices:

- SD Card Reader
- USB 3.2 Gen 1 Type-A (x2)
- Headphone/Microphone Combo Jack
- Wedge-shaped lock slot
- Power jack
- HDMI 1.4b
- USB 3.2 Gen 1 Type-C (DP/Data Transfer/PowerDelivery)



Figure 6: Left side view of the laptop, showing the SD card reader, USB 3.2 Gen 1 Type-A port, headphone/microphone combo jack, and wedge-shaped lock slot.



Figure 7: Right side view of the laptop, showing the power jack, HDMI 1.4b port, USB 3.2 Gen 1 Type-A port, and USB 3.2 Gen 1 Type-C port.

## MAINTENANCE

---

### 1. Cleaning Your Laptop

Regular cleaning helps maintain your laptop's performance and appearance. Use a soft, lint-free cloth for the screen and exterior. For stubborn smudges, dampen the cloth with water or a screen cleaner. Avoid harsh chemicals.

### 2. Software Updates

Keep your Windows operating system and Dell drivers updated to ensure optimal performance, security, and compatibility. Check for updates regularly through Windows Update and Dell SupportAssist.

### 3. Battery Care

To prolong battery life, avoid extreme temperatures and fully discharging the battery frequently. For long-term storage, charge the battery to about 50% and store the laptop in a cool, dry place.

## TROUBLESHOOTING

---

### Common Issues and Solutions

Issue	Possible Cause	Solution
Laptop not powering on	No power, discharged battery, hardware issue	Ensure AC adapter is connected and outlet is working. Charge battery for at least 30 minutes.
Screen is blank	Sleep mode, display settings, hardware issue	Press any key or move mouse. Check display cable if external monitor. Restart laptop.
Wi-Fi not connecting	Incorrect password, router issue, driver issue	Verify Wi-Fi password. Restart router. Update Wi-Fi drivers.
Overheating	Blocked vents, heavy workload	Ensure vents are clear. Use on a hard, flat surface. Close unnecessary applications.

For more complex issues, refer to the Dell support website or contact Dell technical support.

## SPECIFICATIONS

---

Feature	Detail
Model	Inspiron 14 5000 2 in 1 5406
Processor	11th Generation Intel Core i7-1165G7 (up to 4.7 GHz)
Graphics	Intel Iris Xe Graphics with shared memory
Operating System	Windows 10 Pro 64-bit, English
Display	14.0-inch FHD (1920 x 1080) WVA LED-Backlit Touch Display
RAM	16 GB DDR4
Storage	512GB M.2 PCIe NVMe Solid State Drive
Wireless Connectivity	Intel Wi-Fi 6 2x2 (Gig+) and Bluetooth 5.1
Webcam	Yes (720 Pixels Rear Webcam Resolution)
Keyboard	Backlit Keyboard
Fingerprint Reader	Yes
Color	Titan Grey
Dimensions (H x W x D)	0.71" (17.94 mm) x 12.70" (322.50 mm) x 8.74"(221.90 mm)
Weight	3.42 lb (1.55 kg)

## WARRANTY AND SUPPORT

---

Your Dell Inspiron 14 5000 2-in-1 Business Laptop comes with a standard manufacturer's warranty. For detailed warranty terms and conditions, please refer to the documentation included with your product or visit the official Dell support website.

For technical assistance, driver downloads, and service requests, please visit [Dell Support](#) or contact Dell customer

service directly.

Protection plans are also available for extended coverage:

- 4-Year Protection Plan
- 2-Year Protection Plan
- Complete Protect (monthly subscription)

