

Sekey GZ2

Sekey 3x3m Waterproof Gazebo with Mosquito Nets

Model: GZ2 - Instruction Manual

INTRODUCTION

Thank you for choosing the Sekey 3x3m Waterproof Gazebo. This manual provides essential information for the safe assembly, operation, and maintenance of your gazebo. Please read these instructions carefully before use and retain them for future reference.

This gazebo features a robust powder-coated steel frame for excellent rust, corrosion, and break protection. The roof is made from 180 g/m² polyester, waterproof coated, and offers UV protection 50+. It includes four removable mosquito nets with zippers for insect protection and privacy. The two-layer roof design ensures good ventilation and helps prevent water accumulation and strong winds.

The generous 3x3m size provides ample space for various outdoor activities such as family gatherings, parties, and events in your backyard, lawn, patio, garden, or terrace.

Important Tip: We recommend not using the gazebo in extreme weather conditions such as storms, strong winds, or heavy rain.

SETUP AND ASSEMBLY

The Sekey gazebo is designed for straightforward, tool-free assembly thanks to its patented cross-beam and leg tube system. Follow these steps for a quick and easy installation.

Components Check

Before starting assembly, ensure all components are present:

- 1 x Gazebo Frame
- 1 x Roof Fabric

- 4 x Mosquito Nets with Zippers


Note: Dimensions may have a deviation of +/- 5%.

Assembly Steps

1. **Unfold the Frame:** Carefully unfold the main gazebo frame. Ensure all joints are aligned.
2. **Attach Roof Supports:** Connect the roof support beams. The patented self-locking mechanism allows parts to click into place without tools.
3. **Secure with Thumb Screws:** Hand-tighten any thumb screws to secure the frame connections. No screwdriver is required.
4. **Install Roof Fabric:** Drape the roof fabric over the frame. Ensure the double-layer roof is correctly positioned for ventilation. The corners are equipped with three adjustable snap points for easy tensioning of the canopy.
5. **Attach Mosquito Nets:** Zip the four mosquito nets to the frame. These can be tied back when not in use.
6. **Anchor the Gazebo:** Secure the gazebo to the ground using stakes or weights (not included) to prevent movement in windy conditions.



Image: Self-locking mechanism and thumb screws for tool-free assembly.

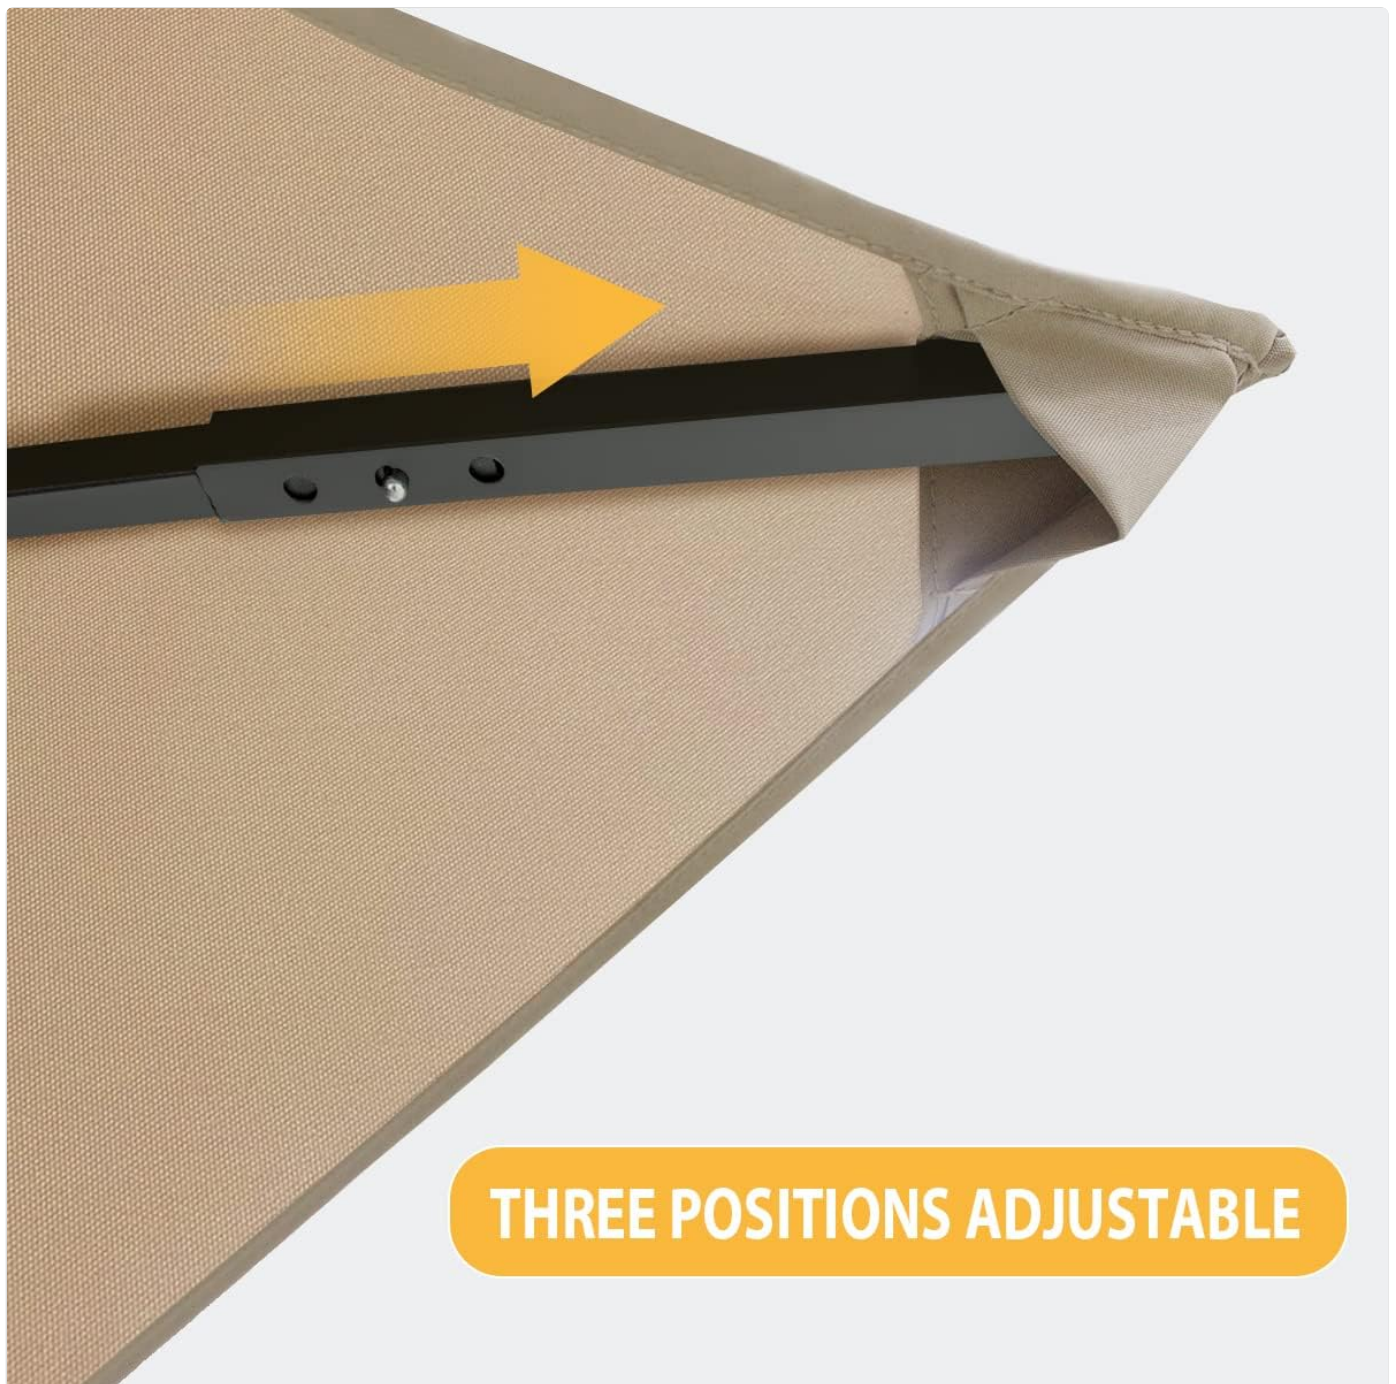

THREE POSITIONS ADJUSTABLE

Image: Three adjustable positions for canopy tensioning.

OPERATING GUIDELINES

Your Sekey gazebo is designed to enhance your outdoor living space. Here are some guidelines for optimal use:

Weather Protection

- **Waterproof Roof:** The PU1500+ coated polyester roof provides excellent protection against rain.
- **UV Protection:** The roof fabric offers UPF 50+ UV protection, shielding you from harmful sun rays.
- **Ventilation:** The double-layer roof design promotes airflow, reducing heat buildup and improving stability in light winds.

Mosquito Net Usage

The four removable mosquito nets can be zipped closed to create an insect-free environment, perfect for undisturbed evenings outdoors. When not needed, they can be tied back to the gazebo legs.



Image: Gazebo with mosquito nets providing insect protection.

Stability and Wind Resistance

The gazebo features 8 roof supports and 4 double cross braces for enhanced stability. The heavy-duty steel frame is designed to withstand moderate conditions. However, for safety, always anchor the gazebo securely. In anticipation of or during extreme weather conditions (storms, strong winds, heavy rain), it is strongly recommended to dismantle the gazebo to prevent damage.



3x3m Garten Pavillon



Image: Stable construction with reinforced roof supports and heavy steel frame.



Image: Detail of the heavy-duty steel frame.

CARE AND MAINTENANCE

Proper care will extend the life of your Sekey gazebo.

- **Cleaning the Fabric:** Clean the roof fabric and mosquito nets with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the waterproof coating and UV protection. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Maintenance:** Periodically inspect the steel frame for any signs of rust or damage. Clean the frame with a damp cloth. If any rust spots appear on the powder-coated frame, clean them and apply a rust-inhibiting paint to prevent further corrosion.
- **Storage:** When not in use for extended periods or during severe weather, disassemble the gazebo and store all components in a dry, protected area. Ensure the fabric is completely dry to prevent mold and mildew.
- **Check Connections:** Regularly check all frame connections and fasteners to ensure they are secure. Tighten any

loose thumb screws.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Gazebo feels unstable:** Ensure all frame connections are fully engaged and thumb screws are tightened. Verify that the gazebo is properly anchored to the ground using stakes or weights.
- **Water pooling on the roof:** Check that the roof fabric is correctly tensioned and evenly distributed over the frame. The three adjustable snap points at the corners can be used to increase tension. Ensure the double-layer roof design is not obstructed, allowing for proper water runoff.
- **Difficulty zipping mosquito nets:** Ensure the nets are aligned correctly and not caught on any part of the frame. Clean the zippers if they appear to be sticking.
- **Parts missing or damaged:** Refer to the 'Support' section to contact customer service for assistance with replacement parts.

SPECIFICATIONS

Feature	Detail
Brand	Sekey
Model	GZ2
Material (Roof)	100% Polyester (180 g/m²)
Material (Frame)	Powder-coated Steel (Iron)
Color	Khaki with Mosquito Net
Product Dimensions (L x W x H)	3.3L x 3.3W x 2.75H Meters
Item Weight	24 Kilograms
Water Resistance Level	Waterproof (PU1500+ coating)
UV Protection	Yes (UPF 50+)
Roof Design	Double-layer for ventilation
Mosquito Nets	4 removable, with zippers
Assembly Required	Yes (Tool-free assembly system)



Montage ohne Werkzeug



Image: Gazebo dimensions for planning your space.



Halten Sie Mücken und Insekten fern

Image: Roof material and protection features.

WARRANTY INFORMATION

Specific warranty details may vary by region and retailer. For information regarding the warranty period and terms for your Sekey gazebo, please refer to your purchase documentation or contact Sekey customer service directly.

CUSTOMER SUPPORT

If you have any questions about the product, assembly, installation, or require assistance with missing or damaged parts, please do not hesitate to contact our professional customer service team. We are committed to providing prompt and helpful support.

Please have your model number (GZ2) and purchase details ready when contacting support to ensure efficient service.

For contact information, please visit the official Sekey website or refer to the contact details provided with your purchase.

© 2023 Sekey. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question