

VOUNOT Shanghai

VOUNOT 300 cm Shanghai Cantilever Umbrella Instruction Manual

Model: Shanghai

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. SETUP INSTRUCTIONS

This section provides guidance for the initial assembly and setup of your VOUNOT Shanghai Cantilever Umbrella.

1.1 Unpacking and Component Check

Carefully unpack all components from the packaging. Ensure all parts are present and undamaged before proceeding with assembly.

1.2 Base Assembly

The umbrella features an iron pole with a powder coating and a stable cross-shaped base. It is essential to secure the cross base to the main pole. This process typically takes about 10 minutes.

- Attach the cross base to the bottom of the main pole.
- Ensure all connections are tightened securely.
- **Important Note:** A suitable umbrella base (e.g., weighted base or patio pavers) is required to stabilize the cross base. This additional base is not supplied and must be purchased separately to prevent the umbrella from tipping over.

1.3 Attaching the Umbrella Canopy

Once the pole and base are secure, attach the umbrella canopy structure to the designated points on the pole. Follow the specific instructions provided in your product packaging for precise attachment details.



Figure 1: Close-up views of the umbrella's adjustment mechanisms, including the crank for opening/closing, the tilt lever, and height adjustment knobs.

2. OPERATING INSTRUCTIONS

Learn how to effectively use your VOUNOT Shanghai Cantilever Umbrella to maximize shade and comfort.

2.1 Opening the Umbrella

To open the umbrella, locate the crank handle on the main pole. Turn the crank handle clockwise until the canopy is fully extended and taut. Do not force the crank once the umbrella is fully open.

2.2 Adjusting the Tilt Angle

The umbrella features a vertical tilting system. To adjust the angle, locate the tilt lever or button on the pole. Engage the mechanism and adjust the canopy to your desired angle for optimal shade. Release the lever/button to lock the position.

2.3 Rotating the Umbrella

Some models allow for 360-degree rotation. If your model has this feature, loosen the rotation knob(s) at the base of the main pole, rotate the umbrella to the desired position, and then tighten the knob(s) to secure it.

2.4 Closing the Umbrella

To close the umbrella, turn the crank handle counter-clockwise until the canopy is fully retracted. Ensure the canopy is neatly folded to prevent damage.



Figure 2: Visual guide to operating the umbrella's tilt, closing, rotation, and height adjustment features.

3. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your umbrella.

3.1 General Care

- Always close the umbrella when not in use, especially during windy conditions or heavy rain, to prevent damage.
- Avoid closing the umbrella forcefully.

3.2 Cleaning the Canopy

The canopy is made of 180 g/m² polyester fabric. To clean, gently wipe with a damp cloth. For stubborn stains, use a mild soap solution and rinse thoroughly with water. Allow the canopy to air dry completely before closing or storing.

3.3 Storage

When not in use for extended periods, or during adverse weather, close the umbrella and use the provided protective cover. This will shield the canopy from dust, dirt, and UV degradation, prolonging its lifespan.



Figure 3: The umbrella closed and protected with its cover for storage.

4. TROUBLESHOOTING

This section addresses common issues you might encounter with your umbrella.

4.1 Umbrella Not Opening/Closing Smoothly

- Check for any obstructions in the canopy or mechanism.
- Ensure the crank handle is properly engaged and not stripped.
- Lightly lubricate moving parts if resistance is felt (use a silicone-based lubricant).

4.2 Umbrella Instability

- Verify that the cross base is properly secured to the main pole.
- Confirm that an appropriate weighted umbrella base (not supplied) is in use and adequately filled/weighted.
- Ensure the umbrella is closed during strong winds.

If you encounter issues not covered here, please refer to the 'Warranty & Support' section for assistance.

5. SPECIFICATIONS

Detailed technical specifications for the VOUNOT 300 cm Shanghai Cantilever Umbrella.

| | |
|--------------------------------|-----------------------------------|
| Brand | VOUNOT |
| Model Name | Shanghai |
| Product Type Name | 300 cm Shanghai Umbrella |
| Color | Red |
| Cover Diameter | 300 Centimeters (3 m) |
| Height | 257 cm |
| Pole Diameter | 48 mm |
| Item Weight | 13 Kilograms |
| Material (Canopy) | Polyester (180 g/m ²) |
| Pole Material | Stainless Steel |
| Frame Material | Aluminum |
| Handle Material | Aluminum, Steel Alloy |
| Opening Mechanism | Crank Opening |
| Umbrella Tilt Mechanism | Manual Tilt |
| Special Features | UV Resistant |
| Included Components | Protective Cover |

Figure 4: Key dimensions of the VOUNOT Shanghai Cantilever Umbrella.

6. WARRANTY & SUPPORT

6.1 Warranty Information

This product comes with a **1-year EU spare parts availability duration**. This indicates that spare parts will be available for a period of one year from the date of purchase within the European Union. Please retain your proof of purchase for any warranty claims.

6.2 Customer Support

For any questions, concerns, or assistance with your VOUNOT Shanghai Cantilever Umbrella, please contact the manufacturer's customer service. Refer to your purchase documentation or the VOUNOT brand store on Amazon for contact details.

When contacting support, please provide your product model (Shanghai) and any relevant purchase information to expedite assistance.