

[Manuals.plus](#) /

› [COOPERS](#) /

› COOPERS Tablet Android 15 Tablets 8 inch, 6GB RAM, 32GB ROM Support 1TB Expand Computer Tablet PC, Quad-Core Processor, IPS Touch Screen, 2+5MP Dual Camera, 3000mah Battery, WiFi Tableta (Black)

COOPERS CP80

COOPERS 8-inch Android Tablet

USER MANUAL - MODEL CP80

Introduction

This user manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your COOPERS 8-inch Android Tablet, model CP80. Please read this manual thoroughly to ensure proper use and to maximize the performance and longevity of your device.

Package Contents

Upon opening the package, verify that all items listed below are present and in good condition:

- COOPERS 8-inch Android Tablet (Model CP80)
- Charging Cable (USB Type-C)
- Power Adapter

Product Overview

The COOPERS CP80 tablet is a compact and versatile device designed for everyday use, featuring an 8-inch IPS touch screen and powered by an Android 15 operating system. Its lightweight design makes it highly portable.





Android 15

6GB+32GB

Widevine L1

Image: Front and back view of the COOPERS CP80 tablet, highlighting its sleek design.

Type-C fast charger

3000mAh big capacity battery
ensure 6-8 hours mixed-use



Image: The COOPERS CP80 tablet being held in a hand, illustrating its compact and lightweight form factor for portability.

Key Features:

- **Display:** 8-inch IPS Touch Screen with 1024x600 resolution.
- **Processor:** Quad-Core Processor (1.5 GHz Allwinner).
- **Memory:** 6GB RAM (2GB + 4GB Expand), 32GB Internal Storage (expandable up to 1TB).
- **Cameras:** 2MP Front Camera, 5MP Rear Camera with Flash Light.
- **Battery:** 3000mAh for extended use.

- **Connectivity:** Wi-Fi (802.11n) and Bluetooth.

Setup Guide

1. Initial Charging

Before first use, fully charge your tablet. Connect the provided USB Type-C charging cable to the tablet's charging port and the power adapter to a wall outlet. The battery indicator on the screen will show charging progress.

Lightweight design

320g weight, slim and more portable



Image: The COOPERS CP80 tablet connected to its Type-C fast charger, indicating the charging process.

2. Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the COOPERS logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select "Power off" and confirm.

3. Initial Configuration

Upon first power-on, the tablet will guide you through the initial setup process. Follow the on-screen prompts to:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Set up your Google account (optional, but recommended for app downloads).
4. Review and accept terms and conditions.

Operating Instructions

Basic Navigation

The tablet features an intuitive touch screen interface. Use the following gestures for navigation:

- **Tap:** To select an item or open an application.
- **Swipe:** To scroll through pages or menus.
- **Pinch-to-Zoom:** To zoom in or out on images and web pages.
- **Long Press:** To access contextual menus or move icons.

Android OS

More smoothly system

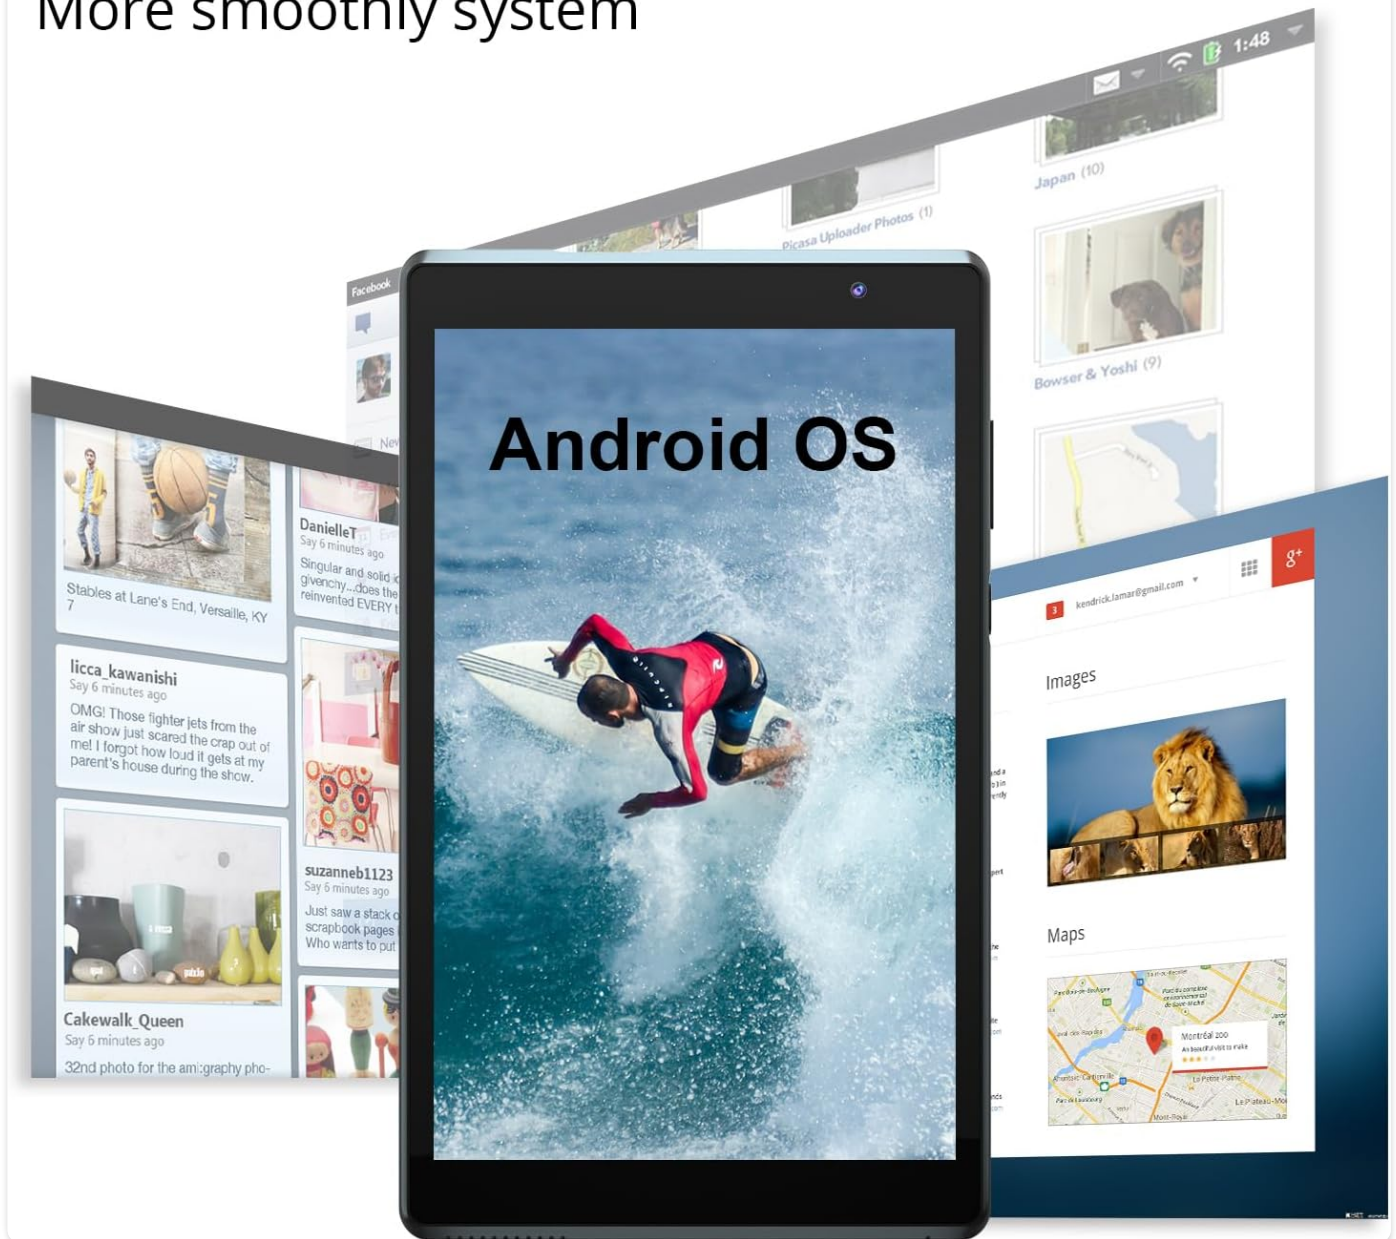


Image: The COOPERS CP80 tablet screen showing the Android operating system interface, indicating smooth system performance.

Connecting to Wi-Fi

1. Go to **Settings > Network & Internet > Wi-Fi**.
2. Toggle **Wi-Fi On**.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

Installing Applications

Your COOPERS tablet is GMS certified, allowing full access to the Google Play Store for downloading a wide variety of applications.

1. Ensure you are connected to Wi-Fi.
2. Open the **Play Store** app from your home screen or app drawer.
3. Search for the desired app and tap **Install**.

GMS certification

Google play store for more Apps



Image: The COOPERS CP80 tablet screen showing various application icons, signifying its GMS certification and access to the Google Play Store.

Using the Camera

The tablet is equipped with a 2MP front camera and a 5MP rear camera with flash for capturing photos and videos.

1. Open the **Camera** app.
2. Tap the camera icon to switch between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.

Maintenance

Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the tablet to extreme temperatures.
- Use only the provided or certified charging accessories.

Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and body.
- Do not use harsh chemicals or abrasive materials.
- Avoid getting moisture into ports or openings.

Software Updates

Periodically check for system updates to ensure optimal performance and security.

- Go to **Settings > System > System update**.
- Follow the on-screen instructions to download and install any available updates.

Storage Management

The tablet comes with 32GB of internal storage, expandable up to 1TB via a microSD card (not included).

- To insert a microSD card, locate the card slot on the side of the tablet and gently push the card in until it clicks.
- Regularly clear unnecessary files and cache to free up storage space. Go to **Settings > Storage**.

Troubleshooting

This section addresses common issues you might encounter with your COOPERS CP80 tablet. If the problem persists, please contact customer support.

Problem	Possible Cause	Solution
Tablet does not turn on.	Low battery; System crash.	Charge the tablet for at least 30 minutes. Perform a forced restart by holding the Power button for 10-15 seconds.
Wi-Fi connection issues.	Incorrect password; Router issue; Out of range.	Verify Wi-Fi password. Restart your router. Move closer to the Wi-Fi router.
Applications are slow or crashing.	Insufficient RAM; Too many background apps; App bug.	Close unused background applications. Clear app cache (Settings > Apps > [App Name] > Storage > Clear cache). Restart the tablet.
Screen is unresponsive.	Temporary software glitch.	Perform a forced restart by holding the Power button for 10-15 seconds.

Factory Reset

If you experience persistent issues, a factory reset can resolve many software-related problems.**Warning: This will erase all data on your tablet. Back up important data before proceeding.**

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your decision and follow the prompts.

Technical Specifications

Excelent performance

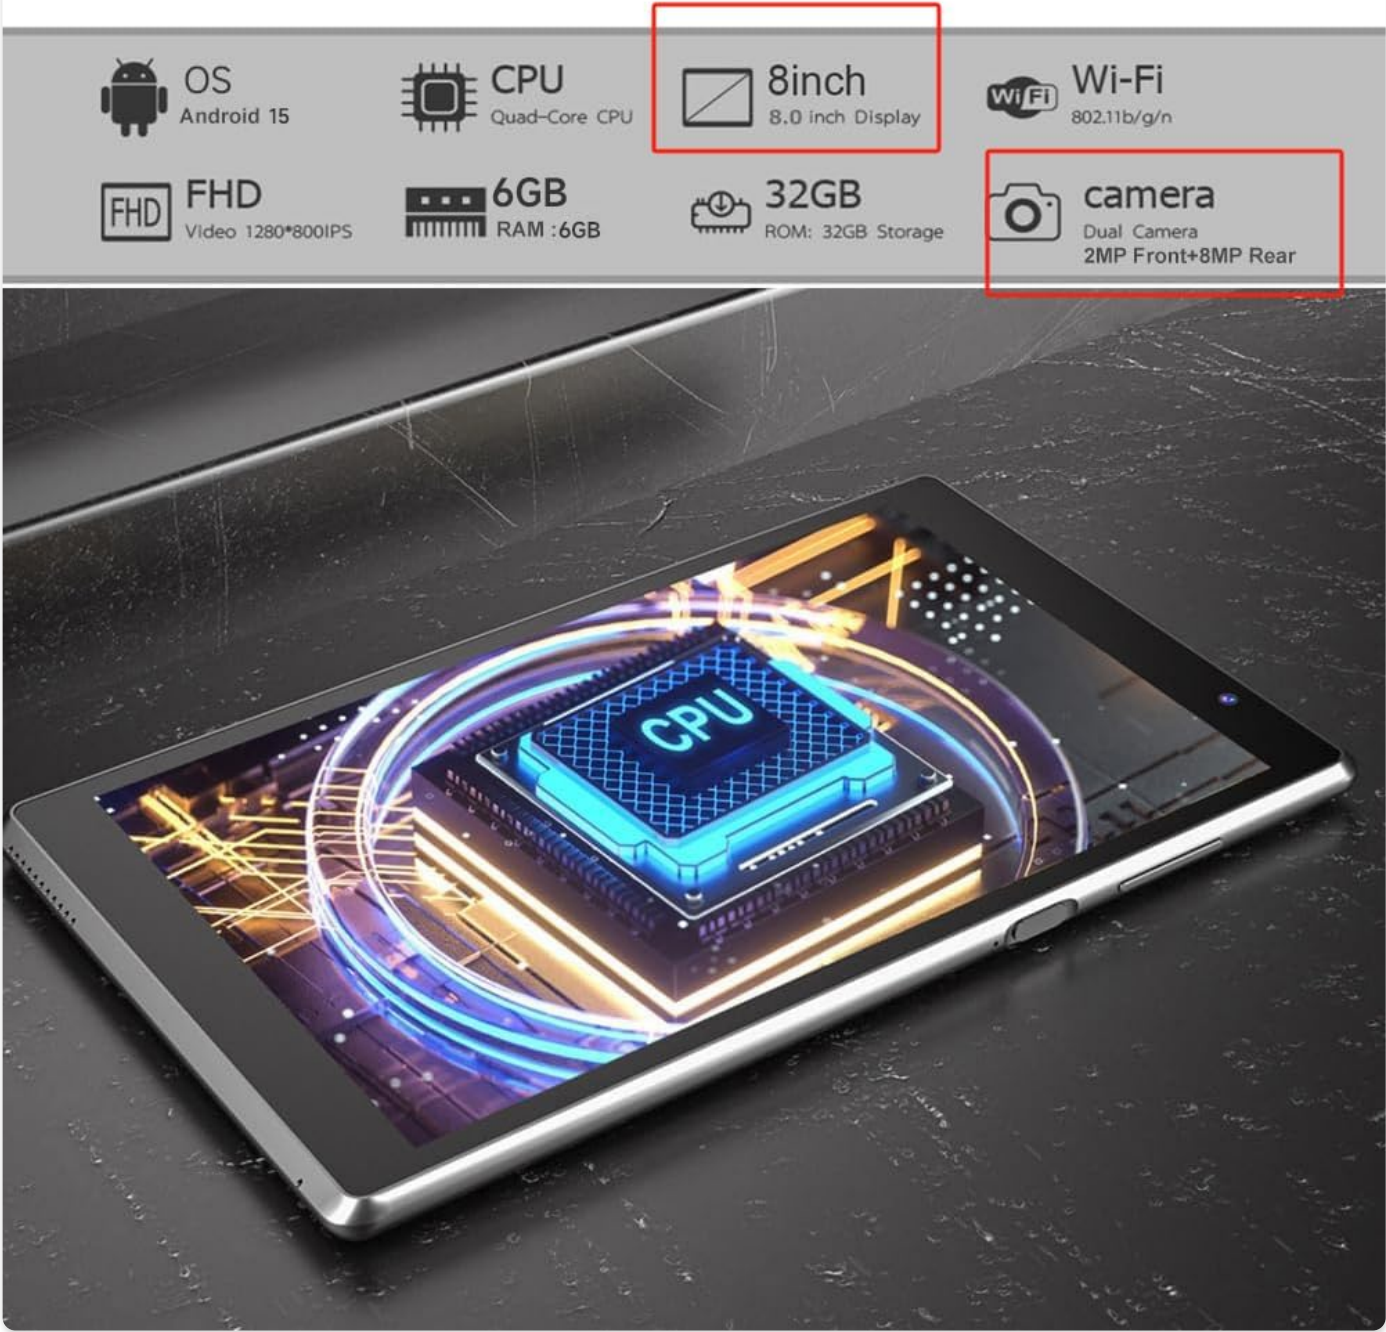


Image: An infographic summarizing key performance specifications of the COOPERS CP80 tablet, including OS, CPU, display size, RAM, ROM, and camera details.

Feature	Detail
Brand	COOPERS
Model Name	CP80
Operating System	Android 15

Feature	Detail
Screen Size	8 Inches
Display Resolution	1024 x 600 Pixels (IPS Touch Screen)
Processor	1.5 GHz Quad-Core (Allwinner)
RAM	6GB (2GB + 4GB Expand)
Internal Storage	32GB Flash Memory (Expandable up to 1TB)
Graphics Coprocessor	PowerVR GE8300
Front Camera	2.0 MP
Rear Camera	5.0 MP
Battery Capacity	3000mAh (Average 8 hours mixed-use)
Wireless Connectivity	802.11n Wi-Fi, Bluetooth
Dimensions (LxWxH)	8.27 x 5.12 x 0.39 inches
Item Weight	11.2 ounces

Warranty and Support

Warranty Information

Your COOPERS CP80 tablet comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact COOPERS customer support. Contact details can typically be found on the COOPERS official website or on the product packaging. For additional resources and FAQs, visit the official COOPERS support page [www.coopers.com/support](#) (Note: This is a placeholder URL as no specific support link was provided in the input data.)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question