

lotmusic CR2032

lotmusic 41-Inch Acoustic-Electric Guitar Instruction Manual

Model: CR2032

1. INTRODUCTION

Thank you for choosing the lotmusic 41-Inch Acoustic-Electric Guitar. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your instrument. Please read it thoroughly to ensure optimal performance and longevity of your guitar.



Image 1.1: The lotmusic 41-Inch Acoustic-Electric Guitar with its complete accessory kit.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- lotmusic 41-Inch Acoustic-Electric Guitar
- Gig Bag
- Clip-on Tuner
- Guitar Strap
- Picks (Assorted)
- Extra Set of Metal Strings
- Capo
- Silicon Mute
- Cleaning Cloth
- Allen Wrench (for truss rod adjustment)

- Instrument Cable



Image 2.1: Overview of the guitar and all accompanying accessories.

3. GUITAR FEATURES

The lotmusic Acoustic-Electric Guitar is designed with several features to enhance playability and sound:

- **Built-in EQ System:** Features volume control and a 4-band equalizer (Bass, Mid, Treble, Presence) for amplified sound customization.
- **Integrated Tuner:** A tuner is built into the EQ system for convenient and accurate tuning.
- **Cutaway Design:** Provides easier access to higher frets on the neck.
- **Smooth Fretboard:** Designed for comfortable and smooth playing, reducing hand fatigue.
- **Premium Machine Heads:** Equipped with 18:1 ratio machine heads for precise and stable tuning.
- **Adjustable Truss Rod:** Allows for neck relief adjustments to optimize string action and prevent warping.
- **Quality Tonewoods:** Features a Spruce wood top, Sapele wood back, Okoume wood body, and Mahogany wood fretboard for balanced acoustic tone.



Image 3.1: Front and back views highlighting the guitar's construction.



Image 3.2: Detailed view of the soundhole rosette.



Image 3.3: View of the 18:1 premium machine heads.



Image 3.4: The smooth fretboard for comfortable playing.

4. SETUP

4.1 Unpacking and Initial Inspection

Carefully remove the guitar and all accessories from the packaging. Inspect the guitar for any visible damage. If any issues are found, contact customer support immediately.

4.2 Tuning the Guitar

Your guitar may not be in tune upon arrival. Use the integrated tuner or the included clip-on tuner to tune the strings. The standard tuning for a 6-string guitar is E-A-D-G-B-e (from thickest to thinnest string).

1. Turn on the integrated tuner by pressing the 'Tuner' button on the EQ unit.
2. Pluck each string individually. The tuner display will indicate the note being played and whether it is sharp (too high) or flat (too low).
3. Adjust the corresponding tuning peg until the tuner indicates the correct note and is in tune.
4. Repeat for all six strings. New strings may require frequent re-tuning as they stretch.

4.3 String Installation/Replacement

The guitar comes with an extra set of strings. To replace strings:

1. Loosen the old string until it is completely slack.
2. Remove the string from the tuning peg and the bridge pin.
3. Insert the new string's ball end into the bridge hole and secure it with the bridge pin.
4. Thread the other end of the string through the tuning peg hole and wind it securely.
5. Tighten the string to the correct pitch using the tuner.

 
4.4 Action Adjustment (Truss Rod)

The guitar features an adjustable truss rod to control the neck's curvature and string action (height of strings above the fretboard). Adjustments should be made carefully.


- To lower the action (reduce string height), turn the truss rod clockwise using the provided Allen wrench.
- To raise the action (increase string height), turn the truss rod counter-clockwise.
- Make small adjustments (quarter turns) and allow the neck to settle before re-evaluating. Excessive or improper adjustment can damage the neck. If unsure, consult a professional guitar technician.

ADJUSTABLE ACTION

Adjust the action freely base on your habit

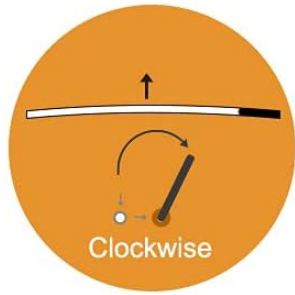

Clockwise

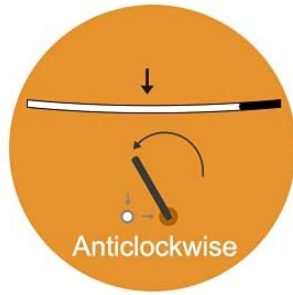 

Anticlockwise



+
Allen Wrench

Image 4.1: Illustration of truss rod adjustment using the Allen wrench.

COMFORT PALYING

Lower action without
any scratch

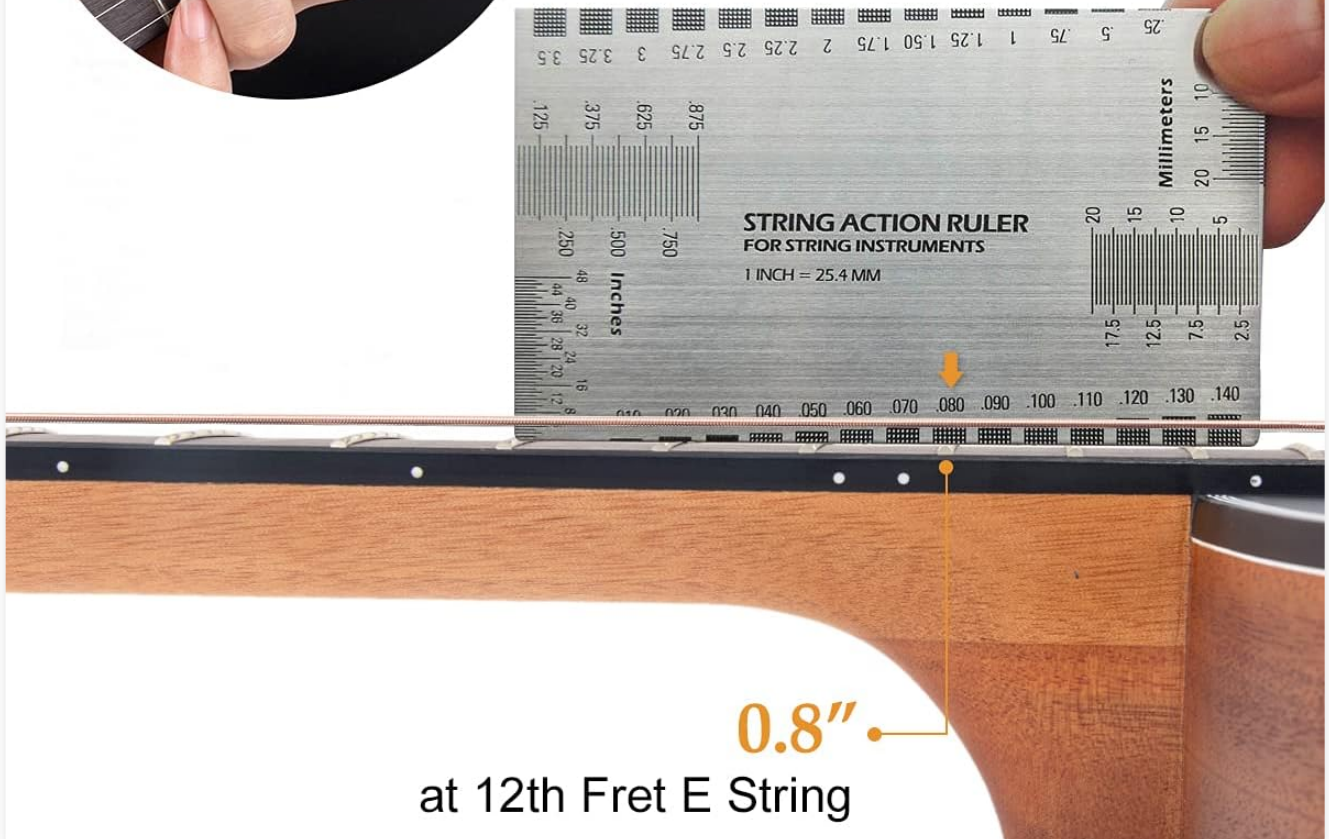 


Image 4.2: Measuring string action at the 12th fret.

5. OPERATING THE GUITAR

5.1 Acoustic Play

The lotmusic guitar can be played acoustically without any amplification. Its dreadnought body shape and spruce top provide a rich, resonant tone suitable for various musical styles.

5.2 Electric Play (Amplified)

To amplify your guitar's sound:

1. Connect one end of the instrument cable to the guitar's output jack (located near the strap button at the bottom of the guitar body).
2. Connect the other end of the cable to your amplifier's input.
3. Turn on your amplifier.
4. Use the controls on the guitar's built-in EQ unit to adjust volume and tone.

5.3 Built-in EQ Controls

The EQ unit on the side of the guitar allows for sound shaping:

- **Volume:** Controls the overall output level.
- **Bass:** Adjusts the low-frequency response.
- **Mid:** Adjusts the mid-frequency response.
- **Treble:** Adjusts the high-frequency response.
- **Presence:** Adds clarity and brightness to the sound.



BUILT-IN EQ

Integrated Tuner for
Fast and Easy Tuning



Image 5.1: The built-in EQ unit and output jack.

5.4 Using Accessories

- **Capo:** Place the capo on the desired fret to raise the pitch of all strings simultaneously.
- **Silicon Mute:** Insert the silicon mute under the strings near the bridge to reduce string vibration and volume for quiet practice.
- **Strap:** Attach the guitar strap to the strap buttons for playing while standing.

6. MAINTENANCE

6.1 Cleaning

Regularly wipe down your guitar with the provided cleaning cloth to remove dust, fingerprints, and sweat. For a deeper clean, use guitar-specific cleaning products, applying them to the cloth first, not directly to the guitar.

6.2 String Care

Strings should be replaced periodically, typically every 1-3 months depending on playing frequency, to maintain optimal tone and playability. Wipe strings after each use to prolong their life.

6.3 Storage

When not in use, store your guitar in the included gig bag to protect it from dust, minor impacts, and environmental changes. Avoid exposing the guitar to extreme temperatures or humidity, as this can affect the wood and cause damage.

7. TROUBLESHOOTING

- **Poor Tuning Stability:** New strings require time to stretch and settle. Re-tune frequently during the first few playing sessions. Ensure strings are properly wound around tuning pegs.
- **String Buzzing:** This can be caused by low string action, uneven frets, or improper neck relief. Refer to Section 4.4 for truss rod adjustment. If buzzing persists, professional setup may be required.
- **No Sound When Amplified:** Check that the instrument cable is securely connected to both the guitar and the amplifier. Ensure the amplifier is powered on and its volume is up. Verify the guitar's built-in EQ volume is not set to zero.
- **Distorted or Weak Amplified Sound:** Check the battery in the EQ unit (if applicable, though this model uses a CR2032 for the tuner, the pickup system is passive or powered by the amp). Ensure EQ settings are not extreme.

8. SPECIFICATIONS

Feature	Detail
Model Number	CR2032
Body Size	41 inches
Top Material	Spruce Wood
Back Material	Sapele Wood
Body Material	Okoume
Neck Material	Okoume Wood
Fretboard Material	Mahogany Wood
Number of Strings	6
Tuning Machine Ratio	18:1
Guitar Pickup Configuration	H (Humbucker, typically refers to the pickup type, though for an acoustic-electric it's usually a piezo or undersaddle pickup with preamp)
Guitar Bridge System	Adjustable
Item Weight	9.46 pounds
Product Dimensions	41 x 15.5 x 4.5 inches
Battery Type (for Tuner)	Lithium Manganese Dioxide (CR2032)



PROPERTIES

Brand	Horse
Size	41in
Body Top	Spruce
Body Back	Mahogany
Body sides	Mahogany
saddle	Bone
Neck	Okoume
Fret	20
Gear	18:1

Image 8.1: Guitar dimensions and key material specifications.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the documentation provided with your purchase or contact lotmusic customer service directly. Contact details can typically be found on the manufacturer's website or through your retailer.