

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Havells](#) /

› [Havells TC 20 Glass Ceramic Induction Cooktop User Manual](#)

Havells TC20

Havells TC 20 Glass Ceramic Induction Cooktop User Manual

Model: TC20 | Brand: Havells

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Havells TC 20 Glass Ceramic Induction Cooktop. Please read all instructions carefully before using the appliance and retain this manual for future reference.



Image: Havells TC 20 Glass Ceramic Induction Cooktop, black with a golden floral design, featuring a pot of food on its surface.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or damage to the appliance, basic safety precautions should be followed, including:

- Always ensure the appliance is placed on a stable, flat, and heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The appliance is designed for household use only. Do not use outdoors.
- Keep the appliance away from children.
- Use only induction-compatible cookware.
- Do not place metallic objects such as knives, forks, spoons, and lids on the induction cooktop surface as they can get hot.
- The cooktop surface remains hot after use. Avoid touching the hot surface immediately after cooking.
- This cooktop operates without an open flame, smoke, or radiation, contributing to a safer and eco-friendly cooking environment.

Safe and Eco-friendly Cooktop



No Flame



No Smoke



No Radiation

Image: Havells TC 20 Induction Cooktop highlighting its safe and eco-friendly operation with icons for "No Flame", "No Smoke", and "No Radiation".

PRODUCT FEATURES

The Havells TC 20 Induction Cooktop is equipped with advanced features for convenient and efficient cooking:

- **Powerful 2000W:** Ensures faster cooking and energy efficiency.
- **Designer Touch Panel:** A sleek and modern feather touch control panel for easy operation.
- **Digital LED Indicator:** Provides clear feedback on settings and status.
- **Auto Pan Detection Sensor:** Automatically detects suitable cookware and switches off when no pan is present, enhancing safety and energy saving.
- **Child Lock Function:** Prevents accidental operation, ensuring safety in households with children.
- **9 Pre-Set Cooking Modes:** Offers a variety of cooking options with fixed and variable settings for different dishes.
- **Low Maintenance Ceramic Glass Plate:** Easy to clean and maintain.
- **3 Hours Timer Function:** Allows for precise cooking time control.
- **Automatic Protection:** Features automatic protection against higher temperatures.
- **Robust PCB and Copper Coil:** Designed for durability and efficient performance.

- **BIS Approved R Marked:** Conforms to Bureau of Indian Standards for quality and safety.
- **Double MOV Technology:** Provides enhanced protection against voltage fluctuations.


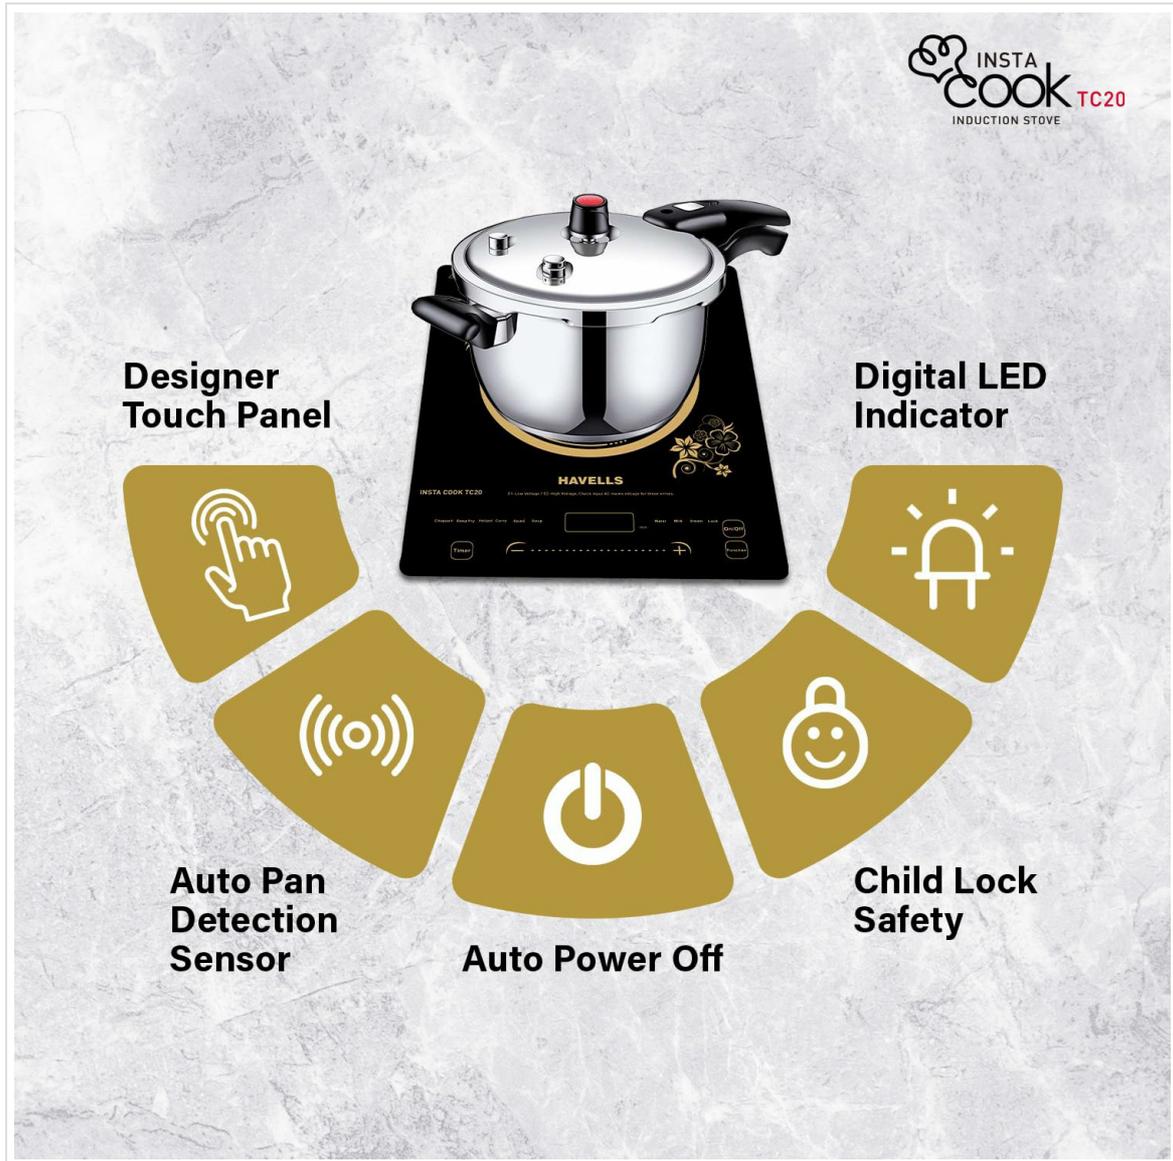


Image: Visual representation of key features including Designer Touch Panel, Digital LED Indicator, Auto Pan Detection Sensor, Auto Power Off, and Child Lock Safety.

Fixed and Variable Cooking



Energy Efficient

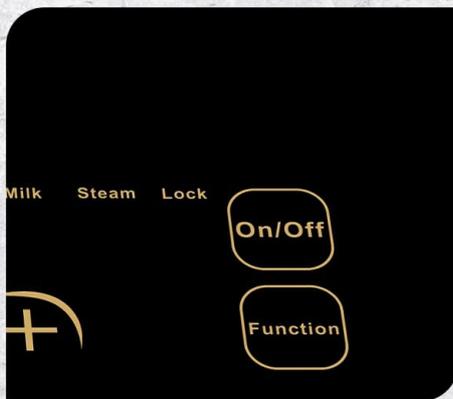

Variable Power Level Control



Portable and Easy to Handle

Image: Demonstrates fixed and variable cooking, energy efficiency, variable power level control, and the portable design of the cooktop.

Features to elevate your *experience*



Image: Highlights advanced features such as 3 hours timer, low maintenance, robust PCB, intelligent programs, BIS approval, and Double MOV technology.

SETUP

1. **Unpacking:** Carefully remove the induction cooktop from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the cooktop on a stable, flat, and dry surface. Ensure there is adequate ventilation around the appliance. Do not place it near heat sources or on metallic surfaces.
3. **Power Connection:** Plug the power cord into a suitable electrical outlet. Ensure the voltage matches the appliance's requirements.
4. **Initial Check:** Before first use, wipe the ceramic glass surface with a soft, damp cloth.

OPERATING INSTRUCTIONS

1. Power On/Off

- To turn on, press the **On/Off** button on the touch panel. The digital LED indicator will light up.

- To turn off, press the **On/Off** button again.

2. Selecting Cooking Modes

The cooktop features 9 pre-set cooking modes. Place an induction-compatible pan on the cooktop before selecting a mode.



Image: Display of the 9 pre-set cooking modes: Chapati, Deep Fry, Hotpot Curry, Sauté, Soup, Water, Milk, Steam, and Lock.

1. After powering on, select your desired cooking mode by pressing the corresponding button on the touch panel.
2. The available modes include: **Chapati, Deep Fry, Hotpot Curry, Sauté, Soup, Water, Milk, Steam, and Lock.**
3. Each mode has pre-defined power and temperature settings, some of which can be adjusted.

3. Adjusting Power/Temperature

- For modes with variable cooking features, use the **+** and **-** buttons to increase or decrease the power or temperature level.
- The digital LED indicator will display the current setting.

4. Using the Timer Function

- Press the **Timer** button to activate the timer.
- Use the **+** and **-** buttons to set the desired cooking duration, up to 3 hours.
- The cooktop will automatically switch off once the set time has elapsed.

5. Child Lock Function

- To activate the child lock, press and hold the **Lock** button for a few seconds. An indicator will show that the lock is active.
- To deactivate, press and hold the **Lock** button again until the indicator turns off.
- When the child lock is active, other buttons will not respond to touch.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction cooktop.

1. **Before Cleaning:** Always unplug the cooktop from the power outlet and allow it to cool completely.
2. **Ceramic Glass Surface:** Wipe the ceramic glass surface with a soft, damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner specifically designed for ceramic cooktops. Dry thoroughly with a clean cloth.
3. **Control Panel:** Wipe the touch control panel with a soft, dry cloth. Do not use excessive water or abrasive cleaners.
4. **Ventilation Openings:** Ensure the ventilation openings on the bottom and sides of the cooktop are free from dust and debris to prevent overheating.
5. **Do Not Use:** Avoid using abrasive sponges, scouring pads, or harsh chemical cleaners, as these can damage the surface.

TROUBLESHOOTING

If you encounter any issues with your Havells TC 20 Induction Cooktop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; power cord not properly plugged in.	Check power outlet and ensure the cord is securely plugged in.
Cooktop turns off automatically.	No induction-compatible pan detected; overheating; timer elapsed.	Ensure an induction-compatible pan is centered on the cooking zone. Allow the unit to cool if it overheated. Check timer settings.
Cooking is slow or inefficient.	Incorrect power setting; non-flat bottom pan; pan too small.	Increase power setting. Use flat-bottomed, induction-compatible cookware that covers most of the cooking zone.
Child lock is active.	Accidental activation of child lock.	Press and hold the Lock button for a few seconds to deactivate.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Model Number: GHICIDRK120 (TC20)

Brand: Havells

Power: 2000 W

Heating Elements: 1

Color: Black

Power Source: AC

Fuel Type: Electric

Item Weight: 2 kg 700 g

Item Dimensions (LxWxH): 30.5 x 29 x 42.2 Centimeters

Included Components: 1N Induction Cooktop, 1N Instruction Manual

Manufacturer: Havells India Limited

WARRANTY AND SUPPORT

Your Havells TC 20 Glass Ceramic Induction Cooktop comes with the following warranty:

- **Coil Warranty:** 3 Years
- **Product Warranty:** 1 Year (Onsite)

For warranty claims, technical assistance, or any product-related inquiries, please contact Havells customer support. Keep your purchase receipt and product details handy when contacting support.

You can find more information and support on the official Havells website or through your retailer.
