

Revolution Toastie Press

Revolution Toastie Press User Manual

Model: Toastie Press

1. INTRODUCTION

The Revolution Toastie Press is an innovative accessory designed to transform your standard toaster into a versatile appliance for creating a variety of grilled sandwiches, quesadillas, and other toasted delights. This manual provides comprehensive instructions for the safe and effective use, maintenance, and troubleshooting of your Toastie Press.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before first use and retain for future reference.

- Always ensure the Toastie Press is clean and free of debris before inserting into a toaster.
- Use only with standard bread toasters. Ensure the Toastie Press fits comfortably within your toaster slots without forcing.
- Do not touch the Toastie Press or the inside of the toaster during or immediately after use, as surfaces will be hot. Use the silicone-gripped handles for safe removal.
- Never operate the Toastie Press in a toaster that is unattended.
- Avoid overfilling the Toastie Press, as this can lead to spills and potential fire hazards within the toaster.
- Ensure food items are suitable for toasting and do not contain excessive moisture or fat that could drip and cause issues.
- Unplug the toaster from the power outlet before cleaning the Toastie Press or the toaster.

3. PRODUCT OVERVIEW

The Revolution Toastie Press is engineered for optimal performance and ease of use. Key components include:

- **Silicone Grips:** Designed to stay cool to the touch for safe handling.
- **Stainless Steel Clasp:** Securely locks the press shut during toasting.
- **Clamshell Design:** Ensures a tight closure to contain ingredients.
- **Non-Stick Coating:** Facilitates easy food release and cleaning.
- **Drip-Free Hinge:** Helps contain any potential drips from your food.
- **Magnetic Closure:** Provides a secure "snap" to keep the press closed.
- **Centering Tabs:** Aid in perfectly aligning the press within the toaster slot.



Image: Detailed view of the Revolution Toastie Press highlighting its various components and features, including silicone grips, stainless steel clasp, clamshell design, non-stick coating, drip-free hinge, magnetic closure, and centering tabs.

4. SETUP

Before first use, wash the Toastie Press thoroughly with warm, soapy water and rinse completely. Ensure it is dry before use.

1. Prepare your ingredients. For best results, use standard-sized bread slices that fit within the press.
2. Open the Toastie Press by releasing the stainless steel clasp.
3. Place your desired ingredients (e.g., bread, cheese, fillings) inside one half of the press. Do not overfill.
4. Close the Toastie Press, ensuring the magnetic closure snaps shut and the stainless steel clasp is secured.

5. OPERATING INSTRUCTIONS

Using the Revolution Toastie Press is simple and efficient:

1. Insert the loaded and closed Toastie Press into a standard toaster slot. The centering tabs will help align it properly.

Make a Grilled Sandwich in Your Toaster

Locks in drips

Grills to perfection

Less dehydration, more flavor

Cleans up quick

Stores easily



Image: The Revolution Toastie Press with a piece of bread inside, ready to be inserted into a toaster. The handle reads "every toaster needs me".

2. Lower the toaster lever. Select your desired toast setting. For best results, start with a medium setting and adjust based on your toaster and desired crispness.


Use with a Revolution Toaster for the Ultimate Toasting Experience

Thanks to
INSTAGLO™
Faster. Smarter. Tastier.



Image: The Revolution Toastie Press placed inside a Revolution toaster, demonstrating how it fits and interacts with the toaster's interface for optimal toasting.

3. The Toastie Press utilizes a patented design that grills the exterior and melts the interior through conductive heat transfer, similar to a panini press.

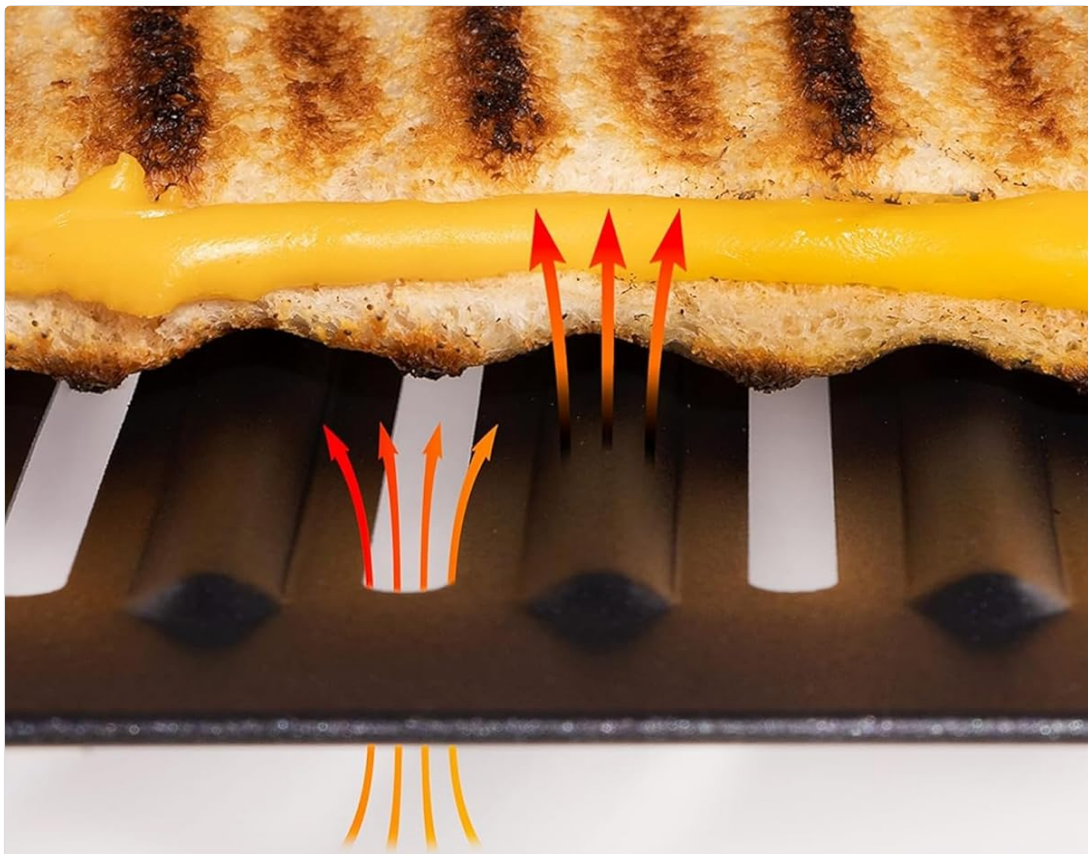

**Patented design crisps
the outside of sandwich
while heating and
melting the inside**

Image: A diagram illustrating the heat transfer process within the Toastie Press, showing how heat crisps the outside of the sandwich while melting the inside.

4. Once toasting is complete and the toaster pops up, carefully remove the Toastie Press using the silicone-gripped handles. Be aware that the metal parts will be hot.
5. Open the press and carefully remove your toasted item.



Image: A perfectly grilled sandwich, made using the Revolution Toastie Press, showcasing the golden-brown toast and melted cheese.

5.1. How-To Video

Your browser does not support the video tag.

Video: A short demonstration showing the process of stacking ingredients, locking the Toastie Press, toasting it in a toaster, and revealing the finished grilled sandwich. This video provides a quick visual guide to using the Revolution Toastie Press.

5.2. Versatile Applications

The Toastie Press is suitable for a variety of foods beyond traditional grilled cheese:

- **Quesadillas:** Create perfectly grilled quesadillas with melted cheese and fillings.
- **Paninis:** Achieve classic panini grill marks and warm, melted interiors.
- **Breakfast Sandwiches:** Toast English muffins or bread with egg, cheese, and meat.
- **Dessert Toasties:** Experiment with fruit and sweet fillings.

Turns your toaster into a breakfast, lunch, dinner, and dessert delight.



Image: A visual collage showcasing the versatility of the Revolution Toastie Press, featuring an egg sandwich, dinosaur-shaped chicken nuggets, a chicken quesadilla, and a peanut butter and jelly toastie, all prepared using the press.

6. MAINTENANCE AND CLEANING

Proper care ensures the longevity and performance of your Toastie Press:

- **After Each Use:** Allow the Toastie Press to cool completely before cleaning.
- **Hand Washing:** The non-stick coating allows for easy cleaning. Simply wipe clean with a damp cloth or wash with warm, soapy water. Rinse thoroughly.
- **Dishwasher Safe:** For convenience, the Toastie Press is dishwasher safe. Place it on the top

rack for best results.

- **Storage:** Store the clean and dry Toastie Press in a safe place, away from excessive heat or moisture.

7. TROUBLESHOOTING

If you encounter issues with your Revolution Toastie Press, consider the following:

Problem	Possible Cause	Solution
Food not toasting evenly or not hot enough.	Toaster setting is too low; toaster slots are too narrow; overfilling the press.	Increase toaster setting. Ensure the press fits without obstruction. Do not overfill.
Food sticking to the press.	Insufficient non-stick properties due to residue; food type.	Ensure the press is thoroughly clean. A light spray of cooking oil can be used if desired, but is generally not necessary.
Smoke or burning smell from toaster.	Food residue in toaster or on press; overfilled press causing drips.	Immediately unplug toaster. Allow to cool. Clean toaster crumb tray and the Toastie Press. Ensure not to overfill.

8. SPECIFICATIONS

- **Brand:** Revolution
- **Model:** Toastie Press
- **Material:** Aluminum, Stainless Steel
- **Color:** Black
- **Product Dimensions:** 7.43"D x 5.31"W x 3.35"H
- **Item Weight:** 10.5 ounces
- **UPC:** 810034150028
- **ASIN:** B09298Q3QB
- **Country of Origin:** China

9. WARRANTY AND SUPPORT

The Revolution Toastie Press comes with a 30-day money back guarantee. For further assistance, product inquiries, or to report any issues, please contact Revolution customer support through their official website or the retailer where the product was purchased.

For more information, visit the [Revolution Cooking Store on Amazon](#).