

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sirman](#) /

› [SIRMAN Ektor 37 Professional Juicer Instruction Manual](#)

Sirman Ektor 37

SIRMAN Ektor 37 Professional Juicer Instruction Manual

Model: Ektor 37

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your SIRMAN Ektor 37 Professional Juicer. Please read this manual thoroughly before using the appliance and retain it for future reference.

SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before assembly, disassembly, or cleaning.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils away from moving parts during operation.
- Ensure all parts are correctly assembled before operating the juicer.
- This appliance is for professional use.
- Do not operate the juicer if the power cord or plug is damaged.

PRODUCT COMPONENTS

The SIRMAN Ektor 37 Professional Juicer consists of several key components:

- **Motor Base:** Contains the 400W motor.
- **Feeding Chute:** For introducing fruits and vegetables.
- **Pusher:** To guide produce into the feeding chute.
- **Juice Bowl:** Collects the extracted juice.
- **Pulp Container:** Collects the discarded pulp.
- **Juice Container:** For collecting the finished juice.
- **Auger/Squeezing Screw:** Extracts juice from produce.
- **Filter/Strainer:** Separates juice from pulp.
- **Cleaning Brush:** For maintenance.



Figure 1: Exploded view of the SIRMAN Ektor 37 juicer showing all detachable components including the motor base, feeding chute, juice bowl, pulp container, juice container, auger, filter, and cleaning brush. This image helps in identifying each part for assembly and cleaning.

SETUP AND ASSEMBLY

- 1. Unpack:** Carefully remove all components from the packaging.
- 2. Clean:** Wash all detachable parts (juice bowl, auger, filter, containers, pusher) with warm, soapy water. Rinse thoroughly and dry. The motor base should only be wiped with a damp cloth.
- 3. Assemble:**
 - Place the juice bowl onto the motor base, ensuring it is securely seated.
 - Insert the filter into the juice bowl, aligning it properly.
 - Place the auger into the center of the filter, twisting gently until it drops into place.
 - Attach the feeding chute assembly onto the juice bowl, ensuring it locks into position.
 - Position the pulp container under the pulp outlet and the juice container under the juice outlet.





Figure 2: The SIRMAN Ektor 37 juicer fully assembled, showing the main unit with the juice and pulp collection containers placed correctly

for operation. This illustrates the final setup before juicing.

OPERATING INSTRUCTIONS

- 1. Prepare Produce:** Wash fruits and vegetables thoroughly. Cut larger items into pieces that fit comfortably into the feeding chute. Remove hard pits, large seeds, and thick peels (e.g., citrus, pineapple).
- 2. Power On:** Plug the juicer into a suitable power outlet. Press the power button to start the motor.
- 3. Feed Produce:** Slowly feed the prepared produce into the feeding chute. Use the pusher to gently guide the produce down. Do not force produce into the chute, as this can damage the motor or auger.
- 4. Juicing Process:** The juicer will extract juice into the juice container and separate pulp into the pulp container.
- 5. Continuous Operation:** The juicer is designed for continuous professional use. However, if processing very hard ingredients, allow brief pauses to prevent overheating.
- 6. Power Off:** Once juicing is complete, press the power button to turn off the appliance and unplug it from the power outlet.



Figure 3: A hand gently pushing celery into the feeding chute of the SIRMAN Ektor 37 juicer. This demonstrates the correct method for introducing produce during operation.







Figure 4: The SIRMAN Ektor 37 juicer actively extracting juice, with the juice flowing into the collection container. This image shows the appliance during its primary function.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure the longevity and optimal performance of your juicer.

- 1. Disconnect Power:** Always unplug the juicer from the power outlet before cleaning.
- 2. Disassemble:** Disassemble the juicer in reverse order of assembly.
- 3. Rinse:** Rinse all detachable parts under running water immediately after use to prevent pulp from drying and sticking.
- 4. Wash:** Wash the juice bowl, auger, filter, containers, and pusher with warm, soapy water. Use the provided cleaning brush to remove stubborn pulp from the filter mesh.
- 5. Clean Motor Base:** Wipe the motor base with a damp cloth. Never immerse it in water.
- 6. Dry and Store:** Ensure all parts are completely dry before reassembling or storing. Store the juicer in a clean, dry place.



Figure 5: The cleaning brush provided with the SIRMAN Ektor 37 juicer, alongside the two different filters. This highlights the tools and

components essential for thorough cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; power switch off; parts not assembled correctly.	Ensure plug is securely in outlet; turn power switch on; reassemble all parts correctly, ensuring they are locked.
Motor stops during operation.	Overload protection activated; too much produce fed too quickly.	Turn off and unplug. Remove excess produce. Wait 15-20 minutes for motor to cool before restarting. Feed produce slowly.
Excessive pulp in juice.	Filter clogged; soft produce being juiced.	Clean the filter thoroughly. For very soft produce, some pulp is normal.
Loud noise or vibration.	Parts not assembled correctly; foreign object in juicer.	Disassemble and reassemble carefully. Check for any foreign objects and remove them.

SPECIFICATIONS

Feature	Detail
Brand	Sirman
Model	Ektor 37
Power	400 Watts
Material	Stainless Steel (exterior structure), Plastic (internal components)
Dimensions (W x H x D)	150 mm x 450 mm x 240 mm (approximate)
Feeding Chute Dimensions	78 x 88 mm / 43 x 35 mm
Finish Type	Brushed
ASIN	B09299H2WM

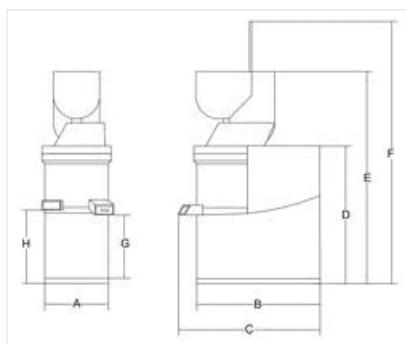


Figure 6: Technical drawing illustrating the dimensions of the SIRMAN Ektor 37 juicer. This provides precise measurements for width, height, and depth, useful for placement and installation planning.

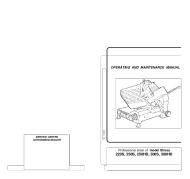
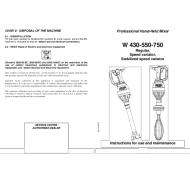
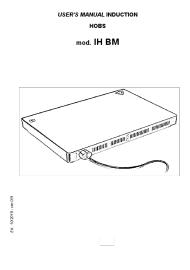
WARRANTY AND SUPPORT

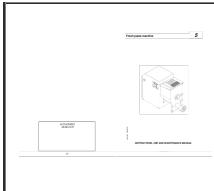
For warranty information or technical support, please contact your local SIRMAN distributor or refer to the official SIRMAN website. Keep your purchase receipt as proof of purchase.

SIRMAN has been manufacturing quality equipment for professionals for over 50 years, ensuring reliability and performance.

© 2023 SIRMAN. All rights reserved.

Related Documents - Ektor 37

	<p>Sirman Stresa Meat Slicer Operating and Maintenance Manual</p> <p>This manual provides essential operating and maintenance instructions for Sirman Stresa professional meat slicers, models 220S, 250S, 250HD, 300S, and 300HD. It details safe usage, cleaning procedures, routine maintenance, and disposal guidelines to ensure optimal performance and equipment longevity.</p>
	<p>Sirman Mozzarella Cutter: Use and Maintenance Manual</p> <p>Official instruction manual for the Sirman Mozzarella Cutter. Covers installation, operation, cleaning, maintenance, safety guidelines, and technical specifications for professional kitchen use.</p>
	<p>Sirman Vortex W 430-550-750 Professional Hand-Held Mixer User Manual</p> <p>This user manual provides comprehensive instructions for the Sirman Vortex W 430-550-750 professional hand-held mixer, covering its features, safe operation, installation, cleaning, maintenance, and disposal procedures. It includes detailed safety warnings and technical specifications.</p>
	<p>Sirman SMR 220-250 Food Slicer: Instruction, Use, and Maintenance Manual</p> <p>Comprehensive guide for the Sirman SMR 220-250 professional food slicer, covering installation, operation, safety, cleaning, and maintenance procedures.</p>
	<p>User Manual for Induction Hob Model IH BM</p> <p>This user manual provides comprehensive instructions for the safe operation, cleaning, and maintenance of the Sirman Induction Hob Model IH BM. It includes safety precautions, suitable cookware guidelines, and troubleshooting tips.</p>



[Sirman Concerto 5 Fresh Pasta Machine: Instructions, Use, and Maintenance Manual](#)

Comprehensive manual for the Sirman Concerto 5 fresh pasta machine, covering delivery, warranty, technical features, operation, maintenance, and troubleshooting. Includes safety guidelines and electrical diagrams.