

[manuals.plus](#) /

› [MASINGO](#) /

› [MASINGO Soprano X1 Portable Karaoke Machine User Manual](#)

MASINGO Soprano X1

MASINGO Soprano X1 Portable Karaoke Machine User Manual

Model: Soprano X1

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective operation of your MASINGO Soprano X1 Portable Karaoke Machine. Please read this manual thoroughly before using the product and retain it for future reference. The Soprano X1 is a versatile portable PA speaker system designed for karaoke and audio playback, featuring wireless microphones, various input options, and integrated lighting effects.



Image 1.1: The MASINGO Soprano X1 Portable Karaoke Machine, showcasing its main unit, tablet holder, two wireless microphones, and remote control.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please

contact customer support.

- Soprano X1 Karaoke Machine (Main Unit)
- 2 Wireless Microphones
- User Manual (this document)
- Tablet Holder
- Power Plug (AC adapter)
- Auxiliary Cable (3.5mm)
- TV Cable (AUX-RCA)
- Car Plug (for 12V car charging)
- Remote Control



Image 2.1: Visual representation of the Soprano X1 main unit and all included accessories: two wireless microphones, 3.5mm AUX cable, AUX-RCA TV cable, 15V charging cable, device holder, and remote control.

3. PRODUCT OVERVIEW: CONTROLS AND PORTS

Familiarize yourself with the various controls and connection ports on your Soprano X1 unit.

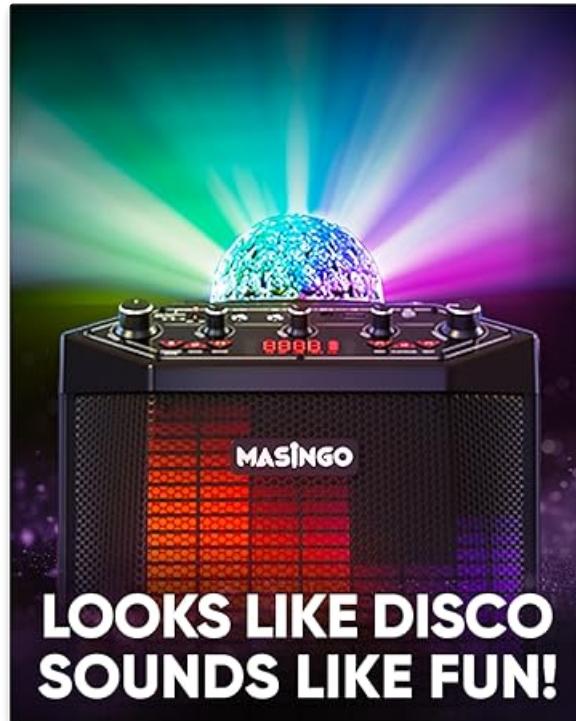


Image 3.1: Close-up of the Soprano X1 control panel, indicating the location of various inputs, controls, and switches.

- **Power Switch:** Turns the unit on or off.
- **LED Lights Switch:** Activates or deactivates the front LED lights.
- **Disco Ball Switch:** Turns the top disco ball light on or off.
- **Mode Button:** Cycles through input modes (Bluetooth, USB, Micro-SD, AUX, FM Radio).
- **Microphone Volume Knob:** Adjusts the volume of the connected microphones.
- **Microphone Echo Knob:** Controls the echo effect applied to microphone audio.
- **Master Volume Knob:** Adjusts the overall output volume of the system.
- **Equalizer (EQ) Sliders:** Fine-tune audio frequencies (bass, mid, treble).
- **USB Port:** For USB drive playback.
- **Micro-SD Card Slot:** For Micro-SD card playback.
- **AUX Input (3.5mm):** For connecting external audio devices via auxiliary cable.
- **TV Audio Input (RCA):** For connecting to a TV for audio output.
- **DC 15V Input:** For connecting the AC power adapter.
- **EXT DC 12V Input:** For connecting the car charger.

EVERYTHING YOU NEED FOR KARAOKE



Image 3.2: The two wireless microphones included with the Soprano X1, highlighting their individual displays for settings like volume, echo, and EQ.

4. SETUP

4.1. Charging the Main Unit

1. Connect the provided AC power adapter to the DC 15V input port on the Soprano X1.
2. Plug the adapter into a standard wall outlet.
3. The unit will begin charging. A full charge typically takes several hours. The battery indicator on the unit will show charging status.
4. For car charging, use the provided car plug and connect it to the EXT DC 12V input.

4.2. Microphone Setup

1. Unscrew the bottom cap of each wireless microphone.
2. Insert two AA batteries (not included) into each microphone, observing the correct polarity (+/-).
3. Replace the bottom cap.
4. Press and hold the power button on each microphone to turn it on. The microphone will automatically

connect to the Soprano X1 when the main unit is powered on.

4.3. Installing the Tablet Holder

1. Locate the mounting slot on the top of the Soprano X1 unit.
2. Insert the tablet holder into the slot until it is securely in place.
3. Adjust the holder to accommodate your tablet or smartphone for lyrics display.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

- To power on the Soprano X1, toggle the main power switch to the 'ON' position.
- To power off, toggle the main power switch to the 'OFF' position.

5.2. Bluetooth Pairing

1. Turn on the Soprano X1. The unit will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon on the display.
2. On your smartphone, tablet, or other Bluetooth-enabled device, navigate to the Bluetooth settings.
3. Select "MASINGO Soprano X1" from the list of available devices.
4. Once paired, the Bluetooth icon on the Soprano X1 display will become solid, and you can play audio wirelessly from your device.

5.3. Media Playback (USB, Micro-SD, AUX)

- **USB/Micro-SD:** Insert a USB drive or Micro-SD card containing audio files into the respective port/slot. Press the 'Mode' button until 'USB' or 'SD' is displayed. The unit will automatically begin playing compatible audio files.
- **AUX Input:** Connect an external audio device (e.g., MP3 player, laptop) to the 3.5mm AUX input using the provided auxiliary cable. Press the 'Mode' button until 'AUX' is displayed.
- **TV Audio:** Connect your TV's audio output to the RCA TV Audio input using the provided TV cable. Select the appropriate input mode on the Soprano X1.

5.4. Microphone Adjustments

- **Microphone Volume:** Use the 'Mic Volume' knob on the main unit to adjust the overall volume of both microphones.
- **Microphone Echo:** Use the 'Mic Echo' knob to add or reduce the echo effect on your vocals.
- **Individual Microphone Settings:** Each wireless microphone has its own controls for volume, echo, and EQ, accessible via its display. Adjust these settings directly on the microphone for personalized sound.

5.5. Light Modes

- **Front LED Lights:** Toggle the 'LED Lights' switch on the control panel to activate or deactivate the colorful LED lights on the front speaker grille.
- **Disco Ball:** Toggle the 'Disco Ball' switch to turn the top-mounted disco ball light on or off.

5.6. FM Radio

- Press the 'Mode' button until 'FM' is displayed.
- Use the playback control buttons (e.g., Play/Pause, Next/Previous) to scan for and select FM radio stations.

5.7. Portability

The Soprano X1 features a telescoping handle and wheels for easy transport. Extend the handle and tilt the unit to roll it to your desired location.



Image 5.1: The Soprano X1 being transported with its integrated wheels and extendable handle, highlighting its design for on-the-go use.

6. MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use liquid cleaners or abrasive materials.
- Storage:** When not in use, store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care:** If storing for extended periods, it is recommended to fully charge the unit every 3-6 months to maintain battery health. Remove batteries from microphones if not used for a long time.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Unit not charged; Power adapter not connected; Power switch off.	Ensure unit is charged or connected to power. Verify power switch is in 'ON' position.
No sound from speaker	Master volume too low; Incorrect input mode selected; Audio source issue.	Increase Master Volume. Press 'Mode' button to select correct input. Check audio source device.
Microphones not working	Microphone batteries low/dead; Microphones not powered on; Mic volume too low.	Replace microphone batteries. Ensure microphones are powered on. Increase 'Mic Volume' knob.
Bluetooth disconnects frequently	Device too far from unit; Interference; Bluetooth device issue.	Keep Bluetooth device within 30 feet (10 meters) of the Soprano X1. Avoid obstacles. Re-pair the device.
Excessive echo	'Mic Echo' knob set too high.	Adjust the 'Mic Echo' knob counter-clockwise to reduce the effect.


8. SPECIFICATIONS

- Model:** Soprano X1
- Item Weight:** 24 pounds
- Product Dimensions:** 13.2 x 15.4 x 24 inches
- Speaker Power:** 40 watts
- Speaker Count:** 1 (three-way woofer)
- Battery Type:** 12V Lead Acid
- Battery Capacity:** 7.4V 6000 mAh (approx. 2-3 hours run time)
- Power Source:** Battery Powered / 15V DC (AC adapter) / 12V DC (Car plug)
- Connectivity:** Bluetooth, USB, Micro-SD, 3.5mm AUX, RCA (TV Audio)
- Special Features:** Portable, Rechargeable, Wireless Microphones, Disco Ball, LED Lights, FM Radio

9. WARRANTY AND SUPPORT


The MASINGO Soprano X1 Karaoke Machine comes with a 60-day warranty from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For technical support, warranty claims, or any questions regarding your product, please refer to the contact information provided on the MASINGO official website or your purchase documentation. Please have your model number (Soprano X1) and proof of purchase ready when contacting support.

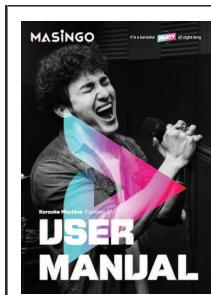


[Masingo Soprano X1 Karaoke Machine User Manual](#)

User manual for the Masingo Soprano X1 Karaoke Machine, detailing its features, setup, operation, maintenance, and troubleshooting. Learn how to connect devices, use microphones, and enjoy your karaoke experience.

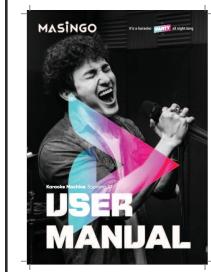


[Masingo Soprano X1 Karaoke Machine User Manual](#)

User manual for the Masingo Soprano X1 Karaoke Machine, covering setup, features, operation, maintenance, and troubleshooting for this portable PA system with wireless microphones.

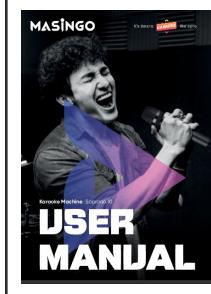


[Masingo Soprano X1 Karaoke Machine User Manual](#)

Comprehensive user manual for the Masingo Soprano X1 Karaoke Machine, covering setup, features, troubleshooting, and maintenance.

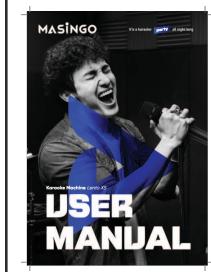


[Masingo Lento X5 Karaoke Machine User Manual](#)

Comprehensive user manual for the Masingo Lento X5 Karaoke Machine. Learn about setup, operation, features like Bluetooth connectivity, wireless microphones, PA system functionality, LED lights, and troubleshooting for an optimal party experience.

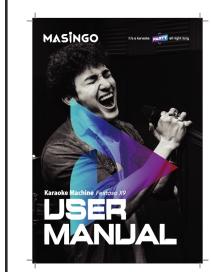

[Masingo Festoso X9 Karaoke Machine User Manual](#)

Comprehensive user manual for the Masingo Festoso X9 Karaoke Machine, covering setup, features, operation, troubleshooting, and maintenance.

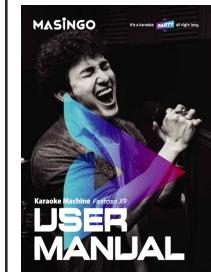

[MASINGO Festoso X9 Karaoke Machine User Manual](#)


Comprehensive user manual for the MASINGO Festoso X9 Karaoke Machine, detailing setup, features, operation, app usage, and troubleshooting.



[Masingo Soprano X1 Karaoke Machine User Manual](#)

User manual for the Masingo Soprano X1 Karaoke Machine, detailing its features, setup, operation, maintenance, and troubleshooting. Learn how to connect devices, use microphones, and enjoy your karaoke experience.

lang:en score:37 filesize: 2.36 M page_count: 11 document date: 2023-04-28

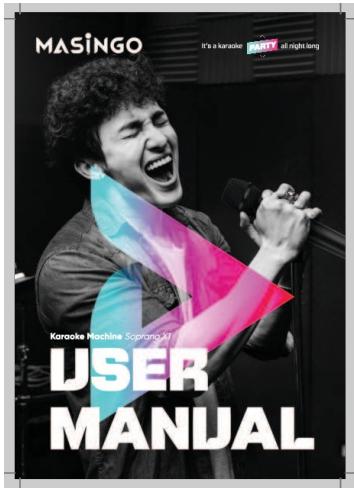

[Masingo Soprano X1 Karaoke Machine User Manual](#)

User manual for the Masingo Soprano X1 Karaoke Machine, covering setup, features, operation, maintenance, and troubleshooting for this portable PA system with wireless microphones.

lang:en score:34 filesize: 5.59 M page_count: 18 document date: 2022-03-30

Multiple Warranty

Warranty for Masingo Karaoke Machine, model Soprano X1 hereinafter referred to as the "product".

90 Days

This warranty is established by contract between the distributor of the product (JBU Global, LLC or JBU Global) and the buyer of the product. This warranty extends to the original buyer only.

Full 90-day Warranty

This warranty is established between JBU Global and the buyer upon purchase.

What is covered?

Any manufacturer, distributor, or shipping-related damage to or defect of the unit.

How long is the coverage?

90 days after the purchase of the product.

What will JBU Global do under this warranty?

JBU Global will repair, or replace if not possible, either replace your unit or refund the purchase price, whichever is less.

What is not covered by this warranty?

• Any unit not purchased directly from Masingo.com or an authorized Masingo seller. • Any damage resulting from repair attempted by the buyer or an unauthorized service technician. • Any damage resulting from use of parts not supplied by the manufacturer or distributor's instructions or warnings, including those in the purchaser's manual.

• The buyer's internet or phone service costs associated with service calls or emails to correct the product. • Any damage resulting from the use of parts not supplied by the manufacturer or distributor.

• Any void expenses related to the buyer visiting a shipping facility if the buyer decides home pickup. • JBU Global's shipping partner does not allow home pickup at the buyer's address.

Extended Full Warranty for 360 Days

This warranty is established between JBU Global and the buyer of the product upon the buyer's voluntary registration of the product within 90 days of purchase.

Registration can be made by scanning the QR code included in the product packaging.

What is covered under the extended full warranty?

Any manufacturer, distributor, or shipping-related damage to or defect of the unit.

[\[pdf\] User Manual Instructions Warranty](#)


Spinto G3 90 Day Manufacturer Warranty 2 Pack Samsung Dual Port Super Fast Car Charger Soprano

X1 drive google file d 1Oe Hm2xFjvznFIIO6NVazVDUTHZ8M1jU view |||

Multiple Warranty Warranty for Masingo Karaoke Machine, model Soprano X1

henceforth referred to as the product or unit . This warranty is established as outlined under the conditions below between the distributor of the product JBU Global, LLC or JBU Global and the buyer of the product. T...


lang:en score:28 filesize: 66.65 K page_count: 3 document date: 0000-00-00

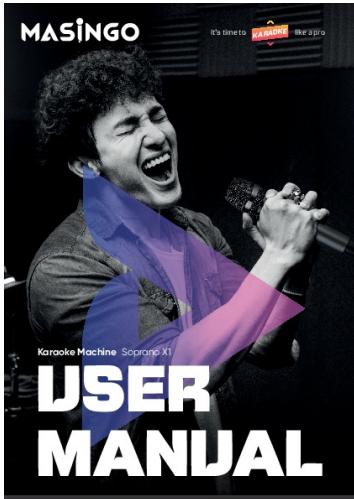

[\[pdf\] User Manual](#)

Manual X1 indd about x1 MASINGOcdn shopify s files 1 0644 4190 9471 v 1659299795 ||| It s time to KARAOKE like a pro 1 Karaoke Machine**Soprano X1** USER MANUAL 5 Welcome 4 6 7 Function Board 1 2 4 35 67 8 LED ON OFF ON TF OFF POWER 9 10 11 12 13 14 15 16 17 1. Master Volume Control 2. DC12V Car Battery Input 3. Mode 4. Channels Control 5. Digital Display 6. R...


lang:en score:26 filesize: 6.56 M page_count: 11 document date: 2021-12-09

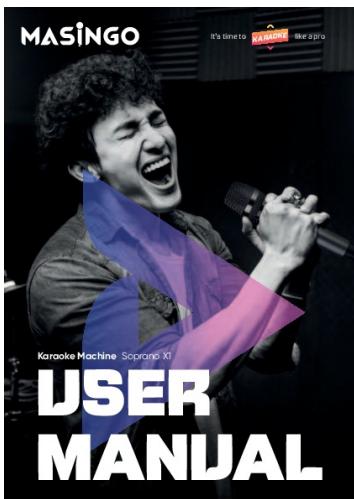

[Masingo Soprano X1 Karaoke Machine User Manual](#)

Comprehensive user manual for the Masingo Soprano X1 Karaoke Machine, covering setup, features, troubleshooting, and maintenance.

lang:en score:25 filesize: 3.49 M page_count: 12 document date: 2021-12-09

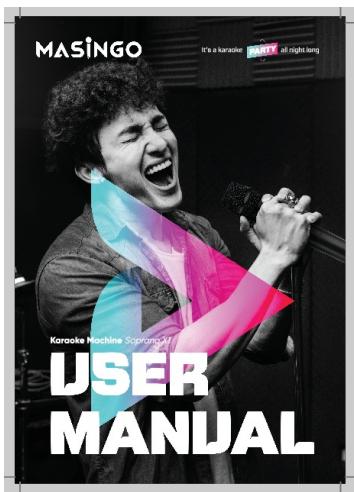


[\[pdf\] Catalog Label](#)

UntitledMASINGO Soprano X1 Karaoke Machine in Black MAX1 BK 1N The Home Depotbba87744 a587 43e9 969b b2553e40239fbba87744 b2553e40239fimages thdstatic catalog Images bb bba87744 b2553e40239f |||

Do not expose this product to water, moisture, heat, or steam. Do not place objects filled wi ... maging elements. For best results, clean and store the machine after each use. How to transport The **Soprano X1** was designed intentionally with wheels at the bottom for easy transportation. Simply unpl...

lang:en score:24 filesize: 5.59 M page_count: 18 document date: 2022-03-30

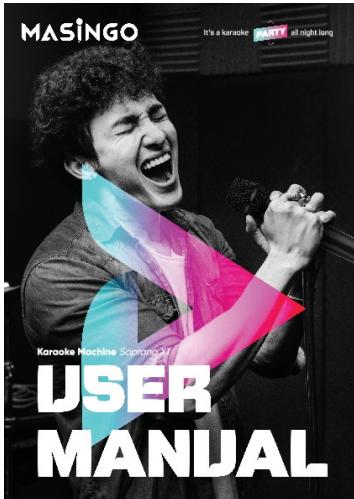


[\[pdf\]](#) User Manual

1 MASINGO Karaoke Machine Soprano X1 Whether you're celebrating with a few friends or the whole gang in comfort of your home big event space parties will be B1 m1r9dwkLa media amazon images | B1 m1r9dwkL |||

1 MASINGO Performer's Manual -- Karaoke Machine - Soprano 1 5 Congratulations You've just... maging elements. For best results, clean and store the machine after each use. How to transport The **Soprano X1** was designed intentionally with wheels at the bottom for easy transportation. Simply unpl...

lang:en score:24 filesize: 2.36 M page_count: 11 document date: 2023-04-28

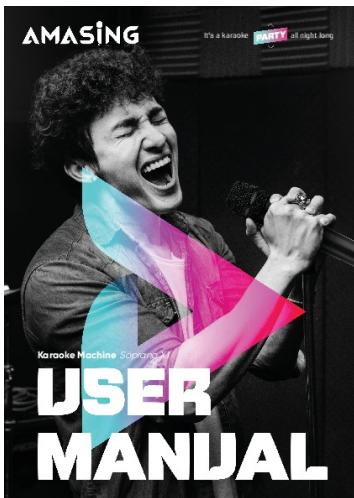


[\[pdf\]](#) User Manual

MASINGO Bluetooth Karaoke Machine for Adults and Kids Portable Singing Equipment Set W 2 Wireless Microphones PA Speaker System with Disco Ball Lights TV Cable Soprano X1 Black User Manual

B09BKYGFG44 B0929G57X7 B089WBFN3 Performer's 5 Speak or sing into the microphone when finished recording click REC again to stop it To listen recorded audio remove then reinsert USB MicroSD device The will begin playing Store machine in a cool dry place away from damaging elements For best results clean store after each use How transport was designed intentionally wheels at bottom easy transportation Simply unplug all wires extend handle on roll around just like suitcase B1ov7VBikJS m media amazon images |

It's a karaoke PARTY all night long Karaoke Machine **Soprano X1** Performer's Manual Karaoke Machine - **Soprano X1** 5 Congratulations You've just taken your party game up a notch Whether you're celebrating with a few friends or with the whole gang-- in the comfort of your home or in a big event sp...

lang:en score:21 filesize: 2.91 M page_count: 20 document date: 2020-10-14

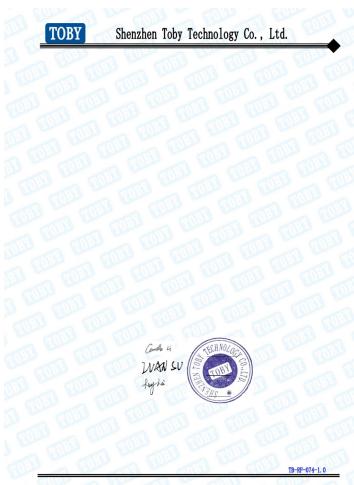

[\[pdf\]](#) Declaration of Conformity Test Report

Ivan Su Test Report BT JBU GLOBAL LLC SOPRANOX1 Soprano X1 2A7ZM 2A7ZMSOPRANOX1 sopranox1

Shenzhen Toby Technology Co., Ltd. Report No.: TBR-C-202206-0362-16 Page: 1 of 45 Radio Test Report FCC ID: 2A7ZM-SOPRANOX1 Original Grant Report No. : TBR-C-202206-0362-16 Applicant : JBU GLOBAL LLC Equipment Under Test EUT EUT Name : **Soprano X1** Model No. : **Soprano X1** Series Model ...

lang:en score:20 filesize: 2.31 M page_count: 45 document date: 2022-08-03

MASINGO

Warranty: To ensure you get years of fun out of your karaoke machine, we offer a 1-year warranty and a 3-year parts warranty on all our products from the date of purchase. Terms and conditions may apply.

[Warranty Page](#)

Be a VIP: Members of the Masingo VIP Club receive an extended warranty as well as gifts, news, and tips.

[Become a VIP member today for FREE!](#)

Returns: Returns must be requested within 90 days of purchase. Returns requested within this window will receive a refund minus cost of initial shipping "s&h" cost of return shipping. We will email you a shipping label to print, with instructions how to mail back your Masingo product. We will process your refund within 30 days of receiving your item back.

Returns & Exchange: Sometimes even the best singer has a sour note. In the event that your order arrives damaged in any way, please email us as soon as possible at support@masingo.net with your order number and a photo of the item's condition. We address these on a case-by-case basis to get you singing once more.

Additional Support:
If you have any further questions, please don't hesitate to contact us at support@masingo.net.

[pdf] Instructions Warranty Catalog Label

Kayla Starnes Warranty To ensure you get years of fun out your karaoke machine we offer a 1 year warranty and 3 parts on all our products from the date purchase Terms conditions may apply 9a853cd7 6d70 4368 a037 3290e9b9e972 images thdstatic catalog Images 9a karaokekaraoke applyMASINGO Soprano X1 Karaoke Machine in Black MAX1 BK 1N The Home Depot90cc658d c297 4c1a af82 d37bab64efc1images 3290e9b9e972images 90 90cc658d d37bab64efc1 ||| ||| Warranty: To ensure you get years of fun out of your karaoke machine, we offer a 1-year warranty and a 3-year parts warranty on all our products from the date of purchase. Terms and conditions may apply Warranty Page Be a VIP Members of the

Warranty: To ensure you get years of fun out of your karaoke machine, we offer a 1-year warranty and a 3-year parts warranty on all our products from the date of purchase. Terms and conditions may apply Warranty Page Be a VIP Members of the Masingo VIP Club receive an extended warranty as well as g...

lang:en **score:16** filesize: 63.41 K page_count: 1 document date: 2024-09-13

TODY Shenzhen Toby Technology Co., Ltd.



[pdf] Declaration of Conformity Test Report

TBR C 202206 0362 3 Report 15 236 TOBY Test JBU GLOBAL LLC G2MICROPHONE Presto G2

Microphone 2A7ZM 2A7ZMG2MICROPHONE g2microphone

Shenzhen Toby Technology Co., Ltd. Report No.: TBR-C-202206-0362-3 Page: 1 of 31 FCC Radio Test ... : Presto G2 Microphone Model No. : Presto G2 Microphone Series Model No. : Spinto G3 Microphone, **Soprano X1** Microphone Brand Name : MASINGO Sample ID : 202206-0362-01-03 202206-0362-01-04 Rec...

lang:en **score:13** filesize: 1.82 M page_count: 31 document date: 2022-08-11