

Inalsa Crispy Fry Digital-1200W

INALSA Air Fryer 2.4 L Crispy Fry Digital-1200W Instruction Manual

Model: Crispy Fry Digital-1200W

1. INTRODUCTION

Thank you for choosing the INALSA Air Fryer 2.4 L Crispy Fry Digital-1200W. This appliance is designed to cook your favorite foods using rapid air technology, resulting in healthier, low-fat meals. Please read this manual thoroughly before use to ensure safe and efficient operation.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

The INALSA Air Fryer 2.4 L Crispy Fry Digital-1200W includes the following components:

- 1N Air Fryer Unit
- 1N Cooking Pan
- 1N Food Separator
- 1N Instruction Manual cum Warranty Card
- 1N Recipe Booklet

WHY CALL IT JUST AN AIR FRYER WHEN IT DOES SO MUCH MORE

Air-Fry, Bake, Grill and Roast make this the ultimate
Elite appliance in your kitchen

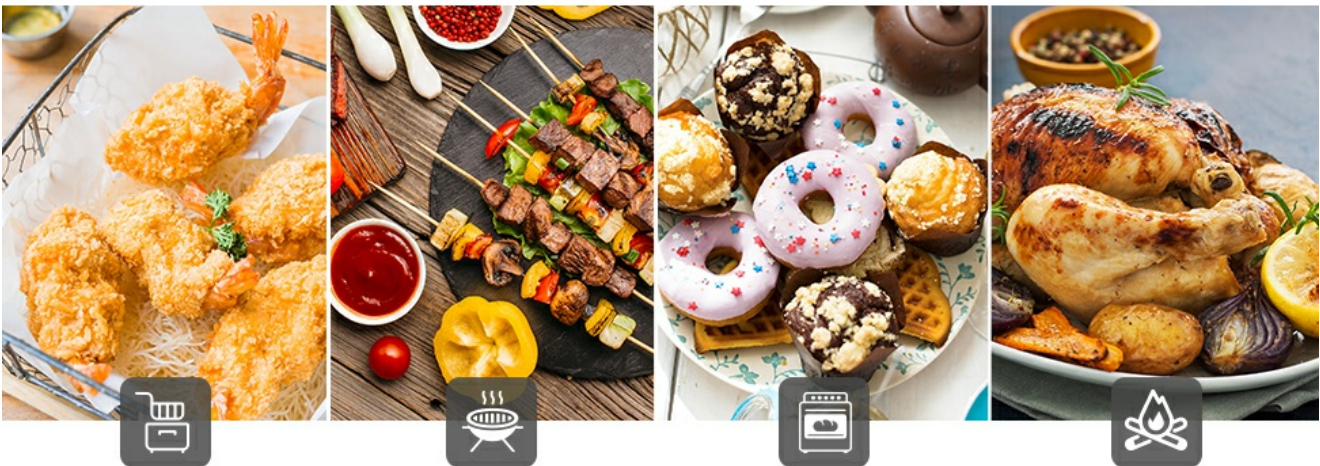


Image: Digital Display & Touch Control Panel of the Air Fryer.



Image: Non-stick food separator and cooking pan with 2.4 litre capacity.

4. SETUP

1. Unpack the air fryer and all its components. Remove any packaging materials, stickers, or labels.
2. Wipe the exterior of the appliance with a damp cloth.
3. Clean the cooking pan and food separator with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
4. Place the air fryer on a stable, heat-resistant surface, ensuring adequate ventilation around the appliance.
5. Insert the cooking pan into the main unit.

5. OPERATING INSTRUCTIONS

The INALSA Air Fryer uses Air Crisp Technology to circulate hot air 360 degrees, cooking food to crispy perfection with minimal oil.

CRISPY FRY DIGITAL

AIR FRYER

A HEALTHY CHOICE

Fry with 85% less fat



Image: Illustration of AirCrisp Technology circulating hot air for healthy frying.

Digital Display and Touch Control Panel

The air fryer features a digital touch control panel for easy operation.

HEALTH MATTERS

A 85% Less Oil & Healthier
Protect the health for whole family

B Better Heart Health
Make food that contributes less to high blood pressure and heart disease

C Healthier Choices
Eat more cleanly-reduce your calories, trans-fat and carcinogens

D Food Graded and Non-Stick
PFOA-Free & prevent bacteria

E Meat to Vegetables
Balanced & healthier

Image: Detailed view of the 8 pre-set modes and control buttons on the digital panel.

Using Preset Modes

The air fryer includes 8 pre-set menu options for common dishes. To use a preset:

1. Place food into the cooking pan.
2. Press the 'M' (Menu Selector) button to cycle through the 8 pre-set options (French Fries, Fish, Bread, Chicken, Steak, Cake, Shrimp, Preheat).
3. Once the desired preset is selected, the air fryer will automatically set the optimal time and temperature.
4. Press the Power button to start cooking.

Manual Temperature and Time Control

For custom cooking, you can manually adjust the temperature and time:

1. Place food into the cooking pan.
2. Use the Temperature/Time Selection button (thermometer icon) to switch between temperature and time settings.
3. Use the 'A' (Up) and 'V' (Down) arrows to adjust the temperature (in degrees Celsius) or cooking time (in minutes).
4. Press the Power button to start cooking.

Fast and Efficient Heating

With 1200W of power, the air fryer heats up in 2-3 minutes, cooking food faster than a conventional oven.

Cooking Versatility

This appliance can perform multiple cooking functions beyond just frying, including roasting, grilling, and baking.



DOES MORE THAN FRY

The options are unlimited.
Use it to make food
favourites that are normally
deep-fried, baked, roasted
or grilled

Image: Examples of food prepared using the Fry, Roast, Grill, and Bake functions of the air fryer.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your air fryer.

Cleaning the Cooking Pan and Separator

The cooking pan and food separator are dishwasher safe. For manual cleaning:

1. Unplug the appliance and allow it to cool completely.
2. Remove the cooking pan and food separator.
3. Soak the detachable basket in warm, soapy water.
4. Use a soft sponge to clean the pan and separator. Avoid abrasive cleaners or scouring pads that can damage the non-stick coating.
5. Rinse thoroughly and dry immediately to protect the non-stick coating.

EASY TO CLEAN/DISHWASHER SAFE

Soak the detachable basket in warm water.
Use a soft sponge and wipe it. Dry immediately
to protect the non-stick coating



Image: Detachable basket being cleaned in warm water with a soft sponge.

Cleaning the Exterior

Wipe the exterior of the air fryer unit with a damp cloth. Do not immerse the main unit in water or any other liquid.

7. TROUBLESHOOTING

If you encounter any issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; Power outlet not working; Main unit not properly assembled.	Ensure the power cord is securely plugged into a working outlet. Check if the cooking pan is fully inserted into the main unit.
Food is not cooked evenly	Too much food in the basket; Incorrect temperature or time settings.	Do not overfill the basket. Shake the basket halfway through cooking for even results. Adjust temperature and time as needed.

Problem	Possible Cause	Solution
White smoke coming from appliance	Grease residue from previous use; Fatty ingredients.	Clean the cooking pan and heating element thoroughly after each use. For fatty foods, drain excess fat during cooking.
Food is not crispy	Not enough oil (for certain foods); Temperature too low; Cooking time too short.	Lightly brush or spray oil on foods that typically require it. Increase temperature or cooking time.

8. SPECIFICATIONS

- **Model Name:** INALSA Air Fryer 2.4 L Crispy Fry Digital-1200W
- **Capacity:** 2.4 litres
- **Output Wattage:** 1200 Watts
- **Voltage:** 240V
- **Control Method:** Touch
- **Special Features:** Temperature Control
- **Air Frying Technology:** Air Crisp Technology
- **Material:** Plastic
- **Item Weight:** 2600 Grams
- **Dishwasher Safe Components:** Yes (Cooking Pan, Food Separator)
- **Recommended Uses:** Broil, Reheat, Roast, Steam

9. WARRANTY AND SUPPORT

Warranty Information

This product comes with a **2 Year warranty** by the Brand INALSA from the date of purchase. Please refer to the included Warranty Card for full terms and conditions.

Customer Support

For any queries, assistance, or service requests, please contact:

- **Manufacturer/Packer:** Tuareg Marketing Pvt. Ltd.
- **Address:** Khasra No- 1189, Bhalswa, New Delhi-110033, India.
- **Contact No:** 9773982065
- **E-mail:** customercare@inalsa.co.in
- **Website:** inalsaappliances.com

10. PRODUCT VIDEO OVERVIEW

Watch this video for a quick overview of the INALSA Air Fryer's features and benefits.

Your browser does not support the video tag.

Video: A short overview highlighting the INALSA Air Fryer's healthy frying, effortless cooking, fast heating, digital controls, and preset menus.

