

Moxee MT-T800

Moxee MT-T800 Tablet User Manual

Model: MT-T800 | Brand: Moxee

1. INTRODUCTION

Thank you for choosing the Moxee MT-T800 Tablet. This manual provides essential information to help you get started, understand the features, and maintain your device. Please read this manual carefully before using your tablet to ensure proper operation and to maximize its lifespan.

2. SAFETY INFORMATION

To prevent damage to your device or injury to yourself or others, please observe the following safety precautions:

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to severe impact.
- Use only approved chargers and accessories.
- Do not attempt to disassemble or repair the tablet yourself. Refer to qualified service personnel.
- Keep the tablet away from medical devices, as it may interfere with their operation.

3. PACKAGE CONTENTS

Please check the box for the following items:

- Moxee MT-T800 Tablet
- USB Charging Cable
- Power Adapter
- Case or Cover (if included with your specific package)
- Quick Start Guide

If any items are missing or damaged, please contact your retailer.

4. PRODUCT OVERVIEW

Familiarize yourself with the physical features of your Moxee MT-T800 Tablet.



Figure 4.1: Overall view of the Moxee MT-T800 Tablet, showing both the front display and the textured back panel with the camera module.



Figure 4.2: Front view of the Moxee MT-T800 Tablet, displaying the 8-inch screen with the Android interface, including app icons and the date/time.

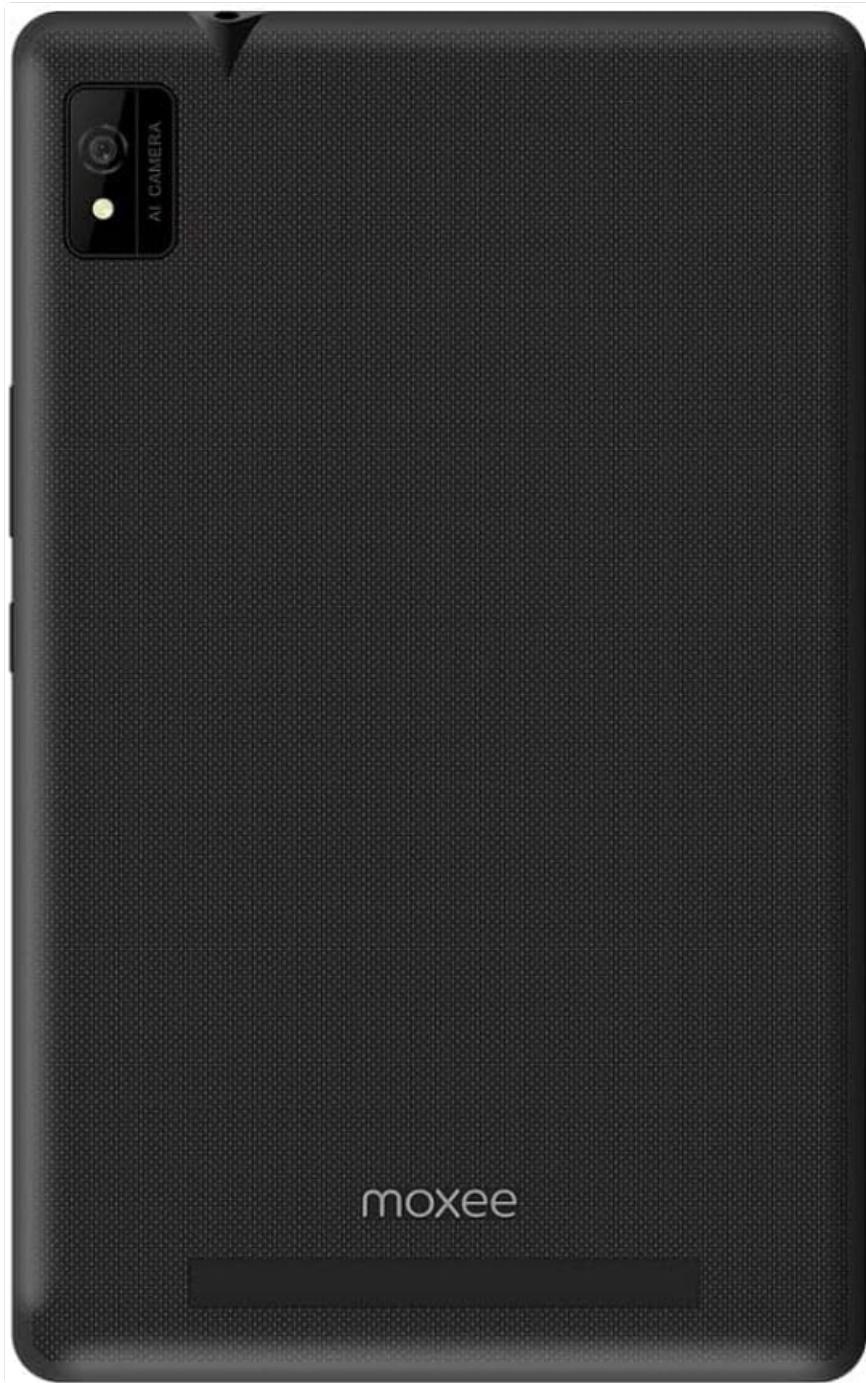


Figure 4.3: Rear view of the Moxee MT-T800 Tablet, highlighting the textured back panel, the 'moxee' logo, and the rear camera module with 'AI CAMERA' text.

4.1. Physical Components

- **Front Camera:** Located above the display, used for video calls and selfies.
- **Display:** 8-inch HD+ touchscreen for interaction and content viewing.
- **Power Button:** Typically on the side, used to turn the tablet on/off or wake/sleep the screen.
- **Volume Buttons:** Usually adjacent to the power button, for adjusting audio levels.
- **USB-C Port:** For charging and data transfer.
- **Speaker:** For audio output.
- **Rear Camera:** Located on the back, used for taking photos and videos.
- **SIM/SD Card Slot:** (Location may vary) For inserting a SIM card for mobile data and an SD card for expandable storage.

5. SETUP

5.1. Initial Charging

Before first use, fully charge your tablet. Connect the USB charging cable to the tablet's USB-C port and the power adapter. Plug the adapter into a wall outlet. The charging indicator will show the charging status.

5.2. Powering On/Off

- **To Power On:** Press and hold the Power button until the Moxee logo appears on the screen.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Tap 'Power off' and confirm.

5.3. SIM Card and SD Card Installation

The Moxee MT-T800 supports 4G LTE connectivity and expandable storage.

1. Locate the SIM/SD card tray on the side of the tablet.
2. Insert the SIM ejector tool (or a small paperclip) into the small hole next to the tray to open it.
3. Place your Nano-SIM card and/or microSD card into the designated slots on the tray, ensuring correct orientation.
4. Gently push the tray back into the tablet until it clicks into place.

5.4. Initial Setup Wizard

Upon first power-on, the tablet will guide you through the initial setup process. This includes selecting your language, connecting to a Wi-Fi network, setting up your Google account, and configuring basic settings.

6. OPERATING THE TABLET

6.1. Touchscreen Navigation

The tablet's primary interaction is through its capacitive touchscreen:

- **Tap:** To select an item or open an application.
- **Touch and Hold:** To access contextual menus or move items.
- **Swipe:** To scroll through screens or lists.
- **Pinch-to-Zoom:** To zoom in or out on images or web pages.

6.2. Wi-Fi Connectivity

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi.
3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.

6.3. Mobile Data (4G LTE)

If you have an active SIM card with a data plan (for T-Mobile/Sprint Only):

1. Go to **Settings > Network & internet > Mobile network**.
2. Ensure **Mobile data** is toggled on.
3. Configure APN settings if necessary, as provided by your carrier.

6.4. Mobile Hotspot

The tablet can act as a mobile hotspot, sharing its 4G LTE connection with up to 10 devices.

1. Go to **Settings > Network & internet > Hotspot & tethering**.
2. Tap **Wi-Fi hotspot**.
3. Toggle **Wi-Fi hotspot** on.
4. You can configure the hotspot name (SSID) and password in this menu.

6.5. Camera Usage

To use the tablet's cameras:

1. Open the **Camera** application.
2. Tap the shutter button to take a photo.
3. Switch between front and rear cameras using the camera switch icon.
4. Select video mode to record videos.

6.6. Bluetooth Connectivity

To connect to Bluetooth devices (e.g., headphones, speakers):

1. Go to **Settings > Connected devices > Bluetooth**.
2. Turn on Bluetooth.
3. The tablet will scan for available devices. Select your device from the list to pair.

7. MAINTENANCE

7.1. Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Do not use abrasive cleaners or solvents.

7.2. Battery Care

- Avoid fully discharging the battery frequently.
- Do not leave the tablet connected to the charger for extended periods after it is fully charged.
- Store the tablet in a cool, dry place if not used for a long time.

7.3. Software Updates

Regularly check for system updates to ensure optimal performance and security. Go to **Settings > System > System update**.

7.4. Storage Management

To free up storage space, consider:

- Uninstalling unused applications.
- Deleting old photos and videos or moving them to cloud storage/SD card.
- Clearing cached data from apps (**Settings > Apps & notifications** > select app >**Storage & cache > Clear cache**).

8. TROUBLESHOOTING

If you encounter issues with your tablet, try the following solutions:

8.1. Tablet Will Not Turn On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
- Press and hold the Power button for at least 10-15 seconds to perform a forced restart.

8.2. No Wi-Fi Connection

- Ensure Wi-Fi is enabled in Settings.
- Restart your Wi-Fi router.
- Forget the network and reconnect (**Settings > Network & internet > Wi-Fi > tap network >Forget**).

8.3. Slow Performance

- Close unused applications running in the background.
- Clear app caches and manage storage as described in Section 7.4.
- Restart the tablet.

8.4. Charging Issues

- Ensure the charging cable and adapter are securely connected and undamaged.
- Try a different power outlet.
- Use only the original or certified compatible charging accessories.

If problems persist, contact customer support.

9. SPECIFICATIONS

Feature	Detail
Model Name	MT-T800
Display	8-inch HD+ (1280 x 800)
Operating System	Android 10


Processor	Octa-Core Processor (Qualcomm Chipset)
GPU	Adreno 505
RAM	3 GB
Internal Storage	32 GB
Expandable Storage	Yes (microSD)
Rear Camera	5 MP
Front Camera	5 MP
Wireless Connectivity	Wi-Fi (802.11g), Bluetooth, 4G LTE (T-Mobile/Sprint Only)
Mobile Hotspot	Supports up to 10 devices
Dimensions (LxWxH)	8.57" x 4.89" x 0.35" (Product) / 6 x 4 x 8 inches (Shipping)
Weight	14.3 ounces
Color	Black
Battery	1 Lithium Ion battery required

10. WARRANTY AND SUPPORT

This Moxee MT-T800 Tablet is covered by a limited warranty. For specific warranty terms and conditions, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support, troubleshooting assistance, or service inquiries, please visit the official Moxee support website or contact their customer service.

© 2024 Moxee. All rights reserved.

Documents - Moxee – MT-T800

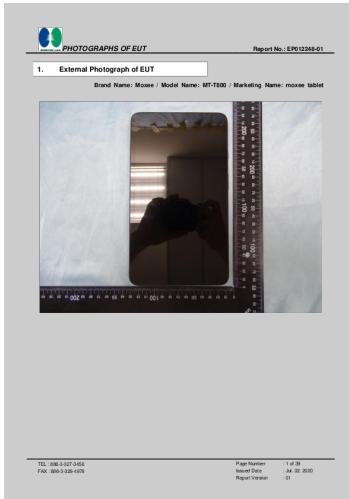

[\[pdf\] Product Photos](#)

External Photos KonnectONE LLC MT T800 2APQU 2APQUMTT800 mt t800

PHOTOGRAPHS OF EUT Report No.: EP012248-01 1. External Photograph of EUT

Brand Name: Moxee / Model Name: **MT-T800** / Marketing Name: moxee tablet TEL : 886-3-327-3456 FAX : 886-3-328-4978 Page Number Issued Date Report Version : 1 of 39 : Jul. 02, 2020 : 01 PHOTOGRAPHS OF EUT Report No.: EP012...

lang:da **score:34** filesize: 864.17 K page_count: 6 document date: 2020-07-02



[\[pdf\] User Manual Quick Start Guide Guide Warranty](#)

T MOBILE MOXEE MT T800 01 MANUAL Manual Hub drive google file d 1TV6s

F3wFVUCBhO1NXcEDIf GaVM yVR preview |||

Quick Start Guide P10000250 <https://manual-hub.com/> Device overview 1

Microphone 2 Power Key 3 Vol ... found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: 2APQU-**MT-T800**. The highest SAR value for this device as reported to the FCC when tested for use in body is...
lang:en **score:33** filesize: 1.28 M page_count: 13 document date: 2023-10-28



[SonarPen Device Compatibility List and Setup Guide](#)

Comprehensive guide to SonarPen compatibility with Apple, Android, Chromebook, Windows, and Nintendo Switch devices, including setup instructions and a detailed list of supported models.

lang:en **score:20** filesize: 923.21 K page_count: 27 document date: 2023-09-21



[\[pdf\] Quick Start Guide Guide Warranty](#)

Quick Start Guide t mobile Additional information Use may require qualifying service or access to a Wi Fi connection Device and screen images simulated Coverage not available in some areas See Terms Conditions including arbitration provision at T Mobile for rate plan charges features services restrictions details Moxee x800 EN support public files attachments ||| Quick Start Guide P10000250 Device overview 1 Microphone 2 Power Key 3 Volume Key 4 SIM / SD Card ... found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: 2APQU-**MT-T800**. The highest SAR value for this device as reported to the FCC when tested for use in body is... lang:en **score:19** filesize: 636.8 K page_count: 13 document date: 2020-04-02



[\[pdf\] Quick Start Guide Guide](#)

Guía de inicio T Mobile 14 set 2021 — Carga Antes del primer uso la batería debe cargarse completamente 1 Inserte el cable carga USB Tipo C en puerto cargador Moxee x800 Quick Start Guide ESP t mobile support public files attachments ||| Gua de inicio P10000250 Descripcin general del dispositivo 12 3 4 1 Micrfono 2 Tecla de encend ... contrar en la seccin Display Grant de www.fcc.gov/oet/ea/fccid despus de buscar en la FCC ID: 2APQU-**MT-T800**. El valor ms alto de SAR para este dispositivo segn lo informado a la FCC cuando se prueba s... lang:es **score:19** filesize: 633.82 K page_count: 14 document date: 2020-04-02



[\[pdf\] Quick Start Guide Guide Warranty](#)

Moxee Tablet Quick Start Guide EN T Mobile sprint Password Select to setup a password unlock screen This handset has locking function e g user defined codes or patterns that can 2020 11 21 — Your device only supports Nano SIM card included To avoid damage your do not attempt insert any other types 2 The microSD Cards are sold P10000250 on the Home tap Video icon enter video mode and start Tap Pause temporarily stop Resume continue recording Device overview 1 Microphone Power Key 3 Volume 4 SD Card Slot 5 Light Sensor 6 LED Indicator 7 Front Camera When finished 8 Screen 9 Speaker x800 content dam us en assets konnectone moxee mt t800 documents Quick Start Guide P10000250 Device overview 1 Microphone 2 Power Key 3 Volume Key 4 SIM / SD Card ... found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: 2APQU-**MT-T800**. The highest SAR value for this device as reported to the FCC when tested for use in body is... lang:en **score:19** filesize: 637.11 K page_count: 13 document date: 2020-04-02



[SonarPen: Guida alla Compatibilità con Dispositivi Apple, Android, Windows, Chromebook e Nintendo Switch](#)

Scopri quali dispositivi Apple, Android, Windows, Chromebook e Nintendo Switch sono compatibili con SonarPen. Trova le informazioni necessarie per utilizzare la tua penna stylus su diverse piattaforme.

lang:it **score:10** filesize: 938.5 K page_count: 24 document date: 2024-01-10



[SonarPen Device Compatibility Guide - Apple, Android, Windows, Chromebook, Nintendo Switch](#)

Comprehensive guide to SonarPen compatibility across Apple iOS/iPadOS, Android OS, Windows 10/11, Chromebook, and Nintendo Switch devices. Learn about required adapters and calibration for optimal performance.

lang:en score:10 filesize: 936.89 K page_count: 24 document date: 2024-01-10



[SonarPen Compatible Devices List](#)

A comprehensive list of devices compatible with SonarPen, including Apple, Android, and Nintendo Switch devices. Find the right SonarPen model for your device.

lang:de score:10 filesize: 941.43 K page_count: 24 document date: 2024-01-10



[SonarPen Compatible Devices: A Comprehensive Guide](#)

Discover which Apple, Android, Windows, and Chromebook devices are compatible with the SonarPen stylus. This guide lists supported models across numerous brands, ensuring you find the perfect match for your digital drawing and note-taking needs.

lang:es score:10 filesize: 939.47 K page_count: 24 document date: 2024-01-10



[SonarPen Compatible Devices Guide](#)

Discover the full range of devices compatible with SonarPen, including Apple, Android, and Windows devices. Learn how to connect and use your SonarPen for an enhanced digital art experience.

lang:fr score:10 filesize: 941.02 K page_count: 24 document date: 2024-01-10

