

NC XJ-768

XINJIA Electronic Voice Watch User Manual

Model: XJ-768

INTRODUCTION

This manual provides comprehensive instructions for the XINJIA XJ-768 Electronic Voice Watch, designed for individuals with visual impairments, middle-aged, and elderly users. It features English voice prompts, an alarm clock, and a large digital display for ease of use. Please read this manual thoroughly to understand the watch's functions and ensure proper operation.



Figure 1: Front view of the XINJIA XJ-768 Electronic Voice Watch.

PRODUCT FEATURES

- **Time Display:** Clearly displays the current time and allows for easy time setting.
- **Alarm Function:** Provides customizable alarm settings with the option to change the alarm tone.
- **Timekeeping Function:** Features a 'TALKING' button to broadcast the current time and an automatic

hourly timekeeping function that can be toggled on or off.

- **Snooze Function:** Allows for a temporary pause of the alarm, with the alarm sounding again after 5 minutes.
- **Enhanced Usability:** Designed with a larger font display, increased volume, and simplified operation for improved accessibility.

SETUP

Initial Battery Installation

The XINJIA XJ-768 watch comes with one LR44 battery included. Before initial use, ensure the battery is properly seated. If the display is blurred or the watch is unresponsive, the battery may need to be replaced. Refer to the 'Battery Replacement' section for detailed instructions.

OPERATING INSTRUCTIONS

The watch features four primary buttons for operation: **B1 (MODE)**, **B2 (MINUTE)**, **B3 (HOUR)**, and **B4 (TALKING)**. These buttons are located on the sides of the watch case.



Figure 2: Side view illustrating the watch buttons.

1. Setting the Time

1. From the normal time display mode, press the **B1 (MODE)** button once. The time digits will begin flashing.
2. Press the **B2 (MINUTE)** button to adjust the minutes.
3. Press the **B3 (HOUR)** button to adjust the hours.
4. Once the correct time is set, press **B1 (MODE)** again to exit time setting mode.

2. Setting the Alarm Time

1. From the normal time display mode, press the **B1 (MODE)** button twice. The display will show the 'AL' symbol, and the alarm time digits will flash.
2. Press the **B2 (MINUTE)** button to set the desired alarm minutes.
3. Press the **B3 (HOUR)** button to set the desired alarm hours.
4. Once the alarm time is set, press **B1 (MODE)** again to exit alarm setting mode.

3. Selecting Alarm Tone and Turning Alarm On/Off

1. From the normal time display mode, press the **B3 (HOUR)** button.
2. Each press will cycle through alarm tone options and toggle the alarm function on or off.
3. When the alarm is set to ON, the alarm will sound at the set time, and the LCD will display the alarm

time. After the alarm plays, the normal time will be displayed.

4. When the alarm is set to OFF, the alarm symbol will disappear, and the watch will broadcast a 'DI' sound to confirm.

4. Turning Hourly Timekeeping On/Off

1. From the normal time display mode, press the **B2 (MINUTE)** button.
2. Each press will toggle the hourly timekeeping function on or off.
3. When activated, a specific symbol will appear on the dial, and the watch will automatically announce the hour.
4. When turned off, the symbol will disappear.

5. Using the Snooze Function

1. When the alarm is sounding, press the **B4 (TALKING)** button.
2. This will stop the current alarm and activate the snooze function.
3. The alarm will sound again automatically after 5 minutes.

6. Broadcasting the Current Time

- From the normal time display mode, press the **B4 (TALKING)** button once.
- The watch will audibly announce the current time.

MAINTENANCE

Battery Replacement

The watch uses one LR44 battery. You will know it's time to replace the battery if you observe any of the following:

- The display font becomes blurred or disappears.
- The sound volume becomes significantly lower.
- The watch functions abnormally or inconsistently.

To replace the battery, carefully open the back casing of the watch. Replace the old LR44 battery with a new one, ensuring correct polarity. Close the back casing securely.



Figure 3: Back view of the watch, showing the battery compartment access.

TROUBLESHOOTING

If you experience issues with your XINJIA XJ-768 watch, consider the following common solutions:

- **No Display or Faint Display:** Check the battery. It may be depleted or improperly installed. Replace with a new LR44 battery if necessary.
- **No Sound or Low Sound:** This is often an indication of a low battery. Replace the battery.
- **Incorrect Time/Alarm:** Ensure you have followed the time and alarm setting instructions precisely. Repeat the setting process if needed.
- **Buttons Unresponsive:** A low battery can affect button responsiveness. Try replacing the battery. If the issue persists, ensure no debris is obstructing the buttons.

For persistent issues not resolved by these steps, please refer to the Warranty and Support section.

SPECIFICATIONS

Feature	Detail
Model Number	XJ-768
Product Dimensions	25 x 4.4 x 1.65 cm
Weight	59 g
Battery Type	1 x LR44 (included)
Manufacturer	Wuhan Prisco
Department	Unisex-adult

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your XINJIA XJ-768 Electronic Voice Watch, please contact the seller or manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Wuhan Prisco