

- Manuals.plus /
- › VISWIN /
- › VISWIN Studio H-Frame Easel Instruction Manual

VISWIN Studio H-Frame Easel

VISWIN Studio H-Frame Easel Instruction Manual

Model: Studio H-Frame Easel

1. PRODUCT OVERVIEW

The VISWIN Studio H-Frame Easel is a versatile and sturdy art easel designed for artists of all levels. Crafted from high-quality beech wood, it offers stability and a range of adjustments to accommodate various painting techniques and canvas sizes. Its movable design with silent front casters allows for easy repositioning within your studio or home.



Figure 1: VISWIN Studio H-Frame Easel with two canvases.

2. SETUP AND ASSEMBLY

Your VISWIN Studio H-Frame Easel comes with clear, step-by-step instructions, individually packed hardware, and wooden parts labeled with easy-peel number stickers to facilitate assembly. An assembly video is also available for additional guidance.

2.1 Initial Assembly

1. Unpack all components and verify against the parts list provided in the packaging.
2. Follow the numbered instructions to connect the main frame components.
3. Attach the silent front casters to the base for mobility.

4. Secure all knobs and fasteners as indicated in the manual to ensure stability.

Your browser does not support the video tag.

Video 1: Demonstrates the assembly, adjustment, tilting, and dual canvas accommodation of the easel.

2.2 Mobility

The easel is equipped with two silent front casters, allowing for effortless movement and repositioning. When in use, the easel remains steady, providing a stable platform for your artwork.



Figure 2: Easel shown in folded position with wheels for easy transport.

3. OPERATING INSTRUCTIONS

3.1 Adjusting Canvas Height and Angle

The easel features adjustable mast, tray, and slider components to accommodate canvases up to 78 inches in height. Use the adjustment knobs to raise or lower the canvas support to your desired working height.



Figure 3: Easel dimensions and adjustability for various canvas sizes.

The easel can be tilted from a slight forward angle to a fully horizontal position. This flexibility is ideal for various painting techniques, including watercolors, pouring, pastels, acrylics, and oils. Loosen the appropriate knobs, adjust the easel to your preferred angle, and then securely tighten the knobs.

ADJUSTABLE ANGLE

FLEXIBLE ADJUSTMENT FROM HORIZONTAL TO A SLIGHT FORWARD TILT FOR VARIOUS PAINTING TECHNIQUES.



Figure 4: Easel shown in a horizontal position for flat painting techniques.



**CRAFTED FROM SOLID BEECH WOOD
FOR STABILITY AND DURABILITY**

Figure 5: Easel adjusted to a flat position for watercolor or pouring techniques.

3.2 Dual Canvas Support

The easel features two easily installable or removable trays, allowing you to place two canvases simultaneously. This is beneficial for reference painting, mirrored work, or practicing different techniques side-by-side.

HOLD 1 OR 2 CANVASES

DETACHABLE SLIDER SUITS YOUR CANVAS NEEDS



Figure 6: Easel configured to hold two artworks.

4. MAINTENANCE

To ensure the longevity and optimal performance of your beech wood easel, regular maintenance is recommended.

- **Cleaning:** Wipe down the wooden surfaces with a soft, damp cloth to remove dust and paint residue. Avoid harsh chemicals or abrasive cleaners that could damage the wood finish.
- **Wood Care:** Periodically apply a wood conditioner or furniture polish to keep the beech wood hydrated and protected.
- **Hardware Check:** Regularly inspect all knobs, screws, and metal fittings to ensure they are tight and secure. Tighten any loose components to maintain the easel's stability.
- **Storage:** When not in use, the easel can be folded down compactly to save space. Store in a dry environment away from extreme temperature changes or direct sunlight.

5. TROUBLESHOOTING

If you encounter any issues with your VISWIN Studio H-Frame Easel, please refer to the following common

solutions:

- **Easel Instability:** Ensure all assembly screws and adjustment knobs are securely tightened. Check that the easel is placed on a flat, level surface.
- **Difficulty Adjusting Height/Angle:** Loosen the relevant adjustment knobs sufficiently before attempting to move the components. If resistance persists, check for any obstructions in the sliding mechanisms.
- **Canvas Slipping:** Ensure the canvas support trays are properly positioned and tightened against the canvas. The top clamp should also be securely fastened to hold the canvas in place.

For further assistance, please contact VISWIN customer support.

6. SPECIFICATIONS

- **Brand:** VISWIN
- **Model:** Studio H-Frame Easel
- **Color:** Natural
- **Material:** Beech Wood
- **Product Dimensions:** 21"D x 20"W x 60"H (53.3cm D x 50.8cm W x 152.4cm H)
- **Item Weight:** 27.6 Pounds (12.5 kg)
- **Maximum Canvas Height:** Up to 78 inches (198.1 cm)
- **Maximum Loading Capacity:** 33 lbs (15 kg)

7. WARRANTY AND SUPPORT

VISWIN provides a lifetime guarantee for this product, reflecting our commitment to quality and customer satisfaction. If you have any questions, require assistance, or need to address any concerns, please do not hesitate to contact VISWIN customer support. Our team is dedicated to ensuring your enjoyable creative experience.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B092DBCL8N>

More documents and user manuals: <https://manuals.plus/>