

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Westinghouse](#) /

› [Westinghouse 12-inch Personal Tower Fan \(Model WSFT1201M\) Instruction Manual](#)

## Westinghouse WSFT1201M

# Westinghouse 12-inch Personal Tower Fan

MODEL: WSFT1201M - INSTRUCTION MANUAL

### INTRODUCTION

---

Thank you for choosing the Westinghouse 12-inch Personal Tower Fan. This manual provides important information regarding the safe operation, installation, maintenance, and troubleshooting of your new fan. Please read this manual thoroughly before use and retain it for future reference.

### IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. These include:

- Read all instructions before using this fan.
- Use this fan only as described in this manual. Other uses not recommended may cause fire, electric shock, or injury.
- To protect against electrical shock, do not immerse the unit, plug, or cord in water or spray with liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the fan from the outlet when not in use, when moving the fan from one location to another, and before cleaning.
- Do not operate any fan with a damaged cord or plug, or after the fan malfunctions or has been dropped or damaged in any manner.
- Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fan.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- Do not hang or mount the fan on a wall or ceiling.
- This fan is intended for indoor use only.

### PRODUCT OVERVIEW

---

The Westinghouse 12-inch Personal Tower Fan is designed for efficient personal cooling with a compact, space-saving design and multiple features for customized comfort.

## Key Features:

- **Space-Saving and Portable:** Compact design with a built-in handle for easy transport.
- **Oscillating Function:** Provides wide air distribution.
- **3 Wind Modes:** Normal, Natural, and Sleep for varied airflow.
- **3 Speed Settings:** Adjustable fan speed for desired cooling.
- **Timer Options:** Built-in timer for up to 8 hours of auto-shutoff.

## Fan Components:



Figure 1: Front view of the Westinghouse 12-inch Personal Tower Fan.

# 80° WIDE OSCILLATION

Circulate airflow from side to side, allowing the air to distribute evenly in a wider area to effectively cool the bedroom, kitchen, living room, or home office.



80°

Figure 2: Top control panel of the fan.

- **Control Panel:** Located on the top of the fan for power, speed, mode, and oscillation settings.
- **Air Outlet:** Front grille where air is expelled.
- **Base:** Provides stability for the fan.
- **Built-in Handle:** Located at the top-rear for easy carrying.

## SETUP

Follow these steps to set up your fan for the first time:

1. **Unpack:** Carefully remove the fan from its packaging. Retain the packaging for storage or if the product needs to be returned.
2. **Placement:** Place the fan on a firm, level surface. Ensure there is adequate space around the fan for proper airflow and oscillation. Do not block air inlets or outlets.
3. **Power Connection:** Plug the power cord into a standard 127V AC electrical outlet. Ensure the voltage matches the fan's requirements.



Figure 3: Fan dimensions for optimal placement.

## OPERATION

Your Westinghouse Personal Tower Fan features a user-friendly control panel for easy operation.

### Control Panel Functions:

- **Power On/Off:** Turn the main dial to position '1', '2', or '3' to power on the fan and select a speed. Turn to '0' to power off.
- **Speed Settings:** The fan offers 3 speed settings. Rotate the dial to select your desired speed (1 for low, 2 for medium, 3 for high).
- **Oscillation:** Press the oscillation button (usually indicated by an arrow icon) on the control panel to activate or deactivate the automatic oscillation feature. This allows the fan to rotate from side to side, distributing air over a wider area.
- **Wind Modes:** The fan includes Normal, Natural, and Sleep wind modes. These modes adjust the airflow pattern to suit different preferences. Refer to the specific icons on your control panel to select the desired mode.
- **Timer:** The built-in timer can be set for up to 8 hours. Press the timer key once for an hour of auto-shutoff. Use the arrow-up or arrow-down buttons to increase or decrease the auto-shutoff time in 1-hour increments.



Figure 4: Fan modes for personalized comfort.

# IDEAL FOR



## PERSONAL USE

Our Westinghouse Personal Tower fans with minimal design makes it ideal for personal use or when travelling.



## SPACE IMPROVEMENT

Our Personal Tower fan design provides cool and quiet operation, strong airflow capacity, 3 Wind Modes, and reliable hardware.



## TRAVELING

If you want a portable fan that works well for personal use in multiple locations, our Westinghouse Personal Tower fan is the one for you.

Figure 5: Timer settings for automatic shut-off.

Video 1: An official product video demonstrating the key features of the Westinghouse 12-inch Personal Tower Fan, including its compact size, automatic oscillation, 3 speed settings, quiet operation, and built-in handle for easy portability.

## MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your fan.

### Cleaning:

- Always unplug the fan before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan.
- Do not use abrasive cleaners or solvents as they may damage the fan's finish.
- To clean dust from the air inlets and outlets, use a vacuum cleaner with a brush attachment or compressed air.
- Never immerse the fan in water or any other liquid.

### Storage:

- When not in use, store the fan in a cool, dry place.
- It is recommended to store the fan in its original packaging to protect it from dust and damage.
- Wrap the power cord neatly to prevent tangling or damage.



Figure 6: The fan's compact size makes it easy to store or pack for travel.

## TROUBLESHOOTING

If your fan is not operating correctly, please check the following common issues before contacting support:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Fan is not oscillating.	Oscillation function is not activated.	Press the oscillation button on the control panel to activate.
Weak airflow.	Fan speed is too low or air inlets/outlets are blocked.	Increase the fan speed. Ensure there are no obstructions blocking the air inlets or outlets.
Unusual noise during operation.	Fan is not on a level surface or internal components are loose.	Place the fan on a flat, stable surface. If noise persists, discontinue use and contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Westinghouse
Model Number	WSFT1201M
Electric Fan Design	Floor Fan / Tower Fan
Power Source	Corded Electric
Product Dimensions (D x W x H)	12" x 12" x 12" (Approximate, based on image 14.17" H x 5.51" W)
Item Weight	2.86 pounds
Special Features	Oscillating, Portable
Recommended Uses	Cooling
Noise Level	50 Decibels
Wattage	40 watts
Air Flow Capacity	55 Cubic Feet Per Minute
Voltage	127 Volts
Indoor/Outdoor Usage	Indoor
Control Method	Button Control / Dial
Material	Acrylonitrile Butadiene Styrene
UPC	193862005754

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Westinghouse website. Do not attempt to repair the fan yourself, as this may void the warranty and cause further damage or injury.