

manuals.plus /

› [B. toys](#) /

› [B. toys Gogo Ride-On Panda Suitcase Instruction Manual \(Model LB1862C1Z\)](#)

B. toys LB1862C1Z

B. toys Gogo Ride-On Panda Suitcase Instruction Manual (Model LB1862C1Z)

Brand: B. toys | Model: LB1862C1Z

INTRODUCTION

The B. toys Gogo Ride-On Panda Suitcase is a versatile toy designed for children aged 2 years and over. It functions as both a ride-on toy and a carry-on sized suitcase, providing storage for belongings and entertainment during travel or sleepovers. This manual provides essential information for safe setup, operation, and maintenance of your Gogo Ride-On Panda Suitcase.



Image: The B. toys Gogo Ride-On Panda Suitcase, shown with a child riding it, highlighting its dual functionality as a toy and luggage.

SAFETY INFORMATION

WARNING: Not suitable for children under 18 months. Long cord. Strangulation hazard.

Always supervise children when using the ride-on suitcase. Ensure the child's weight does not exceed 110 lbs (50 kg). Keep the product away from stairs, busy roads, and other hazardous areas. Regularly inspect the product for any damage or loose parts before each use.

FEATURES

- **Ride-On Suitcase:** A lightweight and sturdy ride-on toy that doubles as a carry-on sized suitcase.
- **Interactive Features:** Press the buttons on Bingo's ears for multicolored, luminous eyes and sound effects. (3 AAA batteries are included and required for this feature).
- **Ample Storage:** Features interior elastic straps to secure belongings, ideal for sleepovers or travel.
- **Lockable Design:** Includes a little leaf handle that doubles as a key to lock the suitcase.
- **Detachable Strap:** Equipped with a detachable strap for easy pulling by an adult or child.

- **Durable Wheels:** Wheels are designed to spin smoothly and prevent damage to floors.



Image: A close-up view of the Gogo Ride-On Panda Suitcase, highlighting its smooth wheels and the light-up eyes feature, which also produces sounds.

SETUP

1. **Unboxing:** Carefully remove the Gogo Ride-On Panda Suitcase from its packaging.
2. **Battery Installation:** The interactive lights and sounds require 3 AAA batteries. These are included. Locate the battery compartment, typically on the underside or rear of the panda's head, open it with a small screwdriver, insert the batteries according to polarity, and secure the cover.
3. **Attach Pull Strap:** Locate the detachable pull strap. Attach one end to the designated loop at the front of the suitcase and the other end to the leaf handle.
4. **Locking Mechanism:** Familiarize yourself with the leaf handle key. Insert it into the lock mechanism to secure the suitcase halves.

OPERATING INSTRUCTIONS

Using as a Ride-On Toy:

1. Ensure the suitcase is securely closed and locked using the leaf handle.
2. Have your child sit comfortably on the top surface of the panda suitcase.
3. For propulsion, your child can use their feet to push off the ground.
4. For towing, an adult can hold the detachable pull strap and guide the child.

Using as Luggage:

1. To open, unlock the suitcase using the leaf handle key and unzip the main compartment.
2. Pack your child's belongings, utilizing the interior elastic straps to keep items secure and organized.
3. Close the suitcase by zipping it up and securing the lock with the leaf handle.
4. The suitcase can be carried by the top handles or pulled using the detachable strap.

Activating Lights and Sounds:

- Press the buttons located on Bingo's ears to activate the multicolored, luminous eyes and engaging sound effects.



Image: A visual guide illustrating the three primary uses of the Gogo Ride-On Panda Suitcase: packing items inside, riding on it, and towing it with the strap.



Image: A young child smiling while riding the Gogo Ride-On Panda Suitcase, demonstrating its use as a mobile toy.

MAINTENANCE

- **Cleaning:** Wipe the exterior with a damp cloth and mild soap. Avoid abrasive cleaners.
- **Storage:** Store the suitcase in a cool, dry place away from direct sunlight when not in use.
- **Wheel Care:** Periodically check the wheels for any debris or hair that might hinder smooth operation. Clean as necessary.
- **Strap Inspection:** Ensure the detachable strap and its attachments are secure and free from wear and tear.

TROUBLESHOOTING

- **Lights/Sounds Not Working:**
 - Check if the 3 AAA batteries are correctly installed with the correct polarity.
 - Replace batteries if they are old or depleted.
 - Ensure the buttons on the ears are not obstructed.
- **Wheels Not Rolling Smoothly:**

- Inspect wheels for any trapped debris, hair, or lint and remove them.
- Ensure the wheels are not damaged.

- **Suitcase Not Locking:**

- Ensure the two halves of the suitcase are properly aligned before attempting to lock.
- Verify the leaf handle key is fully inserted and turned correctly.

SPECIFICATIONS

Product Dimensions	18.8 x 7.7 x 13.6 inches (47.8 x 19.6 x 34.5 cm)
Item Weight	5.39 pounds (2.44 kg)
Maximum Weight Capacity	110 lbs (50 kg)
Recommended Age	2 years and over
Batteries Required	3 AAA batteries (included)
Model Number	LB1862C1Z
Manufacturer	Branford Limited



Image: The Gogo Ride-On Panda Suitcase displaying key specifications such as recommended age (2-6 years) and maximum weight capacity (110 lbs).

Learn Through Play



**Gross Motor
Skills**

1

**Promotes
Independence**



Image: The Gogo Ride-On Panda Suitcase with its dimensions (18.5" L x 8" W x 13" H) and highlighting developmental benefits like gross motor skills and independence.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official B. toys website. Keep your purchase receipt as proof of purchase for any warranty claims.

PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video: An official overview of the B. toys Ride-On Panda Suitcase, demonstrating its features and how children can interact with it.

