

[Manuals.plus](#) /

› [Ledwood](#) /

› Ledwood Xtreme 180 Bluetooth Speaker User Manual

Ledwood XT180

Ledwood Xtreme 180 Bluetooth Speaker User Manual

Model: XT180

INTRODUCTION

Thank you for choosing the Ledwood Xtreme 180 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.

WHAT'S IN THE BOX

- Ledwood Xtreme 180 Bluetooth Speaker
- USB-C Charging Cable
- Audio Cable (AUX)
- Carrying Strap
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Figure 1: Ledwood Xtreme 180 Bluetooth Speaker. This image shows the main body of the speaker, highlighting the central control panel with various buttons and the LED-lit ends.



Figure 2: Ledwood Xtreme 180 with Carrying Strap. The speaker is shown with its detachable strap, illustrating its portability.



Figure 3: Speaker End with LED Light. A detailed view of one end of the speaker, showcasing the integrated LED light ring that pulsates with music.

Control Panel Functions:

- **Power Button:** Press and hold to turn the speaker on or off. Short press to play/pause.
- **Mode Button (M):** Short press to switch between Bluetooth, FM Radio, USB, and AUX modes.
- **Volume Up (+):** Short press to increase volume. Long press for next track/station.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track/station.
- **Play/Pause Button:** Short press to play or pause audio.
- **LED Light Button:** Short press to cycle through LED light modes or turn them off.
- **TWS Button:** Press to initiate True Wireless Stereo pairing.
- **Microphone Icon Button:** Activates voice assistant on connected device.

Ports:

- **USB-C Charging Port:** For charging the speaker.

- **USB-A Port:** For USB drive playback.
- **AUX Input (3.5mm):** For wired audio connection.

SETUP

1. Charging the Speaker

1. Connect the provided USB-C charging cable to the speaker's USB-C port.
2. Connect the other end of the cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status. A full charge typically takes approximately 3-4 hours.
4. Disconnect the cable once fully charged.



Figure 4: Battery Indicator. This icon represents the speaker's battery status and charging process.

2. Powering On/Off

- To power on, press and hold the Power button for 2-3 seconds until you hear an audible prompt and the LED lights activate.
- To power off, press and hold the Power button for 2-3 seconds again.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue LED). If not, press the 'M' button to switch modes.
2. Enable Bluetooth on your mobile device (smartphone, tablet, computer).
3. Search for available Bluetooth devices and select "Ledwood XT180" from the list.
4. Once connected, the blue LED will stop flashing and remain solid, and you will hear a confirmation sound.



Figure 5: Wireless Connection. This icon signifies the speaker's Bluetooth connectivity.

4. True Wireless Stereo (TWS) Pairing

TWS allows you to connect two Ledwood Xtreme 180 speakers for a stereo sound experience.

1. Ensure both Ledwood Xtreme 180 speakers are powered on and in Bluetooth mode, but not connected to any device.
2. On one of the speakers (this will be the primary speaker), short press the TWS button. You will hear a prompt indicating it's searching for another speaker.
3. The two speakers will automatically pair with each other. A confirmation sound will indicate successful TWS connection.
4. Now, connect your mobile device to the primary speaker via Bluetooth as described in step 3. Both speakers will play audio in stereo.



Figure 6: TWS Function. This icon indicates the True Wireless Stereo pairing capability.

OPERATING INSTRUCTIONS

1. Bluetooth Playback

- Ensure your device is paired via Bluetooth.
- Use your connected device or the speaker's Play/Pause, Volume Up/Down buttons to control playback.

2. FM Radio Mode

1. Press the 'M' button repeatedly until you enter FM Radio mode.
2. Long press the Play/Pause button to automatically scan and save available FM stations.
3. Use the Volume Up (+) and Volume Down (-) buttons (long press) to navigate between saved stations.

3. USB Playback

1. Insert a USB flash drive (containing MP3 audio files) into the USB-A port.
2. The speaker will automatically switch to USB mode or you may need to press the 'M' button to select it.
3. Use the speaker's controls to play, pause, and skip tracks.

4. AUX Input

1. Connect one end of the 3.5mm audio cable to the speaker's AUX input port.
2. Connect the other end to the audio output of your external device.
3. The speaker will automatically switch to AUX mode or you may need to press the 'M' button to select it.
4. Control playback and volume from your external device.

5. LED Light Modes

- Short press the LED Light button to cycle through different pulsating light modes.
- Continue pressing to turn the LED lights off.

6. Voice Assistant Function

- When connected to a smartphone, short press the Microphone icon button to activate your device's voice assistant (e.g., Siri, Google Assistant).

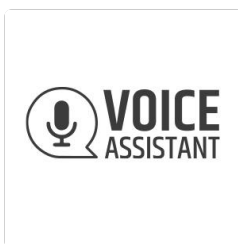


Figure 7: Voice Assistant. This icon represents the speaker's compatibility with voice assistant features.

MAINTENANCE

1. Cleaning

- Ensure the speaker is powered off and disconnected from any power source before cleaning.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners, alcohol, or chemical solvents.
- Avoid getting moisture into the ports.

2. Water Resistance (IPX6)

- The Ledwood Xtreme 180 is IPX6 water-resistant, meaning it can withstand powerful water jets. It is suitable for outdoor use and can resist rain or splashes.
- **Do not submerge the speaker in water.**
- Ensure all port covers are securely closed to maintain water resistance.

3. Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% every few months to preserve battery life.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far apart.	Ensure speaker is in Bluetooth mode (flashing LED). Turn on device Bluetooth. Move speaker closer to device (within 10 meters).
No sound.	Volume too low; incorrect input mode; device not playing.	Increase speaker and device volume. Ensure correct mode (Bluetooth, AUX, USB). Check if device is playing audio.
Poor FM radio reception.	Weak signal.	Move the speaker to a location with better signal reception.
TWS pairing fails.	Speakers already connected to a device; too far apart.	Ensure both speakers are disconnected from any device. Place speakers close to each other. Try resetting both speakers.

SPECIFICATIONS

Feature	Detail
Model Name	XT180
Connectivity Technology	Bluetooth
Speaker Output Power	140 Watts (Peak), 14 Watts RMS
Audio Output Mode	Stereo
Input Voltage	3.7 Volts
Mounting Type	Freestanding, Plug Mount

Feature	Detail
Material	Plastic
Special Feature	USB Port, LED Lights, FM Radio, TWS, Voice Control
Recommended Uses	Smartphones, Tablets, Computers, Outdoor Activities
Water Resistance Level	IPX6 (Splashproof)
Maximum Range	10 Meters
Control Method	Voice, Button
Speaker Size	12.6 Centimeters
Average Battery Life	6.5 hours
Item Dimensions (L x W x H)	12.3 x 12.6 x 28.3 Centimeters
Item Weight	1800 Grams
Compatible Devices	Android, iOS
Power Source	Battery Powered (Cable Electric for charging)

WARRANTY INFORMATION

The Ledwood Xtreme 180 Bluetooth Speaker comes with a **2-year limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance, technical support, or warranty inquiries, please visit the official Ledwood website or contact your local retailer. You may also refer to the digital user manual available on the product page for additional details.

Online Support: [Visit the Ledwood Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question