



[Manuals.plus](#) /

› [AREYZIN](#) /

› AREYZIN Ear and Nose Hair Trimmer User Manual

## AREYZIN C330

# AREYZIN Ear and Nose Hair Trimmer User Manual

Model: C330

## INTRODUCTION

---

This user manual provides detailed instructions for the safe and effective operation, maintenance, and troubleshooting of your AREYZIN C330 Multi-Purpose Hair Trimmer. Please read this manual thoroughly before first use and retain it for future reference.

The AREYZIN C330 is a versatile 3-in-1 grooming tool designed for both men and women, capable of trimming nose, ear, eyebrow, and facial hair. Its compact and stylish design makes it an ideal companion for home use or travel.

# MULTI-PURPOSE USE



Image: The AREYZIN C330 trimmer highlighting its stylish and ergonomic design, suitable for comfortable handling.

# SAFETY TO USE

LED | PAINLESS BLADE | SAFETY LOCK

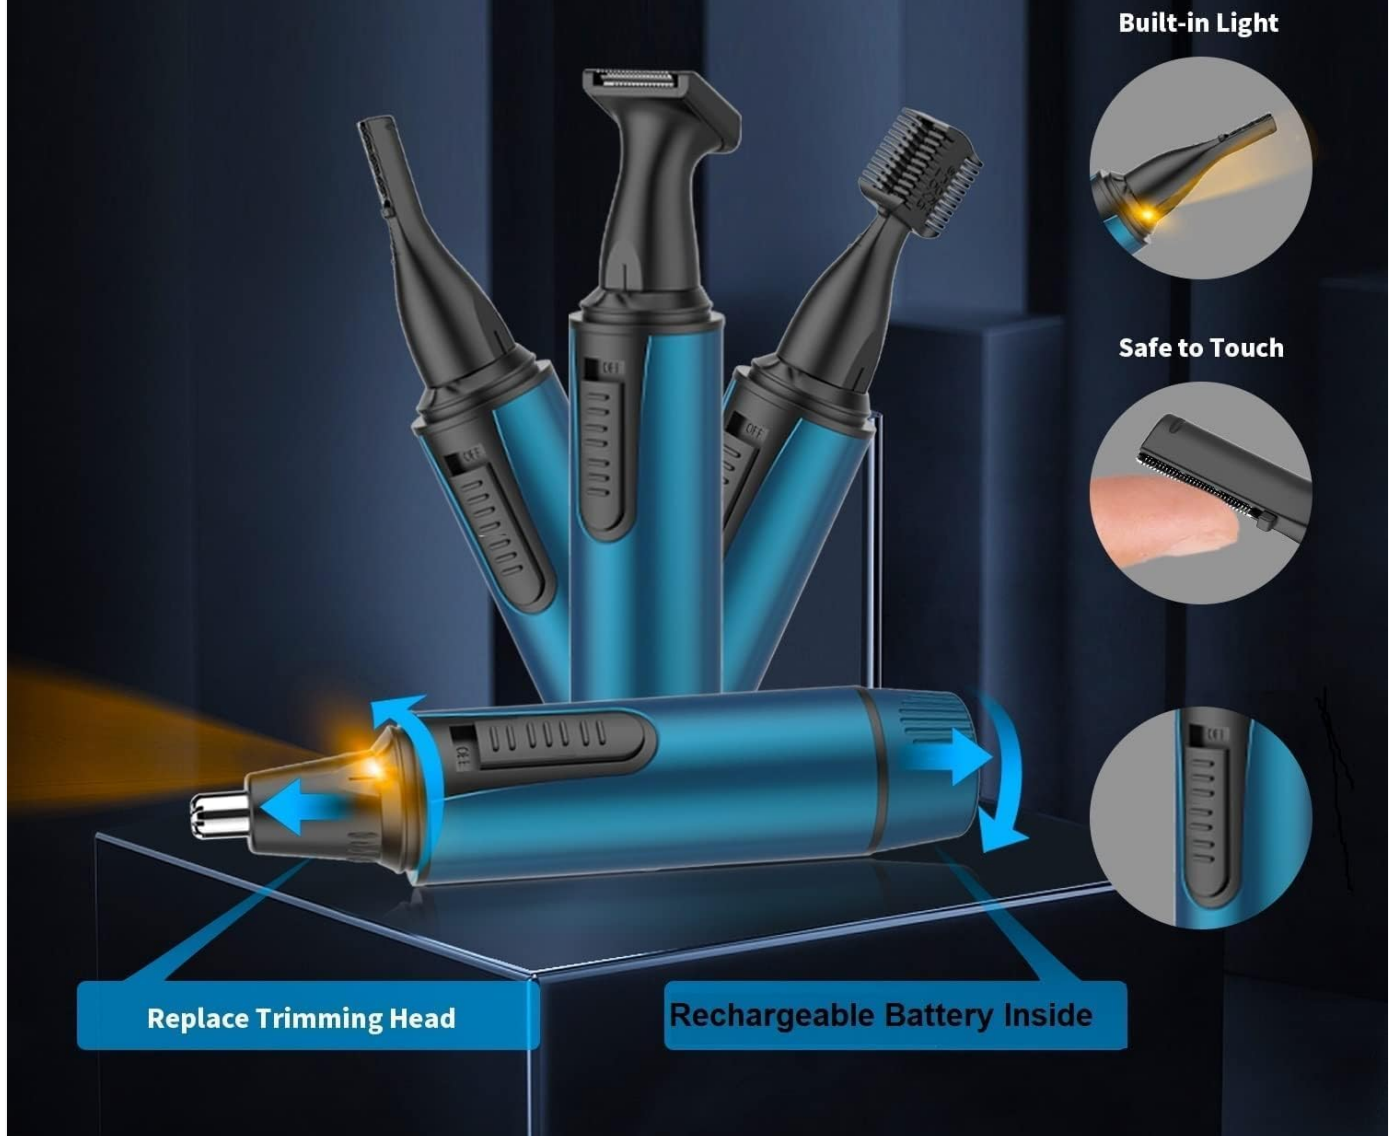 


Image: The compact and portable design of the AREYZIN C330 trimmer, making it convenient for travel and on-the-go grooming.

## IMPORTANT SAFETY INFORMATION

To reduce the risk of injury, electric shock, fire, or damage to the product, always follow these basic safety precautions:

- Keep the appliance dry. Do not immerse the main body in water.
- This appliance is designed for personal use only. Do not use it for any other purpose.
- Keep out of reach of children.
- Do not use if the blades are damaged or deformed, as this may cause injury.
- Ensure the charging cable and port are dry before connecting to a power source.
- Do not attempt to disassemble or repair the appliance yourself. Contact qualified service personnel for repairs.
- Avoid excessive pressure when trimming to prevent skin irritation or injury.

# SYLISH DESIGN

MAKE YOU ELEGANT AND MORE CONFIDENT



Image: The AREYZIN C330 trimmer highlighting its safety features, including a built-in light and painless blade design, ensuring safe and comfortable use.

## PACKAGE CONTENTS

Your AREYZIN C330 Multi-Purpose Hair Trimmer package includes the following items:

- 1 x Trimmer Main Unit
- 1 x Nose Trimmer Head
- 1 x Eyebrow Trimmer Head
- 1 x Beard Trimmer Head (Body Shaver Head)
- 1 x USB Charging Cable
- 1 x Cleaning Brush
- 1 x Stand Base for Storage



Image: Overview of the AREYZIN C330 Multi-Purpose Hair Trimmer and all its components, including the main unit, various trimming heads, charging cable, cleaning brush, and storage base.

# EASY TO USE

## RINSEABLE BLADES HEAD FOR EASY CLEANING



Nose Trimmer



Eyebrow Trimmer



Body Shaver



Long & Short Comb

 


Brush




Base


## TRIMMER THE HAIR ESILY

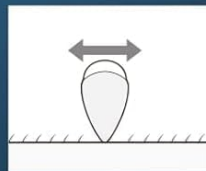

 Move the appliance slowly and with light pressure

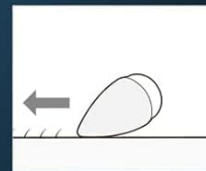

Move to anti-growth direction

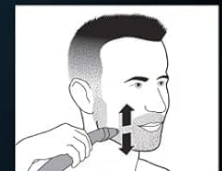 

Trimmer up and down

Image: A closer look at the individual trimming heads and accessories, illustrating their specific functions and how they attach to the main unit.

## SETUP AND FIRST USE

### Charging the Trimmer

Before initial use, fully charge the trimmer. The AREYZIN C330 features a built-in rechargeable battery and comes with a USB charging cable.

1. Connect the USB charging cable to the charging port on the trimmer.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, wall adapter, power bank, car charger).
3. The indicator light will show the charging status. A full charge typically takes 2-3 hours.
4. Once fully charged, disconnect the trimmer from the power source.

*Note: If the trimmer does not turn on immediately upon receipt, please charge it for 2-3 hours before attempting to use it.*

# USB RECHARGEABLE BATTERY

Reusable and compatible any USB adapter (not included)



Image: Demonstrates the USB charging capability of the AREYZIN C330 trimmer, showing it connected to a laptop and compatible with various USB power adapters.

## Attaching and Detaching Trimmer Heads

The trimmer comes with interchangeable heads for different grooming needs.

1. To attach a head: Align the desired trimmer head with the main unit and gently twist or push until it clicks securely into place.
2. To detach a head: Twist or pull the head gently away from the main unit.

## OPERATING INSTRUCTIONS

The AREYZIN C330 is designed for versatile grooming, offering precise and painless hair removal.

### General Usage Tips:

- Ensure your skin is clean and dry before trimming.
- Turn on the trimmer by sliding the power switch.
- Move the appliance slowly and with light pressure against the direction of hair growth for optimal results.
- The trimmer features a 6500RPM powerful motor and dual-edge blades for efficient trimming without pulling.



Image: Highlights the fast and powerful performance of the AREYZIN C330 trimmer, featuring a 6500RPM motor for efficient and low-noise operation.

### **Specific Trimming Applications:**

# FAST AND POWERFUL

LOW NOISE | EFFICIENCY | HIGH PERFORMANCE | LED



**6500RPM**  
POWERFUL MOTOR

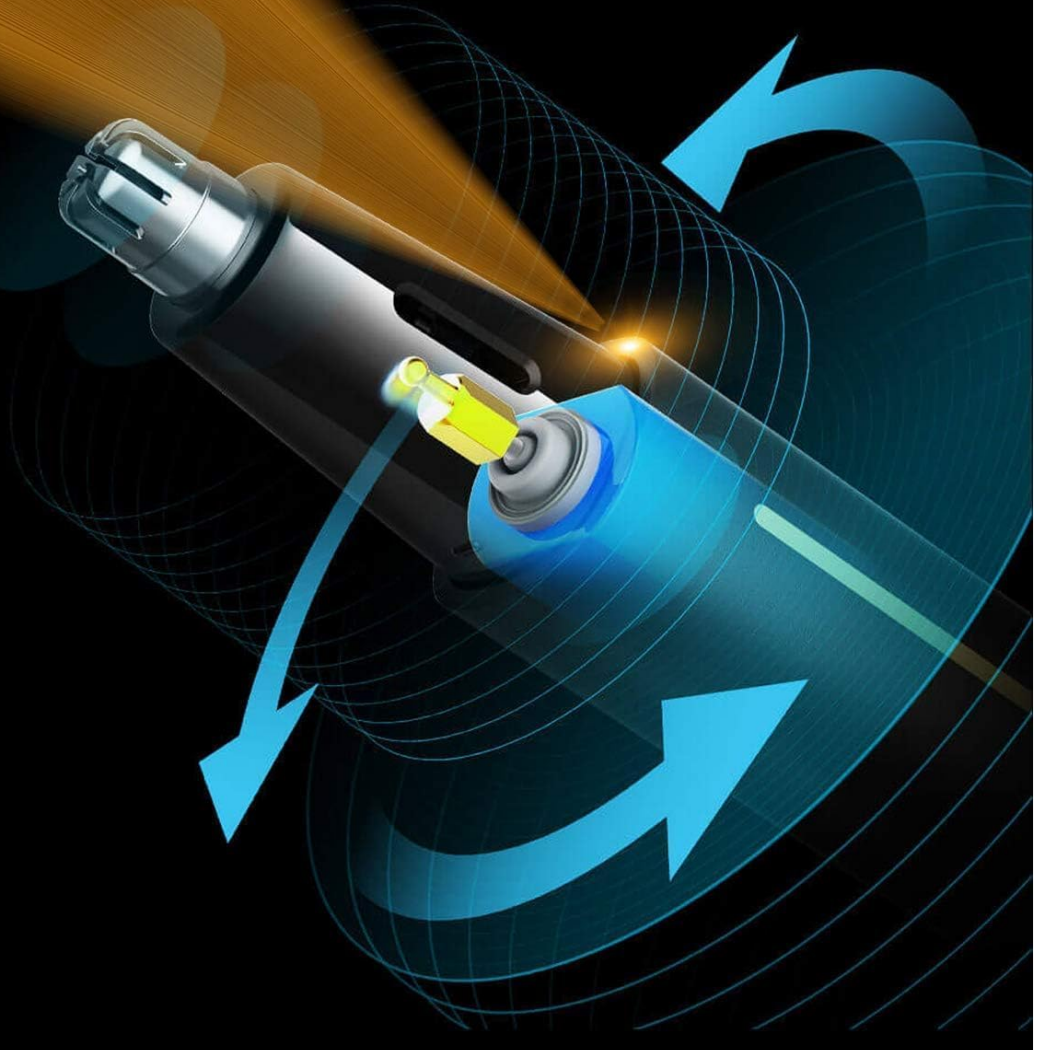


Image: Illustrates the various applications of the trimmer, including nose, ear, sideburn, eyebrow, and beard trimming, demonstrating its versatility.

- **Nose and Ear Hair Trimming:**

Attach the Nose Trimmer Head. Gently insert the trimmer tip into your nostril or ear canal. Move the trimmer in a circular motion to trim unwanted hair. The inner 360° rotating design ensures precise removal.

- **Eyebrow Trimming:**

Attach the Eyebrow Trimmer Head. Use the included comb attachment (if applicable) to guide the length of the trim. Carefully trim eyebrows to your desired shape and length.

- **Beard and Facial Hair Trimming (Body Shaver Head):**

Attach the Beard Trimmer Head. Use for trimming sideburns, beard lines, or other facial hair. Move the trimmer smoothly across the skin, following the contours of your face.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the lifespan of your trimmer.

### **Cleaning the Trimmer Heads:**

- The trimmer heads are washable and removable for convenient cleaning.
- After each use, detach the trimmer head.
- Rinse the detached head under running water to remove hair clippings.
- Use the included cleaning brush to remove any stubborn hair from the blades.
- Allow the trimmer head to air dry completely before reattaching or storing.

### **Cleaning the Main Unit:**

- The main unit is IPX7 waterproof, allowing for full body washing.
- You can rinse the entire trimmer under water for thorough cleaning.
- Ensure the charging port cover is securely closed before rinsing the main unit.
- Wipe the main unit with a clean, dry cloth after rinsing.

# COMPACT AND PORTABLE

TAKE ANYONE OR ANYWHERE YOU LIKE



Image: Demonstrates the IPX7 waterproof design of the AREYZIN C330 trimmer, showing it can be easily rinsed under water for cleaning.

## Storage:

- Store the trimmer and its accessories in the provided stand base to keep them organized and tidy.
- Keep the dust-proof cover on the nose trimmer head when not in use to maintain hygiene.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.



Image: The AREYZIN C330 trimmer with its stand base, designed for convenient storage of all blade heads, keeping your grooming area neat.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for 2-3 hours.
Trimmer pulls hair or is not cutting effectively.	Blades are clogged with hair or dull; battery is low.	Clean the trimmer head thoroughly. Ensure the trimmer is fully charged. If issues persist, the blades may need replacement (contact support).
Trimmer head is difficult to attach/detach.	Incorrect alignment or debris.	Ensure proper alignment and clear any debris from the connection points. Apply gentle pressure and twist.

If you encounter any problems not listed here, or if the suggested solutions do not resolve the issue, please contact AREYZIN customer support.

## PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	C330
Brand	AREYZIN
Product Dimensions	5.8 x 1.2 x 1.2 inches

Feature	Detail
Item Weight	120 Grams (4.23 ounces)
Power Source	USB Rechargeable (1 Lithium Ion battery included)
Motor Speed	6500 RPM
Waterproof Rating	IPX7 (Full body washable)
Blade Material	Stainless Steel Dual-Edge Blades
Color	Blue
Recommended Uses	Nose, Ear, Facial, Eyebrow, Sideburns, Beard, Body Hair Trimming

## WARRANTY INFORMATION

---

Specific warranty details for the AREYZIN C330 Multi-Purpose Hair Trimmer are not provided in the product information. For warranty claims or detailed information regarding product guarantees, please retain your proof of purchase and contact AREYZIN customer support directly.

## CUSTOMER SUPPORT

---

For any questions, concerns, or assistance with your AREYZIN C330 Multi-Purpose Hair Trimmer, please contact AREYZIN customer support through their official channels.

You can visit the official AREYZIN store for more information and support: [AREYZIN Official Store](#)

