

[Manuals.plus](#) /

> [Brizled](#) /

> Brizled 200 LED 65.67ft Color Changing Christmas String Lights Instruction Manual

## Brizled RMCC002

# Brizled 200 LED 65.67ft Color Changing Christmas String Lights Instruction Manual

Model: RMCC002

## INTRODUCTION

Thank you for choosing Brizled Color Changing LED String Lights. This manual provides essential information for the safe and efficient use of your new lighting product. Please read these instructions carefully before installation and operation, and retain them for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the lights from the power source before installation, maintenance, or troubleshooting.
- Do not connect the string lights to the power supply while they are in the packaging.
- Ensure the power adapter is rated for outdoor use if installing outdoors.
- Avoid damaging the insulation of the wires. Do not use if wires are frayed or damaged.
- Do not secure the wiring with staples or nails, or place them on sharp objects that could damage the insulation.
- Keep away from heat sources and open flames.
- This product is not a toy. Keep out of reach of children.
- Only use the provided adapter. Do not substitute with other adapters.
- Do not exceed the maximum connectable sets (up to 3 sets, total 600 LEDs, 197ft).

## PACKAGE CONTENTS

- 1 x Brizled 200 LED Warm White & Multicolor Christmas Lights (65.67ft)
- 1 x 29V UL Listed Power Adapter
- 1 x Remote Control (with insulation sheet)

## SETUP

1. **Unpack the Lights:** Carefully remove the string lights from their packaging, ensuring not to tangle the wires.
2. **Placement:** Determine your desired location for installation (indoor or outdoor). Ensure the power adapter is protected from direct water exposure if used outdoors.
3. **Connect the Adapter:** Plug the string light connector into the 29V UL Listed Power Adapter.
4. **Power On:** Insert the power adapter into a suitable electrical outlet. The lights should illuminate.
5. **Remote Control Preparation:** Remove the transparent insulation sheet from the battery compartment of the remote control before first use.
6. **Connecting Multiple Sets (Optional):** If you have additional Brizled connectable string light sets, connect them end-to-end. Ensure the total number of connected LEDs does not exceed 600 (3 sets).



Image: Brizled 200 LED Warm White & Multicolor Christmas Lights with remote control and power adapter. The lights are coiled, showing both warm white and multicolor LEDs.

## OPERATING INSTRUCTIONS

Your Brizled string lights can be operated using the included remote control or the button on the power adapter.

## Using the Remote Control:

- **ON/OFF:** Press the **ON** button to turn the lights on, and **OFF** to turn them off.
- **Lighting Modes:** Use buttons **1** through **11** to select from the various lighting modes.
  - 1: 11 Modes Loop
  - 2: Warm White Steady On
  - 3: Multicolor Steady On
  - 4: 30% Warm White + 70% Multicolor Steady On
  - 5: 70% Warm White + 30% Multicolor Steady On
  - 6: Warm White & Multicolor Slo-Glo
  - 7: Warm White & Multicolor Breathing
  - 8: Warm White Slo-Glo
  - 9: Multicolor Slo-Glo
  - 10: Flash for Warm and Multicolor
  - 11: Warm White & Multicolor In Wave
- **Brightness Adjustment:** Use the **DIM+** and **DIM-** buttons to adjust the brightness (100%-75%-50%-25%).
- **Timer Function:** Press **6H** to set a 6-hour timer (lights on for 6 hours, off for 18 hours, then repeat). Press **8H** for an 8-hour timer. Press **663H** for a 6-hour on, 6-hour off, 3-hour on, 9-hour off cycle. Press **OFF** to cancel the timer.







-  6 hrs on, 18 hrs off
-  11 Lighting Modes
-  Brightness Adjustable
-  Wireless Range:  
16.4-26.25ft



Image: Close-up of the remote control for Brizled lights, showing buttons for power, modes (1-11), brightness adjustment, and timer settings.

# 11 Lighting Modes & Color Changing



1. 11 Modes Loop
2. Warm White Steady On
3. Multicolor Steady On
4. 30% Warm White + 70% Multicolor Steady On
5. 70% Warm White + 30% Multicolor Steady On
6. Warm White & Multicolor Slo-Glo
7. Warm White & Multicolor Breathing
8. Warm White Slo Glo
9. Multicolor Slo Glo
10. Warm White & Multicolor Flash
11. Warm White & Multicolor In Wave

Image: A split image showing a Christmas tree illuminated with warm white lights on one side and multicolor lights on the other, illustrating the 11 available lighting modes.

# End to End Connectable up to 3 Sets



Image: A Christmas tree decorated with Brizled lights, with insets demonstrating the four dimmable brightness levels (100%, 75%, 50%, 25%).

## Using the Adapter Button:

The button on the power adapter allows you to cycle through the 11 lighting modes. Press the button repeatedly to switch between modes.

## MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Wipe the lights and adapter with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, carefully coil the string lights and store them in a cool, dry place away from direct sunlight. Avoid tangling to prevent damage to the wires.
- **Inspection:** Periodically inspect the lights, wires, and adapter for any signs of damage, such as cuts, fraying, or loose connections. Discontinue use if any damage is found.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	<ul style="list-style-type: none"> <li>Power adapter not plugged in.</li> <li>Remote control battery insulation not removed.</li> <li>Faulty power outlet.</li> <li>Damaged wire or adapter.</li> </ul>	<ul style="list-style-type: none"> <li>Ensure the adapter is securely plugged into a working outlet.</li> <li>Remove the insulation sheet from the remote control battery.</li> <li>Test the outlet with another device.</li> <li>Inspect wires and adapter for damage. If damaged, discontinue use.</li> </ul>
Remote control not working.	<ul style="list-style-type: none"> <li>Insulation sheet still in place.</li> <li>Remote battery is dead.</li> <li>Obstruction between remote and receiver.</li> </ul>	<ul style="list-style-type: none"> <li>Remove the insulation sheet.</li> <li>Replace the remote control battery (CR2025, not included).</li> <li>Ensure clear line of sight between remote and adapter.</li> </ul>
Lights are dim or flickering.	<ul style="list-style-type: none"> <li>Brightness setting is low.</li> <li>Too many sets connected.</li> </ul>	<ul style="list-style-type: none"> <li>Increase brightness using the remote control.</li> <li>Reduce the number of connected sets (max 3 sets).</li> </ul>

## SPECIFICATIONS

- **Brand:** Brizled
- **Model Number:** RMCC002
- **Light Source:** LED
- **Number of LEDs:** 200
- **Light Length:** 65.67 feet
- **Power Source:** Corded Electric (29V UL Listed Adapter)
- **Voltage:** 24 Volts
- **Wattage:** 3 watts
- **Light Color:** Warm White & Multicolor
- **Special Features:** Dimmable, Adjustable, Remote Controlled, Color Changing, Timer, Waterproof, Linkable (up to 3 sets)
- **Indoor/Outdoor Usage:** Yes
- **Material:** Plastic
- **Item Weight:** 1.06 pounds

## WARRANTY

This product comes with a 1-year manufacturer warranty. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, please refer to the official Brizled website or contact customer support.

## CUSTOMER SUPPORT

---

For any questions, technical assistance, or warranty inquiries, please contact Brizled customer support through the retailer where the product was purchased or visit the official Brizled website for contact information.

