

Sony PSP 1000

Sony PSP 1000 PlayStation Portable Core System Instruction Manual

Model: PSP 1000

1. INTRODUCTION

The Sony PSP 1000 PlayStation Portable Core System is a versatile handheld gaming console designed for entertainment on the go. It supports gaming, multimedia playback, and wireless connectivity. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.

2. SETUP

2.1 Package Contents

Before beginning, ensure all components are present:

- PSP 1000 PlayStation Portable Core System
- Battery
- AC Adapter/Charger cable
- 8GB Pro DUO Memory Card

2.2 Battery Installation and Charging

1. Locate the battery compartment on the back of the PSP.
2. Insert the battery, ensuring the contacts align correctly.
3. Close the battery compartment cover.
4. Connect the AC adapter to the PSP's DC IN 5V port and then to a power outlet. The power indicator light will illuminate, indicating charging.
5. Allow the battery to fully charge before first use.

2.3 Memory Card Insertion

1. Locate the Memory Stick Duo slot on the side of the PSP.
2. Insert the 8GB Pro DUO Memory Card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.

2.4 Initial Power-On

1. Slide the POWER switch located on the top right of the PSP to the 'ON' position.
2. Follow the on-screen prompts to set the date, time, and other initial system preferences.

3. OPERATING THE PSP 1000

3.1 Basic Navigation (XrossMediaBar - XMB)

The PSP uses the XrossMediaBar (XMB) interface for navigation. Use the directional buttons (up, down, left, right) to select categories and items, and the X button to confirm selections. The O button typically cancels or goes back.

3.2 Playing Games

1. Open the UMD (Universal Media Disc) drive cover on the back of the PSP.
2. Insert a UMD game disc with the label facing up.
3. Close the UMD drive cover securely.
4. Navigate to the 'Game' category on the XMB and select the UMD icon to start the game.

3.3 Multimedia Playback

The PSP supports various multimedia formats stored on the Memory Stick Duo:

- **Music:** Navigate to the 'Music' category to play audio files.
- **Photos:** Navigate to the 'Photo' category to view images.
- **Videos:** Navigate to the 'Video' category to watch video files.

3.4 Wireless Internet Connectivity

The PSP 1000 supports wireless internet for browsing and online features:

1. Navigate to 'Settings' > 'Network Settings'.
2. Select 'Infrastructure Mode' to connect to a wireless access point.
3. Follow the on-screen instructions to scan for networks and enter security keys if required.

4. MAINTENANCE

4.1 Cleaning the Console

Use a soft, dry cloth to clean the exterior of the PSP. For the screen, use a microfiber cloth specifically designed for electronics. Avoid abrasive cleaners or solvents.

4.2 Battery Care

To prolong battery life, avoid extreme temperatures and fully discharge and recharge the battery periodically. If the PSP will not be used for an extended period, remove the battery.

4.3 Memory Card Handling

Always ensure the PSP is powered off or in standby mode before inserting or removing the Memory Stick Duo to prevent data corruption.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your PSP 1000.

5.1 Console Does Not Power On

- Ensure the battery is correctly installed and charged.
- Verify the AC adapter is properly connected and functioning.
- Try removing and reinserting the battery.

5.2 UMD Disc Read Errors

- Check if the UMD disc is clean and free of scratches.
- Ensure the UMD disc is inserted correctly and the drive cover is fully closed.
- Restart the PSP console.

5.3 Memory Card Not Recognized

- Ensure the Memory Stick Duo is fully inserted into its slot.
- Remove and reinsert the memory card.
- Check if the memory card is damaged or corrupted.

5.4 General Performance Issues

As this is a renewed product, some accessories may not be original. If you experience persistent issues, refer to the warranty information or contact the seller for assistance.

6. SPECIFICATIONS

Item Model Number	PSP 1000
Package Dimensions	10 x 6 x 4 inches
Item Weight	2 Pounds
Batteries	1 Nonstandard Battery (included)
Memory Storage Capacity	8.0 GB (via included Pro DUO Memory Card)

7. PRODUCT IMAGES



Front view of the white Sony PSP 1000 console, showing the screen, directional pad, action buttons, and 'SONY' branding.



Back view of the white Sony PSP 1000 console, featuring the UMD drive cover with the 'PSP' logo and 'SONY' branding.

8. WARRANTY AND SUPPORT

This renewed product has been professionally inspected, tested, and cleaned by Amazon-qualified suppliers. It comes with a minimum 90-day warranty. For any issues or support inquiries, please contact the seller directly through your purchase platform. Products with batteries are certified to exceed 80 percent capacity relative to new. Accessories may not be original but are compatible and fully functional.