

LONPOO LP-100

LONPOO LP-100 HD Blu-Ray Disc Player User Manual

Model: LP-100 | Brand: LONPOO

1. INTRODUCTION

The LONPOO LP-100 HD Blu-Ray Disc Player is designed to provide high-definition video and audio playback for your home entertainment system. It supports a variety of disc formats, including Blu-ray, DVD, and CD, and offers versatile connectivity options for seamless integration with your television and audio equipment. This manual provides detailed instructions for setting up, operating, and maintaining your player.



Image: Front view of the LONPOO LP-100 HD Blu-Ray Disc Player.

2. PACKAGE CONTENTS

Please check the box for the following items:

- 1x LONPOO Blu-Ray DVD Player (NO WiFi)
- 1x Remote Control (Batteries not included)
- 1x HDMI Cable
- 1x AV Cable
- 1x User Manual (This document)

Code Value Corresponding to The Remote Control

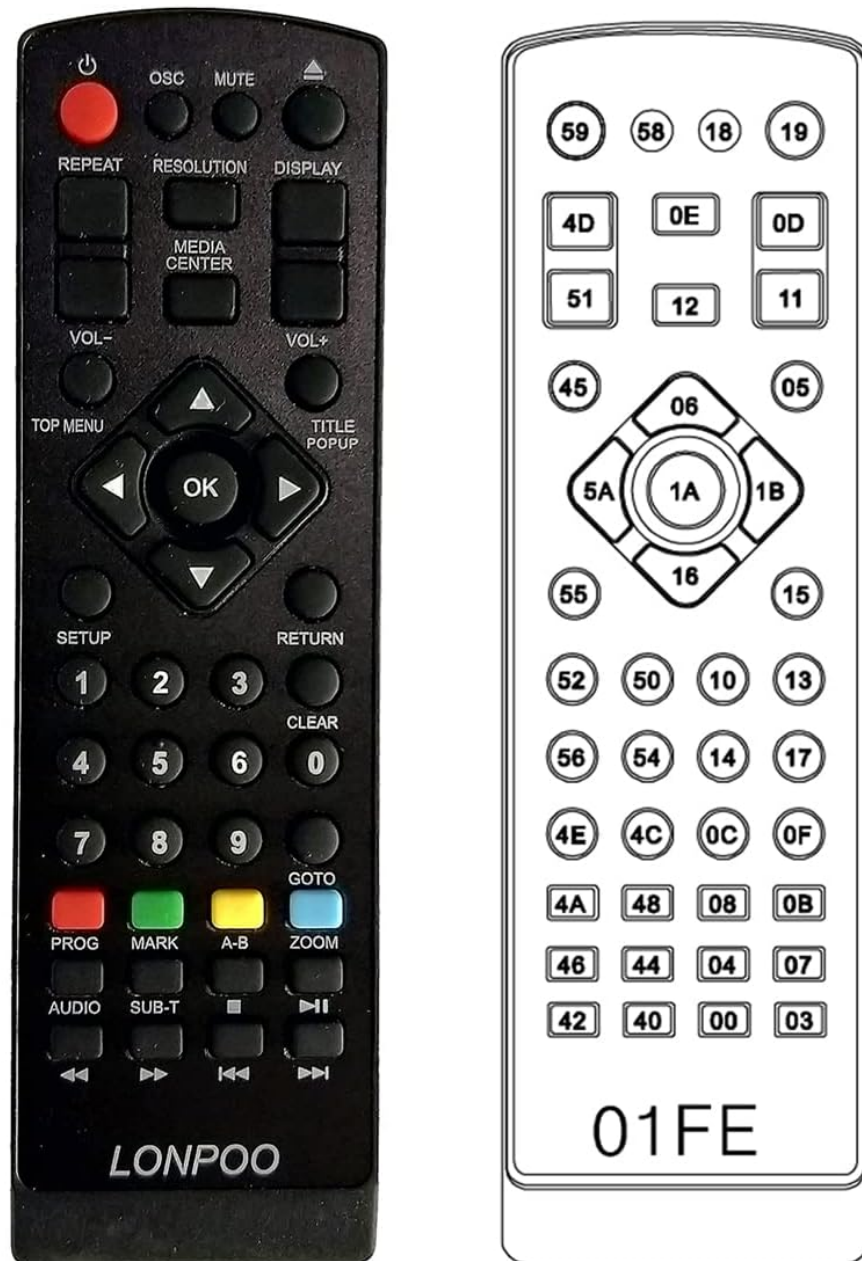 


Image: The LONPOO LP-100 Blu-Ray Disc Player along with its remote control, HDMI cable, AV cable, and user manual.

3. PRODUCT OVERVIEW

3.1 Front Panel

The front panel features the disc tray, a USB 2.0 port for media playback, and essential control buttons including power, play/pause, stop, and eject. A digital display shows playback status and time.



Image: Close-up of the front panel showing the disc tray, USB port, and control buttons.

3.2 Rear Panel

The rear panel provides various output ports for connecting to your TV and audio system. These include an HDMI output, composite video/audio (AV) output, and a coaxial audio output.



Image: Rear panel displaying HDMI, Coaxial, and RCA (AV) output ports.

3.3 Remote Control

The included remote control allows for convenient operation of all player functions from a distance. It includes buttons for power, disc tray open/close, playback controls, menu navigation, and volume adjustment.



DVD Player + Remote Control



Manual



HDMI Cable



RCA Cable



Remote Control

Image: The remote control unit with various function buttons.

4. SETUP

Follow these steps to connect your LONPOO LP-100 Blu-Ray Disc Player to your home entertainment system.

4.1 Connecting to a Television

1. **HDMI Connection (Recommended for HD):** Connect one end of the HDMI cable to the HDMI OUT port on the player and the other end to an HDMI input port on your TV. Select the corresponding HDMI input on your TV.
2. **AV Connection (Standard Definition):** Connect the yellow, white, and red plugs of the AV cable to the corresponding VIDEO, L (Audio Left), and R (Audio Right) output ports on the player. Connect the other end to the matching input ports on your TV. Select the AV input on your TV.

4.2 Connecting to an Audio System

For enhanced audio, connect the player to your home audio system:

- **Coaxial Audio Output:** Use a coaxial cable to connect the COAXIAL output port on the player to the

digital coaxial input on your amplifier or receiver.

4.3 Power Connection

Connect the power cord to the player's power input and then plug it into a standard electrical outlet (100-240V, 50/60Hz).

4.4 Initial Power On

Press the power button on the front panel or the remote control to turn on the player. The display will illuminate.

Your browser does not support the video tag.

Video: An official seller video demonstrating the setup and features of the LONPOO LP-100 HD Blu-Ray Disc Player.

Your browser does not support the video tag.

Video: An official seller video detailing the settings and features of the Blu-Ray DVD and disc player.

5. OPERATING INSTRUCTIONS

5.1 Basic Disc Playback

1. Press the **OPEN/CLOSE** button on the remote or front panel to open the disc tray.
2. Place a disc gently onto the tray with the label side facing up.
3. Press the **OPEN/CLOSE** button again to close the tray. The player will automatically begin reading the disc.
4. Use the **PLAY/PAUSE**, **STOP**, **FAST FORWARD**, and **REWIND** buttons on the remote or front panel to control playback.

5.2 Media Playback Features

The LP-100 supports a wide range of media formats:

- **Supported Disc Formats:** BD, BD-R, BD-RE, DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-Video, VCD, CD, CD-R, CD-RW.
- **Blu-ray Region:** Supports Blu-ray discs in Region A/1 only.
- **Full HD 1080p:** Enjoy Blu-ray movies in Full High Definition. The player also upscales standard definition DVDs to near HD resolution.
- **Surround Sound:** Supports DTS, DTS-HD Master Audio, Dolby Digital, Dolby Digital Plus, Dolby TrueHD.

BLU RAY DVD PLAYER FULL HD 1080P



Support Blu Ray Discs in Region A/1,

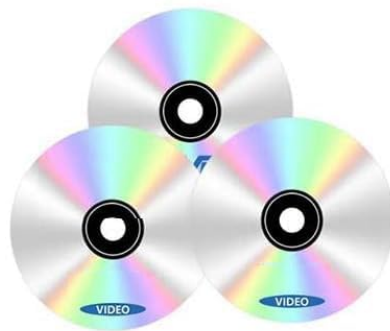 


Image: Illustration indicating Blu-ray disc region A/1 compatibility.

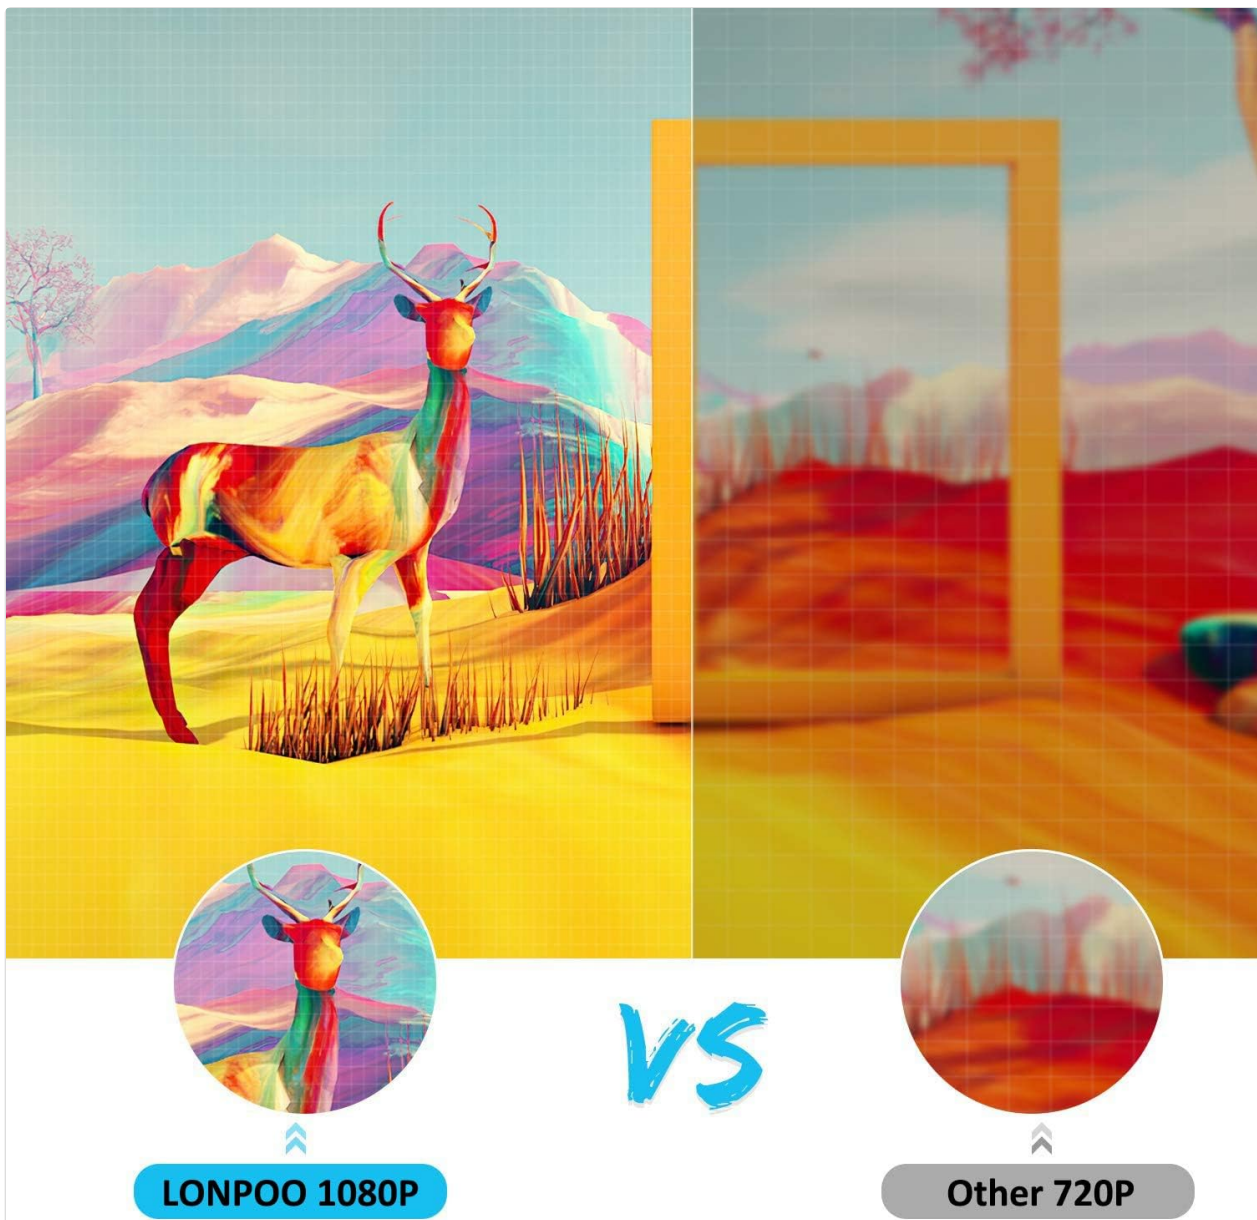 


Image: Visual comparison highlighting the clarity of 1080p resolution versus 720p.

5.3 USB Playback

The built-in USB 2.0 port allows you to play digital media files:

1. Insert your USB storage device into the USB slot on the front panel.
2. Use the remote control to navigate to the USB input and select your desired media file (video, photo, or music).

Supported USB File Formats:

- **Video:** AVI, MPEG-4, DAT (VCD format), VOB (DVD format), MOV
- **Music:** MP3, WMA, OGG
- **Image:** JPG, JPEG, GIF, PNG

MULTIPLE FORMATS SUPPORTED

Disc: BD, BD-R, BD-RE, DVD-R/RW,
DVD+R/RW, DVD-Video, VCD, CD, CD-R/RW
USB: WMV, AVCHD, VOB, MOV, AVI, MKV,
3GP, ASF MPEG, MP4, TS



Image: The player displaying supported media formats for discs and USB input.

6. MAINTENANCE

To ensure optimal performance and longevity of your Blu-Ray Disc Player, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. Do not use liquid cleaners or aerosol sprays.
- **Disc Handling:** Always handle discs by their edges. Store them in their cases to prevent scratches and dust accumulation.
- **Ventilation:** Ensure the player has adequate ventilation. Do not block the ventilation slots on the top or sides of the unit.
- **Power Off:** Disconnect the power cord from the wall outlet if the player will not be used for an extended period.

7. TROUBLESHOOTING

If you encounter issues with your player, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|----------------------------|--|--|
| No power | Power cord not connected; Power outlet faulty | Check power cord connection; Try a different outlet |
| No picture | Incorrect input selected on TV; HDMI/AV cable loose or faulty | Select correct TV input; Check cable connections; Try a different cable |
| No sound | TV/audio system volume too low; Incorrect audio output selected; Audio cable loose or faulty | Increase volume; Check audio settings on player/TV; Check audio cable connections |
| Disc not playing | Disc is dirty, scratched, or incompatible; Incorrect region code | Clean or replace disc; Ensure disc is compatible (e.g., Blu-ray Region A/1); Check disc for damage |
| Remote control not working | Batteries are dead or inserted incorrectly; Obstruction between remote and player | Replace batteries; Ensure correct polarity; Remove obstructions; Point remote directly at player |

8. SPECIFICATIONS

Below are the technical specifications for the LONPOO LP-100 Blu-Ray Disc Player:

- **Model Name:** LP-100
- **Media Type:** Blu-Ray Disc, CD, DVD, SVCD, VCD
- **Resolution:** 1920x1080 (1080p)
- **Connector Type:** HDMI, RCA (AV), Coaxial
- **Connectivity Technology:** Coaxial, HDMI, RCA
- **Special Features:** Anti-Shock, Blu-ray support, Quick Start
- **Color:** Black
- **Item Weight:** 1 Kilogram
- **Power Consumption:** 20 Watts
- **Supported Audio Format:** Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS
- **Surround Sound Channel Configuration:** 5.1 or 7.1
- **Total Number of HDMI Ports:** 1
- **Video Encoding:** H.264
- **Compatible Devices:** Television
- **Analog Video Format:** NTSC, PAL
- **Controller Type:** Remote Control
- **File Format (USB):** GIF, JPEG, MP4, PNG
- **Item Dimensions L x W x H:** 10.24"L x 7.56"W x 1.57"H

READING FAST AND QUIET

Fast Reading



Noise Cancellation

Anti-shock



Error Correction



Image: Features of the player including fast reading, noise cancellation, anti-shock, and error correction.

9. WARRANTY AND SUPPORT

The LONPOO LP-100 Blu-Ray Disc Player comes with a standard manufacturer's warranty. For specific warranty details, including duration and coverage, please refer to the warranty card included in your product packaging or contact LONPOO customer support directly.

For technical assistance, troubleshooting beyond this manual, or any other inquiries, please contact the manufacturer's customer service. Contact information can typically be found on the product packaging, the official LONPOO website, or through your retailer.