

[Manuals.plus](#) /

› [VISWIN](#) /

› VISWIN Professional All-in-One Art Painting Kit Instruction Manual (Model: SH_ASMP002_CA)

VISWIN SH_ASMP002_CA

VISWIN Professional All-in-One Art Painting Kit Instruction Manual

Model: SH_ASMP002_CA

1. INTRODUCTION

This manual provides comprehensive instructions for the VISWIN Professional All-in-One Art Painting Kit. This deluxe kit is designed for adults, artists, and beginners, offering a complete set of art supplies for various mediums including acrylic, watercolor, and oil painting. It includes two premium easels, a wide selection of artist-quality paints, brushes, and versatile painting surfaces. Please read this manual thoroughly to ensure proper setup, use, and maintenance of your art kit components.



Image 1.1: Overview of the VISWIN Professional All-in-One Art Painting Kit components.

2. What's Included

Your VISWIN Professional All-in-One Art Painting Kit contains the following items:

- **Easels:**
 - 1 x Adjustable Aluminum Tripod Easel with Carry Bag
 - 1 x Solid Beech Wood Tabletop Easel Box
- **Paints (96 tubes, 12ml/0.41 US fl.oz each):**
 - 48 x Acrylic Paints
 - 24 x Oil Paints

- 24 x Watercolor Paints

- **Brushes (30 premium brushes):**

- 10 x Acrylic Brushes (high quality nylon hair)
- 10 x Oil Brushes (stiff hog bristle)
- 10 x Watercolor Brushes (animal hair)

- **Painting Surfaces:**

- 2 x 11x14 inch Stretched Canvases (16mm thickness)
- 4 x 8x10 inch White Canvas Panels
- 2 x 8x10 inch Black Canvas Panels
- 1 x Acrylic Paper Pad (9x12 inch, 190 LB/400g/m², 12 sheets)
- 1 x Oil Paper Pad (9x12 inch, 90 LB/190g/m², 15 sheets)
- 1 x Watercolor Paper Pad (9x12 inch, 140 LB/300g/m², 12 sheets)

- **Additional Accessories:**

- 1 x Wooden Palette
- 1 x Plastic Palette
- 6 x Palette Knife Set
- 1 x Color Mixing Wheel

48 Acrylic Paint

12 ml/0.41 US fl.oz



24 Watercolor Paint

12 ml/0.41 US fl.oz



24 Oil Paint

12 ml/0.41 US fl.oz



Image 2.1: Detailed view of the included acrylic, watercolor, and oil paint sets.

10 Acrylic Brushes

high quality nylon hair



10 Oil Brushes

stiff hog bristle



10 Watercolor Brushes

animal hair




Image 2.2: Various brush types for acrylic, oil, and watercolor painting.




2Pcs - 11x14"
Stretched Canvas



 
2Pcs - 8x10"
Black Canvas Panels

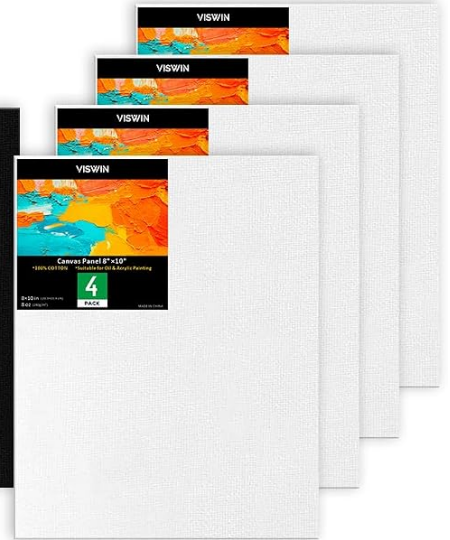


4Pcs - 8x10"
White Canvas Panels

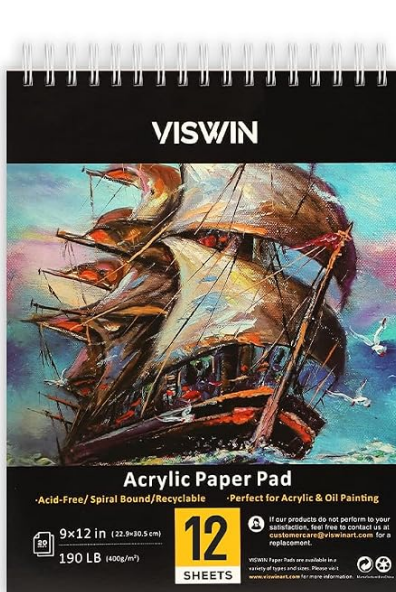 

Acrylic Paper Pad (400g/m²)
- 12 Sheets

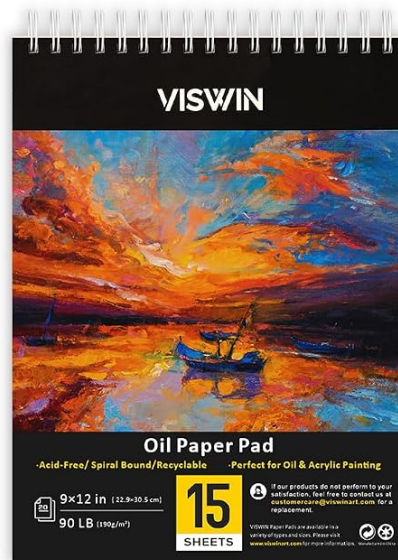 

 Oil Paper Pad (190g/m²)
- 15 Sheets
9x12"

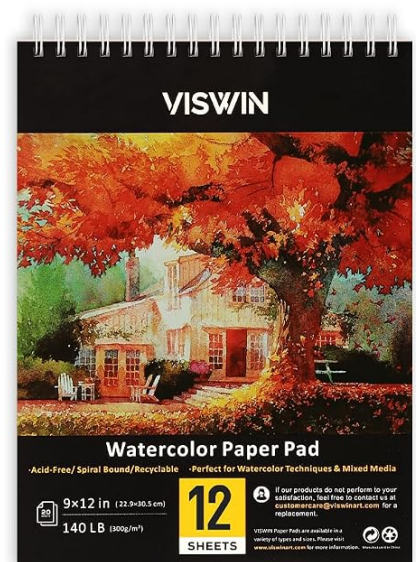

Watercolor Paper Pad (300g/m²)
- 12 Sheets

Image 2.3: Selection of canvases and paper pads for diverse artistic needs.

Video 2.1: This video provides a general overview of the VISWIN 3-in-1 painting set, showcasing the variety of items included in the kit.

3. SETUP INSTRUCTIONS

3.1. Aluminum Tripod Easel Assembly

The aluminum tripod easel is designed for portability and adjustable height, suitable for both indoor and outdoor use. Follow these steps for assembly:

1. Remove the easel from its carry bag.
2. Extend the three legs of the tripod easel.

3. Adjust the height of each leg using the easy turn knobs and retractable leg sections to achieve desired stability and height.
4. Attach the canvas tray to the central pole at your preferred working height. Ensure it is securely fastened.
5. Secure the top canvas holder to firmly hold your canvas in place.
6. Place your canvas or painting surface onto the tray and secure it with the top holder.



Video 3.1: This video demonstrates the assembly process for the aluminum tripod easel, including extending legs, attaching the tray, and securing a canvas. It shows how to adjust the easel for different heights and canvas sizes.

Beech Wood Table Easel Box & Aluminum Field Easel

• Adjustable height from 21"-66"

- Adjustable angle
- 13"x10" Portable Design with drawer



Image 3.1: The two included easels: a portable aluminum tripod easel and a compact beech wood tabletop easel box.

3.2. Beech Wood Tabletop Easel Box Setup

The beech wood tabletop easel box provides a stable surface for detailed work and includes storage compartments. To set it up:

1. Unlatch the front clasp of the easel box.
2. Open the top lid, which serves as the easel surface.
3. Adjust the angle of the easel surface by selecting one of the four available angle settings.
4. Pull out the storage drawer located beneath the easel surface to access compartments for paints, brushes, and other small accessories.

4. OPERATING INSTRUCTIONS

4.1. Using Paints

Your kit includes acrylic, oil, and watercolor paints, each with unique properties. Always squeeze a small amount of paint onto a palette (wooden or plastic) for mixing. Use the included color mixing wheel as a guide for color theory and blending.

- **Acrylic Paints:** Fast-drying, water-soluble when wet, and water-resistant when dry. Can be used on various surfaces including canvas, paper, and wood. Clean brushes with water immediately after use.
- **Oil Paints:** Slow-drying, allowing for extended blending time. Requires appropriate solvents (not included) for thinning and brush cleaning. Use on oil paper pads or stretched canvases.
- **Watercolor Paints:** Transparent and water-soluble. Best used on watercolor paper pads. Apply in thin washes for luminous effects. Clean brushes with water.

4.2. Using Brushes

The kit provides specific brushes for each paint type to optimize performance. Select the appropriate brush size and shape for your desired detail or coverage. The palette knives can be used for mixing paints or applying thick textures directly to the canvas.

- **Acrylic Brushes:** Made with high-quality nylon hair, offering smooth strokes and excellent spring.
- **Oil Brushes:** Feature stiff hog bristles, providing firm control and rich texture for oil applications.
- **Watercolor Brushes:** Crafted with soft animal hair for superior absorbency, delicate blending, and smooth washes.

4.3. Painting Surfaces

Choose your surface based on the medium you are using. All canvases and paper pads are acid-free.

- **Stretched Canvases & Canvas Panels:** Ideal for acrylic and oil paints. The canvas panels are rigid and suitable for various techniques.
- **Acrylic Paper Pad:** Designed for acrylic and oil painting, offering a sturdy surface.
- **Oil Paper Pad:** Specifically formulated for oil painting, preventing oil absorption and maintaining paint

integrity.

- **Watercolor Paper Pad:** Optimized for watercolor techniques and mixed media, ensuring superior absorbency and preventing buckling.



Image 4.1: Examples of the painting kit in use for indoor and outdoor artistic activities.

5. MAINTENANCE

5.1. Brush Care

- **Acrylic & Watercolor Brushes:** Clean immediately after use with warm water and mild soap. Gently reshape bristles and allow to air dry flat or brush-side down to prevent water from seeping into the ferrule.
- **Oil Brushes:** Clean with appropriate art solvents (e.g., mineral spirits, not included) to remove oil

paint, then wash thoroughly with soap and water. Reshape and dry.

- Avoid letting paint dry in the bristles, as this can permanently damage the brush.

5.2. Palette Care

- Clean plastic palettes with water and soap for acrylics and watercolors. For oil paints, scrape off excess paint and clean with a solvent.
- Wooden palettes can be scraped clean. For oil paints, a thin layer of linseed oil can be applied periodically to condition the wood and prevent paint from soaking in.

5.3. Easel Care

- Wipe down aluminum and wood easels with a damp cloth to remove any paint or dust.
- Ensure all knobs and fasteners are tightened before and after use to maintain stability.
- Store the aluminum easel in its carry bag when not in use to protect it during transport.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Acrylic paint drying too quickly on palette/brush	Warm environment, thin application, or paint exposed to air for too long.	Add a small amount of water or acrylic retarder (not included) to the paint. Work in a cooler environment or use a stay-wet palette. Keep paint tubes capped when not in use.
Brushes becoming stiff or damaged	Paint dried in bristles, improper cleaning, or incorrect storage.	Clean brushes immediately after use. For dried acrylics, soak in warm water with brush cleaner. For oils, use appropriate solvent. Store brushes upright or flat after drying.
Watercolor paper buckling or warping	Excessive water application, insufficient paper weight, or not properly stretched.	Use less water or apply washes in layers, allowing drying time between. Ensure you are using the correct watercolor paper pad (140 LB) which is designed to handle water. For heavy washes, consider stretching the paper.
Easel instability or wobbling	Legs not fully extended or tightened, uneven floor surface, or canvas not properly secured.	Ensure all leg clamps and knobs on the tripod easel are securely tightened. Place the easel on a flat, stable surface. Verify the canvas is firmly held by both the top holder and the tray.

7. SPECIFICATIONS

- **Brand:** VISWIN

- **Model Name:** ASMP002_V1
- **Item Model Number:** SH_ASMP002_CA
- **Product Dimensions:** 19.13"D x 23.11"W x 5.2"H
- **Item Weight:** 17 Pounds
- **Material:** Acrylic, Canvas, Metal, Paper, Plastic, Wood
- **Easel Type:** A Frame Easel (Aluminum Tripod), Tabletop Easel (Beech Wood)
- **Assembly Required:** No (for easel box), Minimal (for tripod easel)
- **Paint Safety:** Certified safe and non-toxic (ASTM D-4236 & EN71-3)
- **UPC:** 765381496667
- **Date First Available:** April 14, 2021

8. WARRANTY AND SUPPORT

VISWIN is committed to providing a pleasant shopping experience and meeting all your artistic needs.

- **Lifetime Guarantee:** VISWIN offers a lifetime guarantee on its products.
- **After-Sale Service:** If the product you purchased from VISWIN is defective upon receipt (damage caused by non-external reasons under normal use), please contact VISWIN customer service immediately for assistance.
- **Contact:** For support or inquiries, please refer to the contact information provided with your product packaging or visit the official VISWIN website.

© 2025 VISWIN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question