

Cecotec 05935

Cecotec EnergySilence 4300 Pro Floor Fan User Manual

Model: 05935

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in accidents or damage to the product.

- Ensure the voltage indicated on the rating label matches your mains voltage before connecting the appliance.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- This appliance is intended for household use only. Do not use it outdoors or for commercial purposes.
- Always unplug the fan from the power outlet before cleaning, moving, or when not in use.
- Keep fingers and other objects away from the fan blades and grille during operation.
- Do not operate the fan with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Place the fan on a stable, flat surface to prevent it from tipping over.

PRODUCT OVERVIEW

The Cecotec EnergySilence 4300 Pro is a powerful floor fan designed for efficient air circulation. It features a robust construction with metallic blades and a durable copper motor.

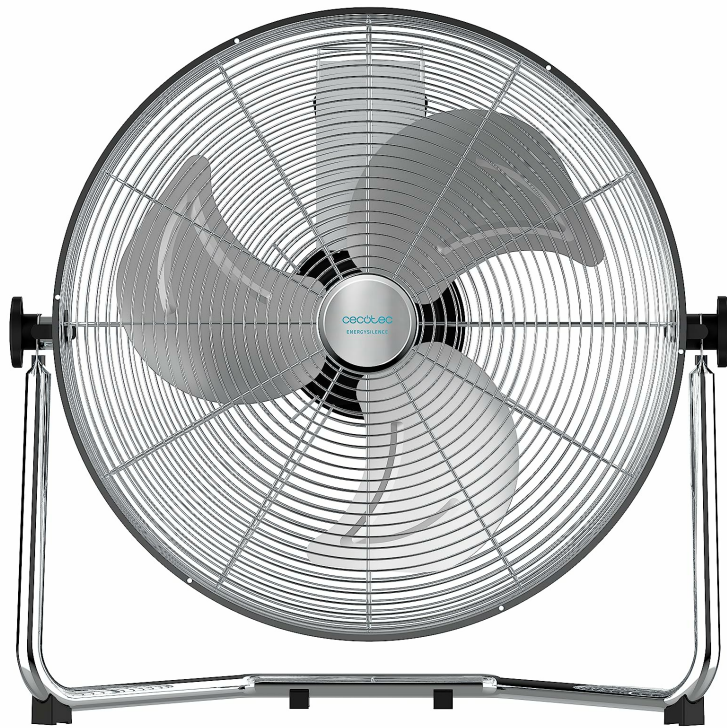 


Figure 1: Cecotec EnergySilence 4300 Pro Floor Fan.



Figure 2: The fan positioned in a living room, demonstrating its compact design.

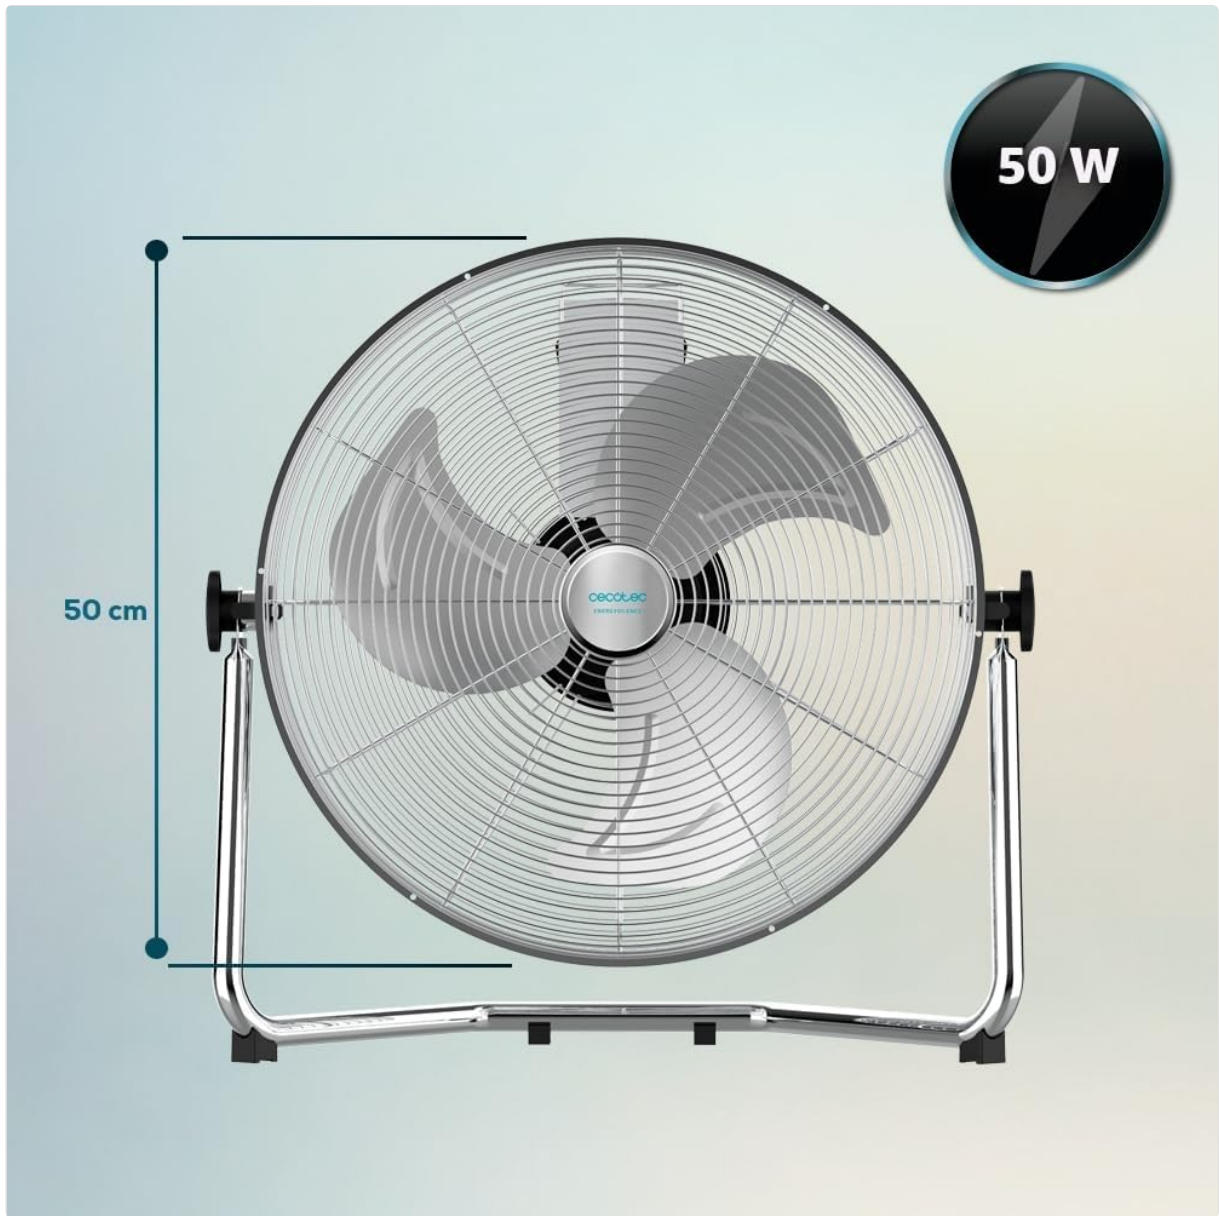 


Figure 3: Illustrative diagram showing the fan's approximate height of 50 cm.



Figure 4: The fan showcasing its chrome finish and sturdy base.

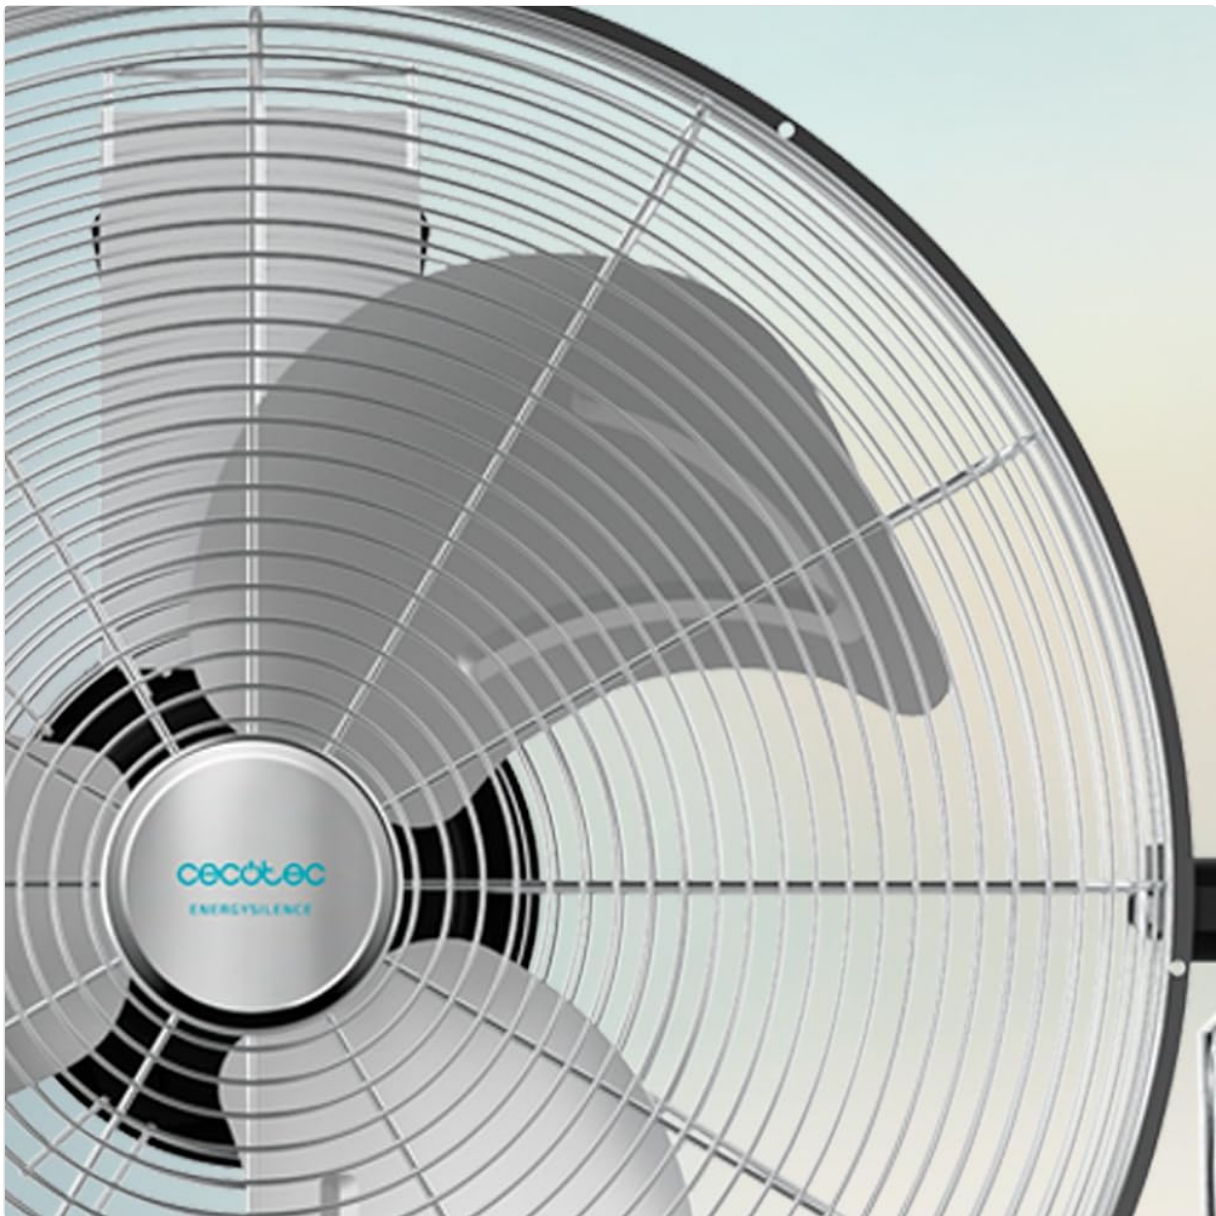 


Figure 5: A close-up view of the fan's metallic blades and protective grille.

SETUP

The Cecotec EnergySilence 4300 Pro floor fan comes pre-assembled for immediate use. Simply follow these steps:

1. Unpack the fan and remove all packaging materials.
2. Place the fan on a firm, level surface where it will not be easily knocked over.
3. Ensure the power cord is not obstructed or tangled.
4. Plug the fan into a suitable electrical outlet.

OPERATING INSTRUCTIONS

The fan features a rotary switch for power and speed control, and an adjustable tilt mechanism.

Power and Speed Control

1. Locate the rotary switch, typically found on the back or side of the fan unit.
2. Turn the switch to position '0' to ensure the fan is off before plugging it in.
3. To turn on the fan and select a speed, rotate the switch to one of the following positions:

- **1 (Eco)**: Low speed for gentle airflow.
- **2 (Normal)**: Medium speed for regular cooling.
- **3 (Turbo)**: High speed for maximum airflow.

4. To turn off the fan, rotate the switch back to position '0'.



Figure 6: Indicator for the 3 speed settings (Eco, Normal, Turbo).

Adjusting Tilt

The fan head's inclination can be adjusted to direct airflow precisely where needed.

1. Gently press or pull the fan cover to adjust the angle of the fan head.
2. Position the fan head to your desired angle. The fan will hold its position once released.



Figure 7: Illustration of the fan's adjustable tilt function.

MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and longevity of your fan.

Cleaning

1. Always unplug the fan from the power outlet before cleaning.
2. Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
3. To clean the fan blades, carefully remove the front safety grille (if detachable, refer to specific product diagrams for your model). Wipe the blades with a damp cloth. Ensure the blades are completely dry

before reattaching the grille.

4. Do not allow water to drip into the motor housing.

Storage

When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

TROUBLESHOOTING

If you encounter any issues with your fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; power outlet not working; rotary switch in '0' position; power outage.	Ensure plug is securely in outlet; test outlet with another appliance; turn rotary switch to '1', '2', or '3'; check household circuit breaker.
Weak airflow.	Fan speed set too low; dust accumulation on blades/grille.	Increase fan speed using the rotary switch; clean fan blades and grilles as per maintenance instructions.
Unusual noise or vibration.	Fan not on a stable surface; loose parts; foreign object in grille.	Place fan on a flat, stable surface; check for any loose components and tighten if possible (ensure fan is unplugged); remove any foreign objects from the grille (ensure fan is unplugged).

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Name	05935
Wattage	110 W
Number of Blades	3
Blade Length	45 cm (18 inches)
Number of Speeds	3 (Eco, Normal, Turbo)
Motor Type	100% Copper Engine
Control Method	Rotary Switch / Button
Special Feature	Adjustable Tilt, ThermoSafe Safety System
Material	Aluminum (Blades), Steel (Body)

Feature	Detail
Dimensions (DxWxH)	30P x 61l x 50H cm
Item Weight	4.6 Kilograms
Power Source	Corded Electric
Voltage	110 Volt
Installation Type	Floor Mount

PRODUCT VIDEOS

Product Summary

Your browser does not support the video tag.

This video provides a brief overview and summary of the product's features and benefits.

WARRANTY AND SUPPORT

This product includes a user manual. For specific warranty details, please refer to the documentation included with your purchase or contact Cecotec customer support directly. For technical assistance or inquiries, please visit the official Cecotec website or contact their customer service department.

You can visit the [Cecotec Store on Amazon](#) for more information and products.