

TC51, TC52, TC56, TC57 Series

Generic Charger Instruction Manual for Zebra TC51, TC52, TC56, TC57 Series Scanners

Model: TC51, TC52, TC56, TC57 Series | Brand: Generic

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Generic charger, designed for Zebra TC51, TC52, TC56, TC57, TC52x, and TC57x Android Scanners. Please read this manual thoroughly before operating the device to ensure proper functionality and longevity.

2. SAFETY INFORMATION

- Use only the provided power supply with the charger.
- Do not expose the charger to water or excessive moisture.
- Avoid dropping or subjecting the charger to severe impacts.
- Keep out of reach of children.
- Do not attempt to disassemble or modify the charger.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Generic Charging Cradle
- Power Supply (AC Adapter)



Image: The Generic charging cradle and power supply, shown with a compatible Zebra scanner for illustration.

4. PRODUCT OVERVIEW

The Generic charger is designed to provide reliable power to your Zebra TC51, TC52, TC56, TC57, TC52x, and TC57x Android Scanners. It features a removable insert to accommodate devices with or without a protective boot/case.



Image: A detailed view of the Generic charger cradle, highlighting its design.

5. SETUP INSTRUCTIONS

5.1 Connecting the Charger

1. Connect the DC power connector from the power supply to the machine's interface on the charging cradle.
2. Plug the power supply into a standard electrical outlet.

5.2 Adjusting for Protective Case (Removable Insert)

The charging cradle features a removable insert (shim) to allow charging of your Zebra scanner with or without a protective boot/case.

- **For devices without a protective case:** Ensure the insert is in place within the charging cradle.
- **For devices with a protective case:** Gently remove the insert from the charging cradle. This provides additional space for the device with its case.

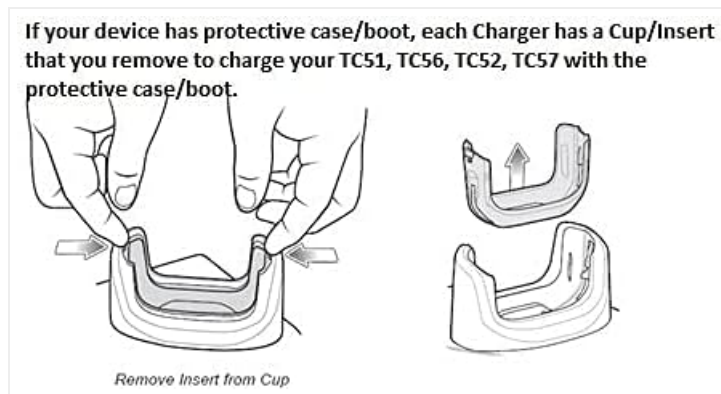


Image: Diagram illustrating the process of removing the insert from the charging cup to accommodate a device with a protective case.



Image: A close-up view of the removable insert, highlighting its design and how it fits into the charging cradle.

5.3 Visual Setup Guide

Your browser does not support the video tag.

Video: A short demonstration of the charger and its fast-charging capabilities for your workday.

Your browser does not support the video tag.

Video: An operational demonstration of the scanner charger cable for Zebra TC51, showing connection and charging status.

Your browser does not support the video tag.

Video: A demonstration of the charger cradle for Zebra TC5X series, including how to insert and remove the device for charging.

Your browser does not support the video tag.

Video: A visual guide on using the USB charger cable for Zebra TC51, TC510K, TC52, TC56, TC57 models.

6. OPERATING INSTRUCTIONS

6.1 Charging Your Device

1. Ensure the charger is properly connected to a power source.
2. Carefully place your Zebra scanner into the charging cradle, ensuring the charging contacts align.
3. A charging indicator light (usually red or orange) on the scanner or cradle will illuminate to confirm charging has begun.
4. The indicator light will change (e.g., to green) or turn off when charging is complete.

7. MAINTENANCE

- Clean the charging contacts on both the cradle and your device regularly with a dry, soft cloth to ensure optimal connection.
- Store the charger in a cool, dry place when not in use.
- Avoid wrapping the cable too tightly to prevent damage.

8. TROUBLESHOOTING

8.1 Device Not Charging

- **Check Power Connection:** Ensure the power supply is securely plugged into both the wall outlet and the charging cradle.
- **Verify Device Placement:** Make sure the Zebra scanner is correctly seated in the cradle and the charging contacts are aligned.
- **Inspect Contacts:** Clean the charging contacts on both the device and the cradle for any debris or corrosion.
- **Removable Insert:** If using a protective case, ensure the removable insert has been taken out of the cradle. If not using a case, ensure the insert is properly seated.
- **Try Another Outlet:** Test the charger with a different electrical outlet to rule out power source issues.

9. SPECIFICATIONS

Feature	Specification
Brand	Generic
Compatible Devices	Zebra TC51, TC52, TC56, TC57, TC52x, TC57x Android Scanners
Connector Type	2-Pin
Power Source	Corded Electric

Wattage	15 Watts
Output Voltage	5 Volts
Output Current	3 Amps
Special Feature	Removable Insert for Protective Case
Connectivity Technology	USB
Mounting Type	Tabletop Mount
Color	Black

10. WARRANTY INFORMATION

Please refer to the product packaging or the retailer's website for specific warranty details. Keep your proof of purchase for any warranty claims.

11. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries, please contact the retailer or manufacturer directly. Contact information can typically be found on the product packaging or the seller's online store page.