

[manuals.plus](#) /

› [Studebaker](#) /

› [Studebaker SB3705BW Super Sport Portable CD Player User Manual](#)

Studebaker SB3705 BW

Studebaker SB3705BW Super Sport Portable CD Player

User Instruction Manual

INTRODUCTION

Thank you for purchasing the Studebaker SB3705BW Super Sport Portable CD Player. This device is designed to provide a versatile audio experience, allowing you to enjoy your CD collection both personally with earbuds and wirelessly through your car's FM radio. It features a joggable design, anti-skip protection, and an FM stereo PLL radio. Please read this manual thoroughly to understand the proper operation and care of your new CD player.

IMPORTANT SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to rain or moisture.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Clean only with a dry cloth.
- Do not block any ventilation openings.
- Dispose of batteries properly, following local regulations.
- Do not disassemble the unit. Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- Studebaker SB3705BW Portable CD Player
- Color Coordinated Stereo Earbuds
- Magnetic Holder for Car Vent
- 2 x "AA" Batteries (pre-installed or included separately)
- USB Power Cable (for optional USB power source)
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Studebaker SB3705BW CD Player.



Figure 1: Top view of the Studebaker SB3705BW Portable CD Player, showing the LCD display, control buttons (CD, Mode, BBS, 10+, FM, Prog/Mem, M-, M+), and power switch.



Figure 2: The Studebaker SB3705BW CD Player with its lid open, revealing the CD compartment. Earbuds are connected to the side, and power input ports are visible at the bottom.

Controls and Functions:

- **LCD Display:** Shows track number, time, FM frequency, and other status indicators.
- **CD Button:** Switches to CD playback mode.
- **MODE Button:** Selects playback modes (e.g., repeat, random).
- **BBS Button:** Bass Boost System.
- **10+ Button:** Skips forward by 10 tracks (CD mode).
- **FM Button:** Switches to FM radio mode.
- **PROG/MEM Button:** Programs CD tracks or saves FM radio stations.
- **M- / M+ Buttons:** Adjusts FM transmission frequency or navigates saved stations.
- **OFF/POWER ON Switch:** Turns the unit on or off.
- **DC IN 4.5V Port:** For external power adapter (not included).
- **5V USB IN Port:** For USB power source.
- **Earphone Jack:** For connecting the included stereo earbuds.
- **Hold Switch:** Locks all buttons to prevent accidental operation.

SETUP

1. Powering the Unit

The SB3705BW can be powered by batteries or via USB.

- **Battery Installation:** Open the battery compartment on the bottom of the unit. Insert 2 "AA" size batteries, ensuring correct polarity (+/-). Close the compartment securely.
- **USB Power:** Connect the included USB power cable to the 5V USB IN port on the unit and to a standard USB power source (e.g., car USB port, USB wall adapter, computer USB port).

2. Connecting Earbuds

For personal listening, plug the 3.5mm jack of the color-coordinated stereo earbuds into the earphone jack on the side of the CD player.

3. Attaching to Car Vent (Optional)

The included magnetic holder allows for convenient placement in your vehicle.



Figure 3: The Studebaker SB3705BW CD Player magnetically attached to a car's air vent, demonstrating its in-car use.

1. Attach the magnetic holder securely to a suitable car air vent.
2. Ensure the metal plate (if not already affixed) is attached to the back of your CD player.
3. Carefully place the CD player onto the magnetic holder.

OPERATING INSTRUCTIONS

1. Playing a CD

1. Slide the OFF/POWER ON switch to the "ON" position.
2. Press the "OPEN" button on the side of the unit to open the CD compartment lid.
3. Place a CD onto the center spindle with the label side facing up. Gently press the CD until it clicks into place.
4. Close the CD compartment lid firmly until it latches.
5. The player will automatically begin reading the CD and playback will start. The LCD display will show the track number and elapsed time.
6. Use the **PLAY/PAUSE** button to pause or resume playback.
7. Use the **SKIP/SEARCH** buttons (◀◀ / ▶▶) to skip tracks or fast forward/rewind within a track.
8. Press the **STOP** button to stop playback.

2. FM Transmission to Car Radio

This feature allows you to listen to your CD through your car's FM radio.

1. Ensure a CD is playing in the SB3705BW.
2. The unit's transmit frequency is preset at 88.1 MHz.
3. Tune your car radio to 88.1 MHz. You should hear the CD playback through your car speakers.
4. If 88.1 MHz is not clear, you can change the transmission frequency on the CD player. Press the **M+** or **M-** buttons to adjust the frequency between 87.5 MHz and 108 MHz.
5. Once you have selected a new frequency on the CD player, tune your car radio to the exact same frequency for clear audio. The transmit frequency will be shown on the LCD display.

3. Using the FM Stereo PLL Radio

The unit also functions as a standalone FM radio.

1. Slide the OFF/POWER ON switch to the "ON" position.
2. Press the **FM** button to switch to FM radio mode. The current frequency will appear on the LCD display.
3. Use the **M+** or **M-** buttons to manually tune to your desired FM station.
4. To auto-scan and save stations: Press and hold the **PROG/MEM** button. The unit will scan and automatically save available stations.
5. To recall saved stations: Briefly press the **PROG/MEM** button to cycle through saved stations.

4. Anti-Skip Protection

The SB3705BW features 60-second anti-skip protection to ensure uninterrupted playback during movement. This feature buffers audio data, allowing the player to continue playing even if minor shocks or vibrations occur.

5. Exercise Lock Switch

Located on the side of the unit, the Exercise Lock Switch (HOLD) prevents accidental button presses during active use. Slide the switch to the "HOLD" position to disable all buttons. Slide it back to the "OFF" position to re-enable controls.

MAINTENANCE

Proper care will ensure the longevity of your CD player.

- **Cleaning the Unit:** Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Lens:** If the CD player experiences reading errors, the laser lens may be dirty. Use a commercially available CD lens cleaner disc to clean the lens. Do not touch the lens directly.
- **Battery Care:** If the unit will not be used for an extended period, remove the batteries to prevent leakage and corrosion.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Studebaker SB3705BW, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not power on.	Batteries are dead or incorrectly inserted. USB cable not connected properly. Power switch is OFF.	Replace batteries or ensure correct polarity. Check USB cable connection and power source. Slide the OFF/POWER ON switch to ON.
CD does not play / "OPEN" displayed.	CD lid is not closed properly. CD is dirty or scratched. CD is inserted upside down. Laser lens is dirty.	Ensure the CD lid is latched securely. Clean the CD with a soft, lint-free cloth. Try another CD. Insert the CD with the label side facing up. Use a CD lens cleaner disc.
No sound from earbuds.	Earbuds not fully plugged in. Earbuds are faulty. Volume is too low.	Ensure earbuds are fully inserted into the jack. Try another pair of earbuds. Increase the volume.
Poor FM transmission to car radio / Static.	Car radio and CD player frequencies do not match. Interference from other FM stations. CD player is too far from car radio antenna.	Adjust the CD player's FM frequency using M+/M- and tune car radio to match. Try a different, less congested FM frequency. Place the CD player closer to your car's radio antenna.
Buttons are unresponsive.	Hold switch is engaged.	Slide the Hold switch to the OFF position.

SPECIFICATIONS




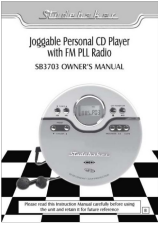
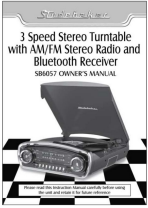
Feature	Detail
Model Number	SB3705 BW
Power Source	2 x "AA" Batteries (included) or 5V USB Power
FM Transmission Range	87.5 - 108 MHz (Preset: 88.1 MHz)
Anti-Skip Protection	60 Seconds
Connectivity	3.5mm Earphone Jack, USB
Dimensions (approx.)	8.31 x 6.14 x 1.77 inches (Package Dimensions)
Weight (approx.)	14.9 ounces
Manufacturer	Spectra Merchandising International, Inc.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Studebaker customer service. Details regarding warranty coverage and service procedures are typically provided with your purchase documentation or can be found on the manufacturer's official website.

Please retain your proof of purchase for warranty claims.

Related Documents - SB3705 BW

	<p>Studebaker SB2165 Avanti Portable Stereo Boombox User Manual Bluetooth, CD, FM Radio</p> <p>Comprehensive user manual for the Studebaker SB2165 Avanti Portable Stereo Boombox. Learn how to operate Bluetooth, CD, FM Radio, USB playback, and more. Includes safety instructions, operating procedures, troubleshooting, specifications, and warranty information.</p>
	<p>Studebaker SB2135BT Portable Stereo CD Player with Bluetooth, AM/FM Radio, and Cassette Player/Recorder Owner's Manual</p> <p>This manual provides instructions for operating the Studebaker SB2135BT, a portable stereo CD player with Bluetooth, AM/FM radio, and cassette player/recorder. It covers safety precautions, operation of various functions including CD, radio, cassette, and Bluetooth, troubleshooting, and warranty information.</p>
	<p>Studebaker SB2103 Stereo CD Player Dual Alarm Clock Radio Owner's Manual</p> <p>This owner's manual provides comprehensive instructions for the Studebaker SB2103 Stereo CD Player Dual Alarm Clock Radio, covering safety precautions, functions, operation of the CD player, radio, alarm, sleep modes, care, maintenance, and troubleshooting.</p>
	<p>Studebaker SB3703 Joggable Personal CD Player with FM PLL Radio User Manual</p> <p>Comprehensive user manual for the Studebaker SB3703 Joggable Personal CD Player with FM PLL Radio, covering operation, features, safety, troubleshooting, and warranty.</p>
	<p>Studebaker SB6057 3 Speed Stereo Turntable with AM/FM Radio and Bluetooth - Owner's Manual</p> <p>Comprehensive owner's manual for the Studebaker SB6057, a 3-speed stereo turntable featuring AM/FM radio and Bluetooth connectivity. Learn about setup, operation, care, and troubleshooting.</p>



User manual for the Studebaker SB3705 portable CD, MP3 CD, and FM radio player. Includes instructions on operation, power sources, controls, troubleshooting, specifications, and warranty information.