

[Manuals.plus](#) /

› [HOOBRO](#) /

› HOOBRO Toy Box WT75CW01G1 Instruction Manual

HOOBRO WT75CW01G1

HOOBRO Toy Box WT75CW01G1 Instruction Manual

Model: WT75CW01G1

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your HOOBRO Toy Box (Model WT75CW01G1). This versatile storage chest features a retro wooden look, a safety hinge for secure lid operation, and can function as an entryway bench or toy organizer. Please read this manual thoroughly before use to ensure proper assembly and safe operation.

SAFETY INFORMATION

- Read all instructions before assembly and use.
- Keep small parts away from children during assembly.
- Do not stand on the product.
- Ensure the product is placed on a flat, stable surface to prevent tipping.
- The maximum weight recommendation for sitting on the bench is 100 kg (220 lb). Do not exceed this limit.
- The safety hinge is designed to prevent sudden lid closure; however, always supervise children during use to prevent accidents.
- Avoid placing heavy objects on the lid when closed, as this may damage the hinge mechanism or the lid itself.

PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed in the included assembly guide are present and undamaged. If any parts are missing or damaged, please contact HOOBRO customer service for assistance.

SETUP AND ASSEMBLY

Assembly of the HOOBRO Toy Box is designed to be straightforward. Follow the step-by-step instructions provided in the included assembly guide. It is recommended to use an electric screwdriver for faster and more secure installation of the hinge components. Ensure all screws are tightened securely for optimal stability and safety.



Image: Detailed dimensions of the HOOBRO Toy Box, illustrating its length, width, and height for planning placement.

OPERATING INSTRUCTIONS

To open the toy box, gently lift the lid. The integrated safety hinge mechanism will hold the lid open at various angles, preventing it from slamming shut unexpectedly. To close the lid, gently push it down until it is fully seated. The chest can be utilized for storing various items such as blankets, toys, or books. The two decorative rings located on the sides are provided for convenient repositioning of the chest.



Image: The HOOBRO Toy Box shown open and filled with plush toys, demonstrating its storage capacity.



Image: The HOOBRO Toy Box with its lid fully open, revealing the empty interior and the safety hinge mechanism.



Image: The HOOBRO Toy Box positioned in an entryway, serving as a functional bench alongside a coat rack and decorative plant.

MAINTENANCE

To maintain the appearance and longevity of your toy box, wipe the surface with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the finish. Ensure the chest is completely dry after cleaning to prevent water damage.

TROUBLESHOOTING

- **Lid not closing smoothly:** Check the hinge mechanism for any obstructions or loose screws. Ensure the lid is properly aligned with the chest frame.
- **Instability:** Verify that all assembly screws are securely tightened. Ensure the chest is placed on a level surface.
- **Scratches or minor damage:** For minor cosmetic issues, touch-up paint or furniture markers matching the product's color may be used.

For persistent issues not resolved by these steps, please contact customer service.

SPECIFICATIONS

Brand	HOOBRO
Model Number	WT75CW01G1
Color	White
Material	Engineered Wood
Item Dimensions (L x W x H)	29.9"L x 15.7"W x 18.9"H
Item Weight	24.2 Pounds
Maximum Weight Recommendation	100 Kilograms (220 lb)
Opening Mechanism	Hinge

WARRANTY AND SUPPORT

For specific warranty information, details on returns, or to contact customer support, please refer to the documentation included with your original purchase. You may also visit the official HOOBRO website for further assistance and contact options.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B092LYWQB8>

More documents and user manuals: <https://manuals.plus/>