

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rowenta](#) /

› [Rowenta TN5221 ADVANCER Style Beard and Hair Trimmer User Manual](#)

Rowenta TN5221

Rowenta TN5221 ADVANCER Style Beard and Hair Trimmer

USER MANUAL

[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Operating](#) [Setup](#) [Specifications](#) [Safety Warnings](#) [Warranty & Support](#)

1. Introduction

The Rowenta Advancer Style beard and hair trimmer is engineered for precise grooming, offering both perfect cutting and durable performance. This versatile 3-in-1 trimmer is designed for finishing, touching up, and shaving, allowing for a perfectly personalized style. It features a wide range of high-precision settings and includes dedicated combs for both facial hair and general hair trimming, ensuring accurate and customized results.

Key features include:

- **Forever Sharp Titanium Blades:** Designed for long-lasting sharpness without the need for replacement.
- **45 Precision Settings:** For a wide variety of beard and hair lengths.
- **Long-lasting Lithium-ion Battery:** Provides up to 120 minutes of cordless runtime.
- **Ultra-Powerful Motor:** Ensures an efficient cut in a single pass.



Figure 1: Rowenta TN5221 ADVANCER Style Trimmer. This image shows the main view of the trimmer, highlighting its ergonomic design and power button.

2. Setup

2.1 Unpacking and Initial Inspection

Carefully remove all components from the packaging. Inspect the trimmer and its accessories for any signs of damage. If any damage is found, do not use the product and contact customer support.





Figure 2: Trimmer and included accessories. This image displays the Rowenta TN5221 trimmer along with its various combs and charging cable.

2.2 Charging the Trimmer

1. Ensure the trimmer is switched off.

2. Connect the charging cable to the trimmer and plug the adapter into a suitable power outlet.
3. Allow the trimmer to charge fully before first use. A full charge takes approximately 90 minutes. A quick 4-minute charge provides enough power for one complete trimming session.
4. The battery indicator will show charging status.

2.3 Attaching Combs and Blades

The trimmer comes with 7 combs and 3 dedicated beard accessories. To attach a comb, align it with the trimmer head and gently push until it clicks into place. To remove, pull the comb away from the trimmer head. For precise shaving, the smooth blade can be used without a comb.

3. Operating Instructions

3.1 Basic Operation

1. **Charge the trimmer:** Ensure the device has sufficient battery life.
2. **Select the desired comb or smooth blade:** Choose the appropriate attachment based on your desired hair or beard length. The 5 combs (1-3-5-6mm) are suitable for short beards.
3. **Turn on the trimmer:** Press the power button located on the device.
4. **Trim beard or hair as needed:** Guide the trimmer against the direction of hair growth for an even cut. For beard trimming, the precision trimmer ensures 0mm details on cheeks and neck.
5. **Turn off and clean the trimmer:** After use, switch off the device and proceed with cleaning.

3.2 Trimming Beard

For beard trimming, select one of the dedicated beard combs. Start with a longer setting and gradually reduce the length until the desired style is achieved. Use the smooth blade for precise lines and detailing around the edges of your beard.



Figure 3: Trimming a beard. This image shows a man using the Rowenta TN5221 trimmer to shape his beard.

3.3 Trimming Hair

For hair trimming, attach the appropriate hair comb. Move the trimmer slowly and steadily against the direction of hair growth. Ensure consistent pressure for an even cut. The ultra-powerful motor ensures a perfect cut in a single pass.



Figure 4: Trimming hair. This image depicts a man using the Rowenta TN5221 trimmer for a haircut.

4. Maintenance

4.1 Cleaning the Trimmer

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the trimmer and disconnect it from the power source if charging.
2. Remove any attached comb.
3. Use the provided cleaning brush to remove loose hairs from the blades and inside the trimmer head.
4. The blades can be rinsed under running water. Ensure the trimmer body does not get wet unless specified as waterproof (refer to specifications).
5. Allow all parts to air dry completely before reassembling or storing.

4.2 Blade Care

The Rowenta TN5221 features Forever Sharp titanium blades that do not require replacement. To maintain their performance, ensure they are kept clean and free of hair buildup. Oiling the blades periodically with a drop of light machine oil (not included) can help maintain smooth operation, though titanium blades are highly durable.

4.3 Storage

Store the trimmer and its accessories in a dry, cool place, away from direct sunlight and out of reach of children. Use the provided semi-rigid container for organized storage and protection.

5. Troubleshooting

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Poor cutting performance.	Blades are clogged with hair.	Clean the blades and trimmer head thoroughly.
Trimmer makes unusual noise.	Blades require lubrication or are misaligned.	Clean and lightly oil the blades. Ensure blades are properly seated.
Battery does not hold charge.	Battery lifespan reached or charging issue.	Ensure charging cable and adapter are functioning. If problem persists, contact customer support.

6. Specifications

Model Name: TN5221 ADVANCER - STYLE

Brand: Rowenta

Power Source: Battery Powered (Lithium-ion)

Blade Material: Titanium

Special Features: Extended runtime, fast charging, ultra-powerful motor

Recommended Uses: Beard, Hair

Battery Runtime: Up to 120 minutes

Full Charge Time: Approximately 90 minutes

Quick Charge: 4 minutes for one session

Target Audience: Unisex-Adult

Color: Black/Red



Figure 5: Product features overview. This image shows the product packaging highlighting key features and specifications in multiple languages.

7. Safety Warnings

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- **Do not use near water:** This appliance is not waterproof unless explicitly stated for specific parts. Avoid using it in baths, showers, or near sinks.
- **Avoid use on infants:** The trimmer is not designed for use on infants.
- **Exercise caution around sharp blades:** The blades are sharp. Handle with care to prevent cuts, skin irritation, or eye injuries.
- **Keep out of reach of children:** This appliance is not a toy.
- **Use only with provided accessories:** Using non-approved attachments may cause damage or injury.
- **Do not disassemble:** Do not attempt to repair or disassemble the trimmer yourself. Contact qualified service personnel.
- **Disconnect from power:** Always unplug the trimmer before cleaning or performing maintenance.

8. Warranty & Support

For detailed warranty information, please refer to the warranty card included with your product or visit the official Rowenta website. If you encounter any issues or require technical assistance, please contact Rowenta customer support. Contact details can typically be found on the Rowenta website or in the product packaging.

