

TuKIIE Rose Garden Tea House

TuKIIE Rose Garden Tea House DIY Miniature Dollhouse Kit Instruction Manual

Model: Rose Garden Tea House (B092M9XHCW)

Brand: TuKIIE

1. INTRODUCTION

This instruction manual provides detailed guidance for assembling your TuKIIE Rose Garden Tea House DIY Miniature Dollhouse Kit. This 1:24 scale wooden model kit is designed to enhance creativity and patience through a rewarding construction process. Upon completion, the model features intricate details, a dust cover, and a music movement.

Please read all instructions carefully before beginning assembly. Patience and attention to detail are key to a successful build.

2. SAFETY INFORMATION

- Small Parts Warning:** This kit contains small parts which may pose a choking hazard. Keep all components out of reach of small children.
- Adult Supervision:** Assembly is recommended for individuals aged 14 years and older. Younger individuals should assemble the kit under direct adult supervision.
- Sharp Tools:** Assembly requires the use of sharp tools such as scissors and a utility knife. Exercise extreme caution to prevent injury.
- Adhesive Safety:** Use silicone liquid glue in a well-ventilated area. Avoid contact with skin and eyes. In case of contact, rinse thoroughly with water.

3. PACKAGE CONTENTS

Your TuKIIE Rose Garden Tea House DIY Miniature Dollhouse Kit includes the following items:

- Pre-cut wooden pieces for structure and furniture

- Various paper cutouts and fabric pieces for decoration
- LED lighting components and wiring
- Music movement mechanism
- Dust cover components
- English colorful instruction manual
- Assorted miniature accessories (e.g., flowers, tea sets, food items)



Warm Tips

* Package Includes:

Package Box
Instruction
Dust Cover
Music Movement
DIY Miniature Dollhouse Kit

* Please kindly prepare **paper scissors, knife, tweezers, screwdrivers, glue** and **2 AAA batteries** for assembling the dollhouse miniature.

Figure 3.1: Overview of included components and finished dimensions (11.41 x 7.87 x 7.01 inches).

4. TOOLS REQUIRED (NOT INCLUDED)

To successfully assemble your dollhouse kit, you will need to prepare the following tools:

- Paper scissors
- Utility knife (e.g., X-Acto knife)
- Tweezers (fine-tip recommended for small parts)
- Screwdrivers (small Phillips head)
- Ruler

- Silicone liquid glue (quick-drying recommended)
- 2 x AAA batteries (for LED lights and music movement)

5. SETUP AND ASSEMBLY INSTRUCTIONS

The assembly process typically takes 2-3 days to complete. Follow the included English colorful instruction manual step-by-step. The following general guidelines will assist you:

5.1 Preparation

- **Organize Components:** Before starting, carefully unpack all components. Identify and sort the wooden pieces, paper cutouts, and accessories according to the instruction manual's numbering or labeling system.
- **Clear Workspace:** Ensure you have a clean, well-lit, and spacious work area.
- **Tool Accessibility:** Keep all required tools readily accessible.

5.2 General Assembly Steps

1. **Cut and Prepare:** Carefully cut out paper elements and detach wooden pieces from their sheets. Pay close attention to the outlines to ensure clean edges.
2. **Glue Application:** Apply glue sparingly. Too much glue can warp paper or wood and extend drying time. Use tweezers for precise placement of small parts.
3. **Structural Assembly:** Begin with the main structure of the dollhouse as indicated in the manual. Ensure all joints are secure and aligned before the glue dries.
4. **Furniture and Accessories:** Assemble individual furniture pieces and decorative elements. These often involve intricate details.
5. **Electrical Components:** Install the LED lights according to the wiring diagram. Ensure all connections are secure. Insert 2 AAA batteries into the battery box.
6. **Music Movement:** Integrate the music movement mechanism as instructed.
7. **Dust Cover:** Assemble the transparent dust cover to protect your finished model.



Figure 5.1: The fully assembled TuKIIe Rose Garden Tea House kit, showcasing the intricate details and overall design.



Figure 5.2: A detailed front view of the Rose Garden Tea House, featuring the blue facade, rose garlands, and outdoor patio.



Figure 5.3: Interior detail of the tea house, displaying a miniature cake and pastry counter.



Figure 5.4: Further interior details, including miniature tea boxes, a small cabinet, and a vintage-style cash register.



Figure 5.5: The charming outdoor seating area, complete with a miniature table, chairs, and a delicate tea set.

6. OPERATING INSTRUCTIONS

6.1 LED Lighting

After successfully installing the LED lighting components and inserting 2 AAA batteries into the battery box, locate the power switch. Flip the switch to the 'ON' position to illuminate the dollhouse. Flip to 'OFF' to conserve battery life.



Figure 6.1: The Rose Garden Tea House illuminated by its LED lights, showcasing its cozy ambiance.

6.2 Music Movement

The kit includes a music movement mechanism. Once assembled and integrated, typically a winding key or switch will activate a melody. Refer to the specific instructions in your manual for the exact operation of the music movement.

7. MAINTENANCE

- **Dusting:** Regularly dust the dollhouse using a soft brush or compressed air to maintain its appearance. The included dust cover helps minimize dust accumulation.
- **Battery Replacement:** If the LED lights dim or the music movement stops, replace the 2 AAA batteries. Ensure correct polarity when inserting new batteries.
- **Storage:** Store the dollhouse in a cool, dry place away from direct sunlight to prevent material degradation.
- **Cleaning:** For stubborn dirt, gently wipe surfaces with a slightly damp cloth. Avoid harsh chemicals or excessive moisture.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
LED lights do not turn on.	Batteries are dead or incorrectly inserted. Wiring connections are loose.	Check and replace AAA batteries, ensuring correct polarity. Verify all wiring connections are secure as per the manual.
Music movement does not play.	Batteries are dead or incorrectly inserted. Mechanism is not properly wound or engaged.	Check and replace AAA batteries. Ensure the music movement is correctly assembled and activated as per the manual.
Parts do not fit together.	Incorrect part selection. Excess glue. Misalignment.	Double-check part numbers against the instruction manual. Ensure previous steps are fully dry and aligned. Gently sand edges if necessary.
Small parts are difficult to handle.	Lack of appropriate tools.	Use fine-tip tweezers for precise handling and placement of small components.

9. SPECIFICATIONS

Model: Rose Garden Tea House

Brand: TuKIIIE

Scale: 1:24

Finished Dimensions (L x W x H): 11.41 x 7.87 x 7.01 inches (29 x 20 x 17.8 cm)

Item Weight: 2.64 pounds (1.2 kg)

Recommended Age: 14 years and up

Batteries Required: 2 x AAA (not included)

Materials: Wood, paper, fabric, plastic, metal

10. WARRANTY AND SUPPORT

For any questions regarding assembly, missing parts, or product support, please contact TuKIIIE customer service. Refer to the contact information provided on the product packaging or the official TuKIIIE website for assistance.

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for warranty claims.