

[manuals.plus](#) /

› [Gigaset](#) /
› [Gigaset DL780 Plus Analog/DECT Telephone User Manual](#)

Gigaset DL780 Plus

Gigaset DL780 Plus Analog/DECT Telephone User Manual

1. INTRODUCTION

This manual provides comprehensive instructions for the Gigaset DL780 Plus Analog/DECT telephone. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and user experience. The Gigaset DL780 Plus combines a corded desk phone with an additional cordless handset, offering flexibility and convenience for your communication needs.

Zwei perfekt aufeinander abgestimmte Telefone



Gemeinsames Telefonbuch
für bis zu 99 Einträge



Synchronisierung von
Anrufschutz und Anrufliste



Image 1.1: The Gigaset DL780 Plus telephone set, featuring a corded base unit and a cordless handset. This image highlights the shared phonebook for up to 99 entries and the synchronization of call protection and call lists between both devices.

2. PACKAGE CONTENTS

Please check the package for the following components:

- 1 x Gigaset DL780 Desk Telephone (corded base unit)
- 1 x Gigaset DL780H Handset (cordless)
- 1 x Charging Cradle for DL780H Handset
- 2 x AAA NiMH Rechargeable Batteries (for handset)
- 1 x Telephone Connection Cable
- 1 x TAE Adapter (if required for your region)
- 2 x Power Adapters (one for base unit, one for charging cradle)

- 1 x User Manual

3. SETUP

3.1 Connecting the Base Station

The Gigaset DL780 base station requires a power connection and a telephone line connection. No assembly is required for the main unit.

1. Connect one end of the telephone connection cable to the designated port on the back of the Gigaset DL780 base station.
2. Connect the other end of the telephone connection cable to your wall telephone socket. Use the TAE adapter if necessary.
3. Connect one power adapter to the power socket on the back of the base station.
4. Plug the power adapter into a wall outlet.



Image 3.1: Rear view of the Gigaset DL780 base unit, illustrating the telephone line and power input ports for easy connection.

3.2 Inserting Batteries into the Handset

The cordless handset requires rechargeable batteries for operation.

1. Open the battery compartment cover on the back of the Gigaset DL780H handset.
2. Insert the two AAA NiMH rechargeable batteries, observing the correct polarity (+/-).
3. Close the battery compartment cover.
4. Place the handset in its charging cradle. Connect the second power adapter to the charging cradle and plug it into a wall outlet. Allow the handset to charge for several hours before first use.

3.3 Initial Configuration

The handset is pre-registered to the base station at the factory. Upon successful connection and charging, the phone should be ready for use. You may need to set the date and time, and language preferences via the handset menu.

4. OPERATION

4.1 Making and Receiving Calls

Both the corded base unit and the cordless handset can be used to make and receive calls. The large keys and clear display facilitate easy dialing.

- **To make a call:** Lift the receiver (corded unit) or press the green call button (handset), then dial the number.

- **To receive a call:** Lift the receiver (corded unit) or press the green call button (handset).

4.2 Using the Phonebook

The Gigaset DL780 Plus features a shared phonebook that can store up to 99 entries. Entries are accessible from both the corded base unit and the cordless handset.

- **Adding an entry:** Navigate to the phonebook menu, select 'Add New Entry', and input the name and number.
- **Accessing entries:** Use the navigation keys to scroll through the phonebook or search by name.

4.3 Caller ID and Call Protection

The phone supports Caller ID display, allowing you to see who is calling before you answer. It also includes call protection features, which can be configured to block unwanted calls. Call lists and protection settings are synchronized between the base unit and the handset.

4.4 Amplifier Function and Hearing Aid Compatibility

For users requiring additional volume, the Gigaset DL780 Plus includes an amplifier function for extra loud listening. The device is also compatible with hearing aids, ensuring clear communication for all users.

4.5 ECO DECT Technology

The Gigaset DL780 Plus incorporates ECO DECT technology, which reduces power consumption and transmission power. This contributes to a more environmentally friendly operation and lower energy costs.

ECO DECT Technologie – für einen reduzierten Energieverbrauch



Image 4.1: Illustration of ECO DECT technology, emphasizing its role in reducing energy consumption for the Gigaset DL780 Plus.

5. MAINTENANCE

To ensure the longevity and proper functioning of your Gigaset DL780 Plus telephone, follow these maintenance guidelines:

- **Cleaning:** Wipe the phone surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Avoid Liquids:** Keep the phone away from water and other liquids. If the phone comes into contact with liquid, disconnect it from power immediately.
- **Battery Care:** Use only the specified rechargeable batteries for the handset. Replace batteries when their performance significantly degrades.
- **Environment:** Operate and store the phone in a dry environment, away from extreme temperatures and direct sunlight.

6. TROUBLESHOOTING

If you encounter issues with your Gigaset DL780 Plus, try the following solutions:

- **No Dial Tone:** Ensure all cables (telephone line and power) are securely connected to the base station and wall outlets. Check if the telephone line is active.
- **Handset Not Working:** Verify that the handset batteries are correctly inserted and fully charged. Place the handset in the charging cradle for several hours. Ensure the handset is registered to the base station.
- **Poor Call Quality:** Check for interference from other electronic devices. Ensure the handset is within range of the base station.
- **Display Not Working:** For the corded unit, check the power connection. For the handset, ensure batteries are charged.
- **Cannot Make/Receive Calls:** Confirm that the telephone line is active and not experiencing service interruptions.

If the problem persists after trying these steps, please refer to the support section or contact customer service.

7. SPECIFICATIONS

Feature	Detail
Model Number	S30350-H220-B101
Product Dimensions (L x W x H)	19.5 x 20 x 7.8 cm
Item Weight	122 Grams
Form Factor	Combi-set (Corded and Cordless)
Batteries Required	Yes (2 x AAA NiMH for handset, included)
Power Source	Corded Electric
Dialer Type	Single Keypad
Answering System Type	Digital (if connected to a network with voicemail)
Material	Acrylonitrile Butadiene Styrene (ABS)
Guaranteed Software Updates Until	December 31, 2028
First Available Date	April 15, 2021

8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the documentation included with your product or visit the official Gigaset website. Keep your proof of purchase for warranty claims.

