

[Manuals.plus](#) /

› [Samsung](#) /

› Samsung Galaxy Tab S7 (SM-T878UZKAATT) User Manual

Samsung SM-T878UZKAATT

Samsung Galaxy Tab S7 (SM-T878UZKAATT) User Manual

Model: SM-T878UZKAATT

1. INTRODUCTION

This manual provides comprehensive instructions for the Samsung Galaxy Tab S7 (Model SM-T878UZKAATT). It covers essential information regarding device setup, operation, features, maintenance, and troubleshooting to ensure optimal use of your tablet.

The Samsung Galaxy Tab S7 is a 5G-enabled tablet designed for enhanced productivity and entertainment. This renewed product has been professionally inspected and tested to function and appear like new, ensuring a reliable user experience.

2. INITIAL SETUP

2.1. Unboxing and First Power On

Carefully remove the tablet and included accessories from the packaging. Press and hold the power button located on the side of the device to turn it on. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account.



Image: Front view of the Samsung Galaxy Tab S7 tablet.

2.2. S Pen Setup

The S Pen is included with your Galaxy Tab S7. To pair and charge the S Pen, attach it magnetically to the designated strip on the back of the tablet, near the camera module. The S Pen will automatically connect and begin charging.

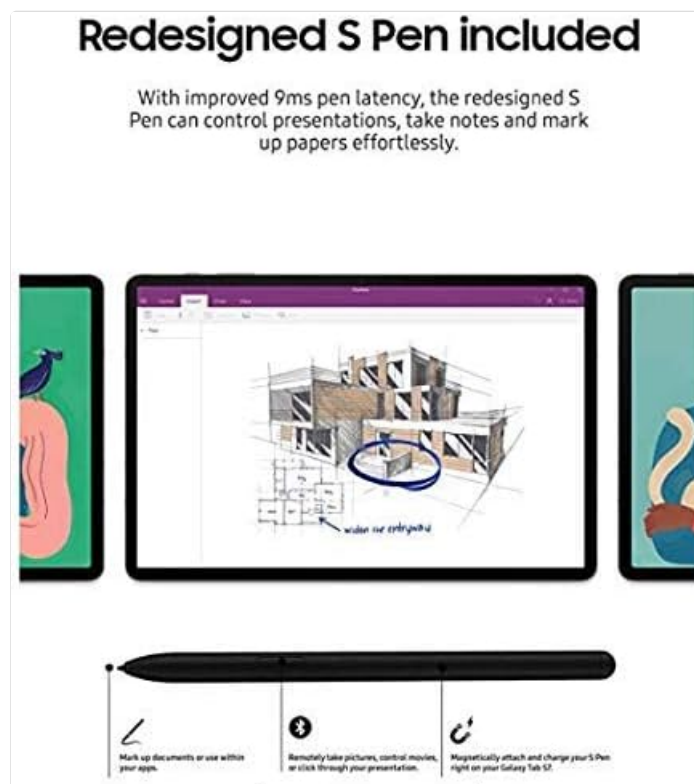


Image: The S Pen magnetically attached to the back of the Samsung Galaxy Tab S7.

2.3. Network Connectivity

This tablet supports 5G LTE/WiFi connectivity (AT&T Network Only). To set up cellular data, insert your AT&T SIM

card into the SIM tray. For Wi-Fi, navigate to Settings > Connections > Wi-Fi and select your desired network.

3. OPERATING INSTRUCTIONS

3.1. Navigating the Interface

The Galaxy Tab S7 runs on Android 10 with Samsung's One UI. Swipe down from the top of the screen to access the Quick Panel for settings and notifications. Swipe up from the bottom to access the app drawer. Utilize the S Pen for precise navigation and input.

3.2. Samsung DeX Mode

Transform your tablet into a PC-like experience with Samsung DeX. Access DeX mode from the Quick Panel or by connecting an external keyboard and mouse. DeX mode allows for a multi-window interface, enhancing productivity for tasks such as document editing and web browsing. The tablet supports video output to external monitors via a compatible USB-C to HDMI adapter.

Amazon Renewed conditions

All Amazon Renewed products are fully functional, and come with generic or original accessories and packaging.

Example body scratches and dents – not actual products

Excellent

Body: No cosmetic damage visible from 12" away
Screen: No scratches
Battery life: Greater than 80%

Good

Body: Light scratches
Screen: No scratches
Battery life: Greater than 80%

Acceptable

Body: Light scratches and dents
Screen: May have scratches, invisible when turned on
Battery life: Greater than 80%

Image: Samsung Galaxy Tab S7 connected to an external keyboard, demonstrating DeX mode for a PC-like experience.

3.3. S Pen Functionality

The redesigned S Pen offers improved 9ms latency for a natural writing and drawing experience. Use it to take notes, mark up documents, control presentations remotely, and navigate the tablet with precision. Air Actions allow for gesture controls without touching the screen.

3.4. Entertainment and Gaming

Experience cinematic viewing on the 11-inch display with a 120Hz refresh rate and quad speakers tuned by AKG with Dolby Atmos surround sound. The tablet's powerful processor supports smooth gaming. Connect a Bluetooth-enabled controller for an enhanced gaming experience.

Your browser does not support the video tag.

Video: A review of the Samsung Galaxy Tab S7, highlighting its features and performance. This video is provided by a Seller.

4. KEY FEATURES

- **5G Connectivity:** Supports AT&T Network for high-speed mobile data.
- **PC Performance with DeX Mode:** Transform your tablet into a PC experience with DeX mode and optional keyboard (sold separately).
- **Enhanced Entertainment:** 11-inch edge-to-edge display, sAMOLED™ screen, and quad speakers tuned by AKG with Dolby Atmos surround sound.
- **Redesigned S Pen:** Improved 9ms pen latency for precise control, note-taking, and document markup.
- **Gaming Optimization:** Immersive screen and Bluetooth-enabled controller support for console-like gaming (controller sold separately).
- **Fast Charging:** Supports 45W fast charging via USB-C port.
- **Expandable Storage:** Up to 512GB built-in memory, expandable up to 1TB with a microSD card (sold separately).

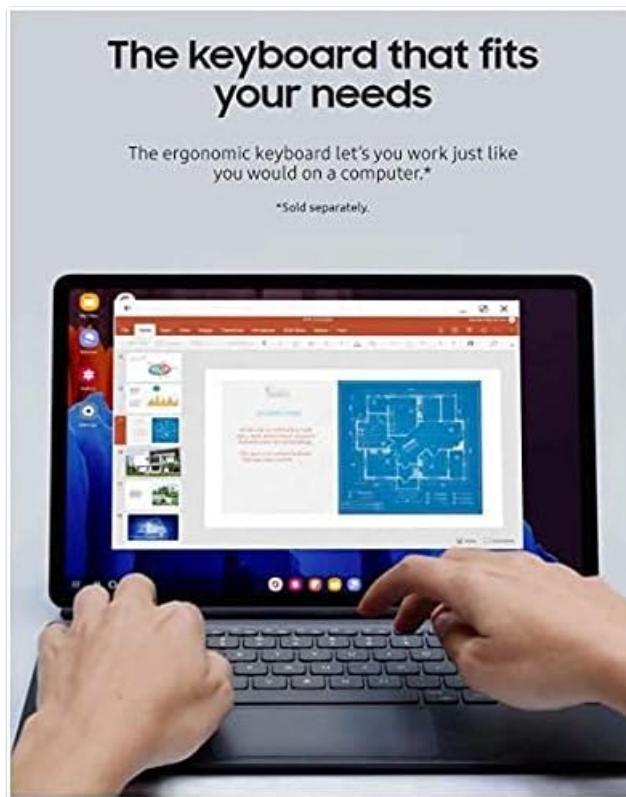


Image: The Samsung Galaxy Tab S7 charging via its USB-C port, highlighting its fast-charging capability and battery life.

5. SPECIFICATIONS

Feature	Detail
Brand	Samsung
Model Name	Tab S7
Model Number	SM-T878UZKAATT

Memory Storage Capacity	128 GB
RAM Size	6 GB
Screen Size	11 Inches
Display Resolution Maximum	2560 x 1600 Pixels
Display Type	AMOLED
Processor Speed	3.09 GHz
Processor Description	Qualcomm SDM865 Pro
Operating System	Android 10
Cellular Technology	5G (AT&T)
Rear Facing Camera	13 MP
Front Facing Camera	8 MP
Battery Average Life	15 Hours
Built-In Media	S Pen

6. MAINTENANCE

6.1. Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of your tablet. Avoid using abrasive cleaners or solvents that may damage the finish. For stubborn smudges, lightly dampen the cloth with water or a screen-safe cleaning solution.

6.2. Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Navigate to Settings > Software update > Download and install.

6.3. Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. For optimal performance, keep the battery charge between 20% and 80% when possible. Use the provided charger or a compatible 45W fast charger.

7. TROUBLESHOOTING

7.1. Device Not Powering On

- Ensure the battery is charged. Connect the tablet to its charger and wait a few minutes before attempting to power on again.
- Press and hold the Power button for at least 10 seconds to perform a forced restart.

7.2. S Pen Not Responding

- Ensure the S Pen is properly attached to the charging strip on the back of the tablet to ensure it is charged and paired.
- Restart the tablet.

7.3. Wi-Fi Connectivity Issues

- Restart your Wi-Fi router and the tablet.
- Forget the network in your tablet's Wi-Fi settings and reconnect.
- Ensure you are within range of the Wi-Fi signal.

8. WARRANTY AND SUPPORT

8.1. Product Warranty

This renewed product comes with a **90 days limited warranty**. Please refer to the warranty documentation provided with your purchase for specific terms and conditions.

8.2. Customer Support

For further assistance, technical support, or warranty claims, please contact Samsung customer service or the retailer from whom you purchased the renewed product. Keep your proof of purchase and model number (SM-T878UZKAATT) readily available.