

## **FLEXISPOT B0DV51XVB5**

# **FLEXISPOT L Shaped Standing Desk Instruction Manual**

Model: B0DV51XVB5

Brand: FLEXISPOT

## **1. INTRODUCTION**

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your FLEXISPOT L Shaped Standing Desk. Please read all instructions carefully before assembly and use to ensure safe and proper functionality. This electric height adjustable corner desk is designed to provide a versatile and ergonomic workstation for your home or office.



Figure 1: FLEXISPOT L Shaped Standing Desk (Black Frame + Black Top)

## **2. SAFETY INFORMATION**

Always follow assembly instructions for stability. Do not exceed the weight capacity of 220 lbs (100 kg) to ensure safety. Keep the desk on a stable surface and away from heat sources. Ensure all cables are properly managed to prevent tripping hazards and damage.

### **3. PACKAGE CONTENTS**

Your FLEXISPOT L Shaped Standing Desk package includes the following main components:

- Desk Frame (3-legged, black)
- Desktop (63x47 inches, black splice board)
- Control Panel
- Motor(s)
- Power Adapter
- Assembly Hardware (screws, bolts, tools)
- Instruction Manual

Note: The product ships in two separate packages which may arrive separately.

### **4. SETUP AND ASSEMBLY**

Follow these steps for proper assembly of your L-shaped standing desk. It is recommended to have two people for assembly due to the weight and size of the components.

#### **4.1 Unpacking and Preparation**

Carefully unpack all components and lay them out on a clean, soft surface (e.g., a rug or blanket) to prevent scratches. Verify all parts are present according to the packing list.



Figure 2: All components laid out for assembly.

## 4.2 Assembling the Frame

Begin by assembling the desk frame components. Ensure all connections are secure.

Video 1: Installation of Right L-shaped desk frame components.

Video 2: Installation of Left L-shaped desk frame components.

## 4.3 Attaching the Desktop

Once the frame is assembled, carefully place the desktop sections onto the frame. Ensure proper alignment before securing with screws.

# FLEXIBLE RIGHT/LEFT ORIENTATION

L-shaped standing desk can be left-sided or right-sided, allowing for even more flexibility



Figure 3: Flexible right/left orientation of the L-shaped desk.

## 4.4 Wiring and Final Touches

Connect the motor(s) and control panel to the power adapter. Secure all cables using the provided cable management accessories for a tidy and safe setup. Ensure all screws are tightened before turning the desk upright.

## 5. OPERATING INSTRUCTIONS

Your FLEXISPOT L Shaped Standing Desk features an intuitive control panel for easy height adjustments and memory presets.

### 5.1 Height Adjustment

Use the up (▲) and down (▼) buttons on the LED control panel to adjust the desk height to your desired sitting or standing position. The current height will be displayed on the LED screen.



Figure 4: Smart Control Panel for height adjustment and memory presets.

## 5.2 Memory Presets

The control panel allows you to save up to 4 different height settings. To set a memory position:

1. Adjust the desk to your desired height.
2. Press the 'M' button (or 'i' button depending on model) followed by the number (1, 2, 3, or 4) you wish to assign.
3. The height is now saved. To recall a saved height, simply press the corresponding number button.

## 5.3 Anti-Collision Feature

The desk is equipped with an anti-collision system. If the desk encounters an obstacle while moving up or down, it will automatically stop and reverse slightly to prevent damage.

# ANTI-COLLISION

Rebound immediately

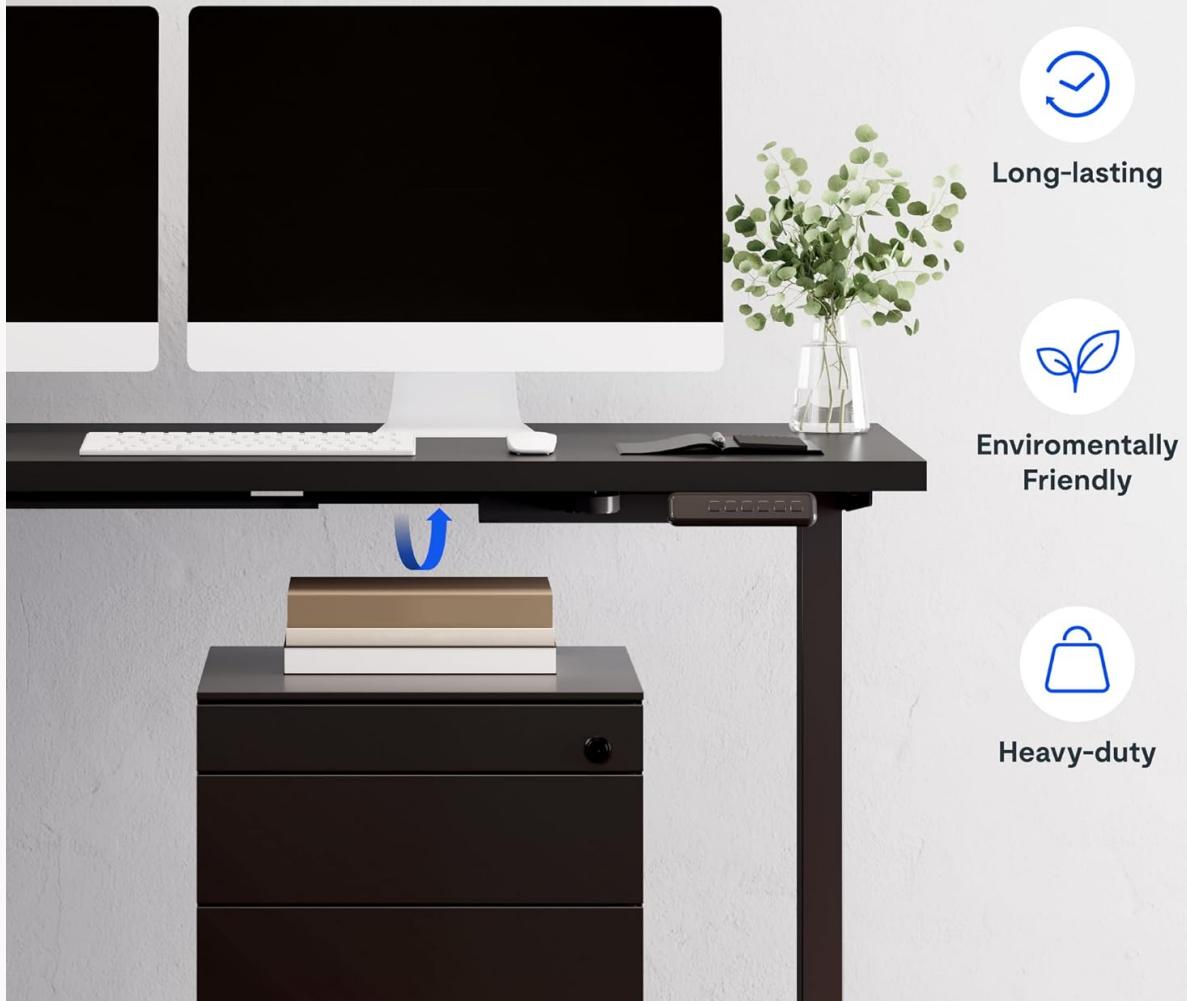


Figure 5: Anti-collision system in action.

Video 3: Demonstration of the 3-legged L-shaped standing desk features, including height adjustment and stability.

## 6. MAINTENANCE

To ensure the longevity and optimal performance of your desk, follow these maintenance guidelines:

- Regularly wipe the desktop with a soft, damp cloth. Avoid harsh chemicals.
- Check all screws and bolts periodically to ensure they are tight.
- Keep the desk free from excessive dust and debris.
- Do not overload the desk beyond its maximum weight capacity.

## 7. TROUBLESHOOTING

If you encounter any issues with your desk, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Desk not moving	Power cable disconnected; Overload; Motor error	Check power connection; Reduce weight on desk; Unplug for 30 seconds and plug back in

Problem	Possible Cause	Solution
Uneven movement	Uneven load; Loose connections	Distribute weight evenly; Tighten all screws
Noise during operation	Loose parts; Obstruction	Check for loose screws; Remove any obstructions

## 8. SPECIFICATIONS

Feature	Specification
Brand	FLEXISPOT
Product Dimensions	47.2"D x 63"W x 45.9"H
Color	Black Frame + Black Top
Maximum Height	45.9 Inches
Minimum Height	28 Inches
Maximum Weight Recommendation	220 Pounds
Tabletop Thickness	1 Inches
Base Material	Alloy Steel
Top Material Type	Wood
Included Components	Desk, Keyboard Tray, Monitor Arm

## 9. WARRANTY AND SUPPORT

Enjoy peace of mind with our 5-year coverage on the desk frame and motor, and 2-year protection on the control panel and electronics. For further support or warranty claims, please contact FlexiSpot customer service.