

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY GCBLTV02BDBIR Replacement Remote Control User Manual

ALLIMITY GCBLTV02BDBIR

ALLIMITY GCBLTV02BDBIR Replacement Remote Control User Manual

Model: GCBLTV02BDBIR

1. INTRODUCTION

This manual provides instructions for the ALLIMITY GCBLTV02BDBIR Replacement Remote Control. This remote is designed to function as a direct replacement for various TV models, offering full functionality without the need for complex programming.



Figure 1: Front view of the ALLIMITY GCBLTV02BDBIR Replacement Remote Control.

2. COMPATIBLE MODELS

The ALLIMITY GCBLTV02BDBIR remote control is compatible with the following television models:

- Saba, Kunft, United, Ok.
- ODL32770H-TAB, ODL32950HC-TAB, ODL 32950HC-TAB, ODL 32770H-TAB
- SA24S46A9, SA40S67A9
- LED32HS72A9, LED42HS72A9, LED24HS72A9, LED32HS82A11
- ODL24770H-TAB
- K5417H32H, K5419H43U, K5418H40F, K5416H24H, K8149H50U

This remote is designed to cover all functions of the original remote controls for these models.

3. SETUP

3.1 Battery Installation

The remote control requires two AAA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2: Angled view of the remote control, showing button layout.

3.2 Initial Use

No programming is required for this replacement remote control. Once batteries are correctly installed, the remote is ready for immediate use with compatible television models.

4. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your television. Ensure there are no obstructions between the remote and the TV.

4.1 Basic Functions

- **Power Button ():** Turns the television on or off.
- **Number Buttons (0-9):** Selects channels directly.
- **Volume Up/Down (+/-):** Adjusts the volume level.
- **Channel Up/Down (P ▲/P ▼):** Changes channels sequentially.
- **Mute Button ():** Mutes or unmutes the television sound.
- **Navigation Pad (▲ ▼ ◀ ▶ and OK):** Navigates through menus and confirms selections.

4.2 Smart TV and Special Functions

This remote includes dedicated buttons for common Smart TV applications and other features:

- **Netflix Button:** Direct access to the Netflix application.
- **YouTube Button:** Direct access to the YouTube application.
- **Prime Video Button:** Direct access to the Amazon Prime Video application.
- **Google Play Button:** Direct access to the Google Play Store.
- **Home Button (🏠):** Returns to the main menu or home screen.
- **Back Button (←):** Returns to the previous screen or menu.
- **Info Button:** Displays program information.
- **EPG Button:** Accesses the Electronic Program Guide.
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons perform specific functions depending on the current TV menu or application. Refer to your TV's on-screen prompts for their specific use.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote control to extreme temperatures, direct sunlight, high humidity, or liquids.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the TV's infrared receiver.
 - Ensure you are within the effective operating range (up to 10 meters) and pointing the remote directly at the TV.
- **Certain buttons not working:**
 - Verify that your TV model is listed in the "Compatible Models" section. While this remote is a replacement,

some specific advanced functions might vary slightly depending on the original TV's capabilities.

- Clean the remote control, especially around the buttons, to ensure no debris is interfering with button presses.
- **Intermittent operation:**
 - This could indicate low battery power. Replace the batteries.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.

7. SPECIFICATIONS

Model:	GCBLTV02BDBIR
Brand:	ALLIMITY
Connectivity Technology:	Infrared (IR)
Power Source:	2 x AAA Alkaline Batteries (not included)
Number of Buttons:	25
Maximum Range:	10 meters
Product Dimensions:	4 x 12 x 0.3 cm
Product Weight:	50 g

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer or manufacturer's official website where the product was purchased. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question